



Technical Quick Guides

Uniview Setup Intrusion and other VCA via UNV Link Pro


Open the **UNV Link Pro App**

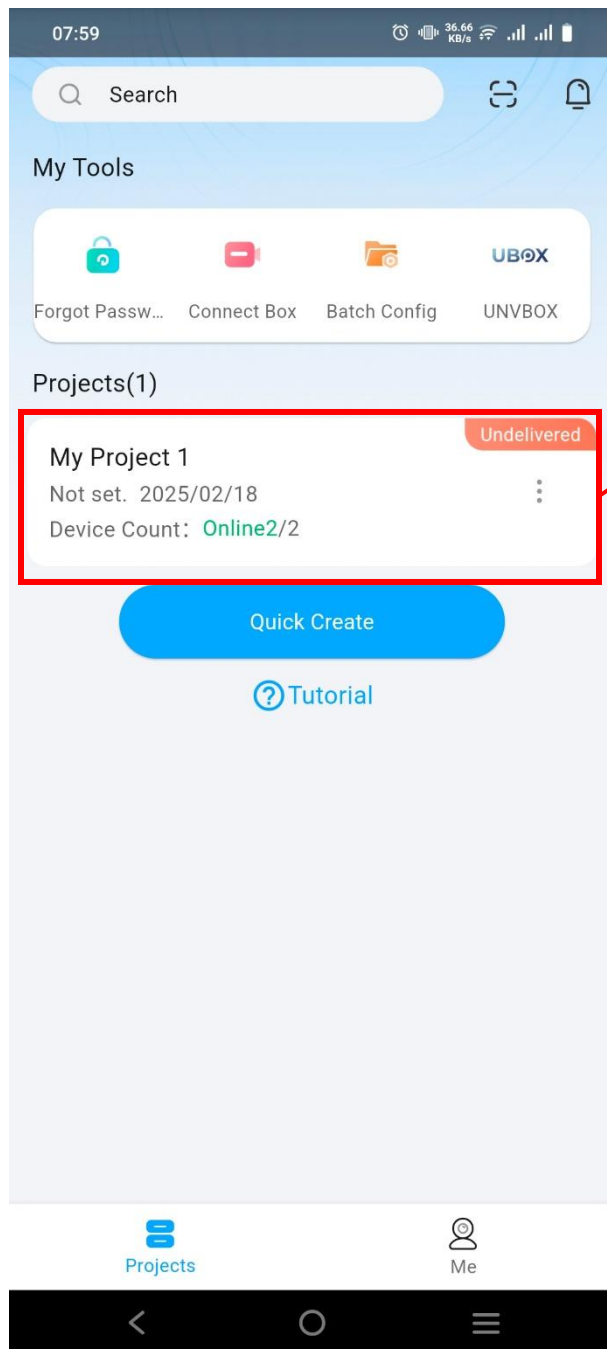


Select **Device**

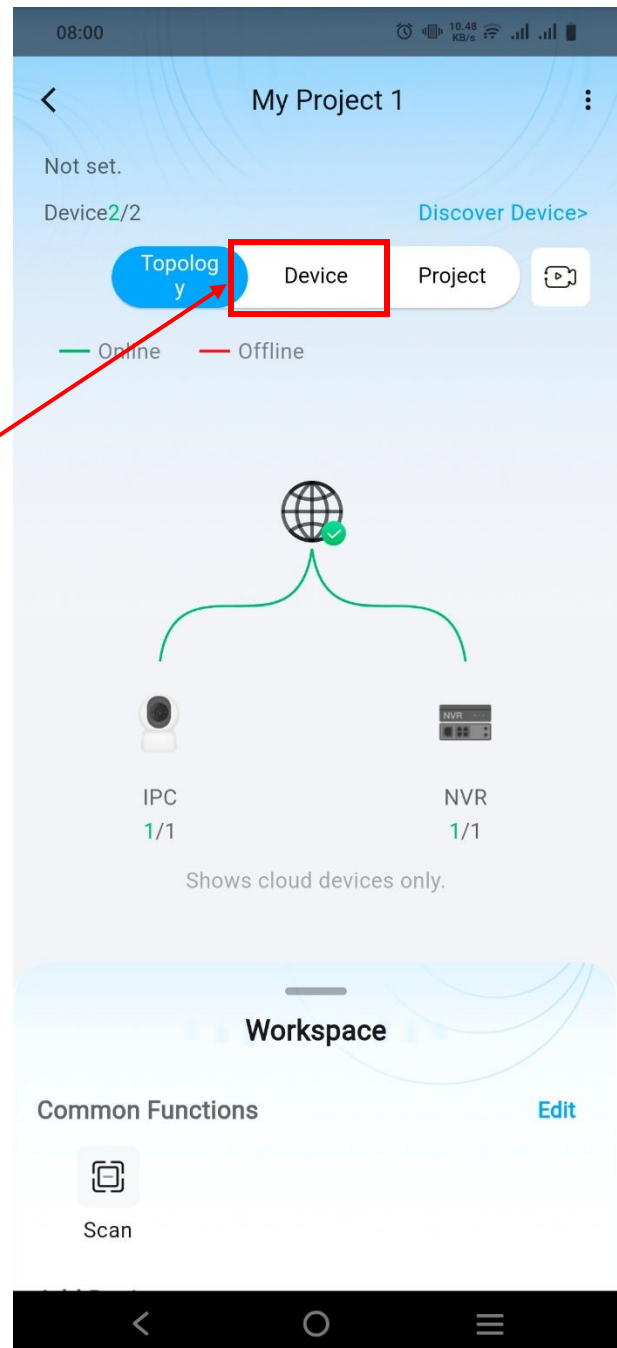


Click **All Device(s)**

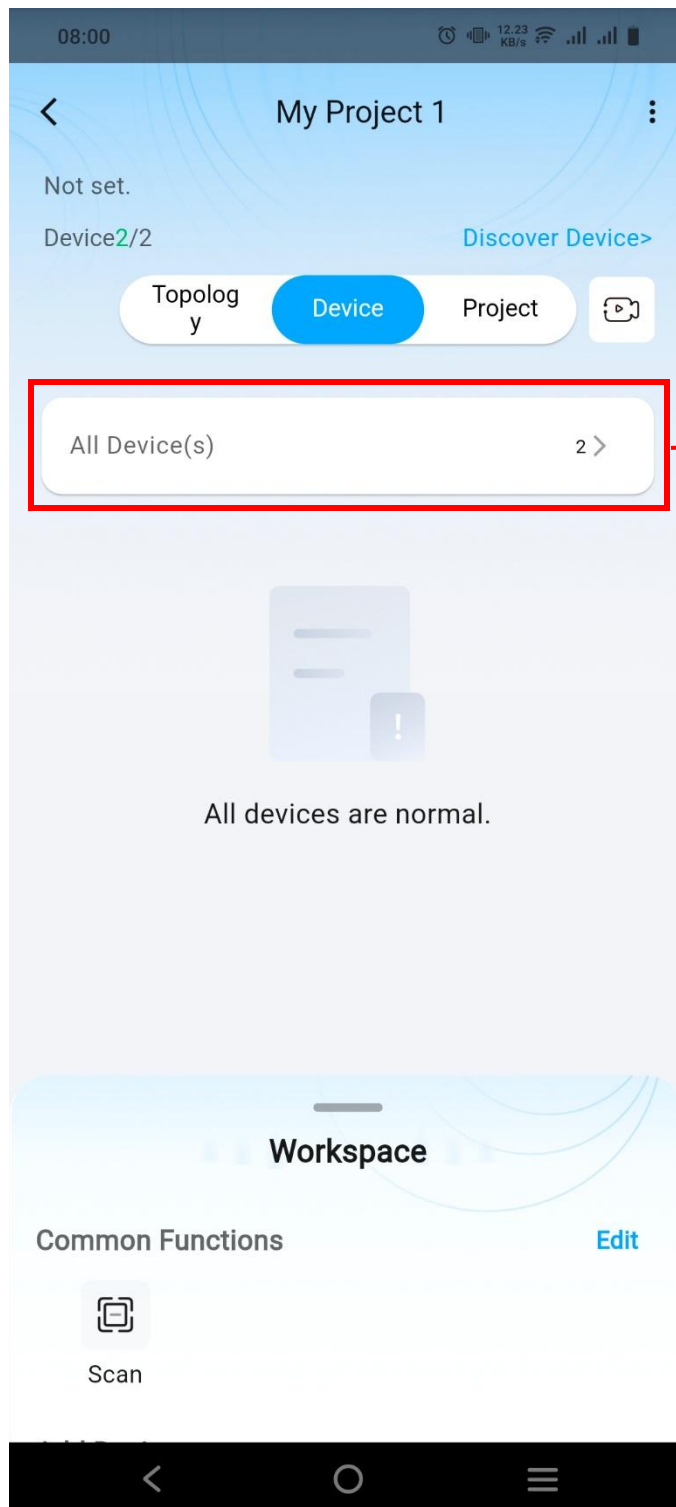


Click the 3 dots at the device you want to access

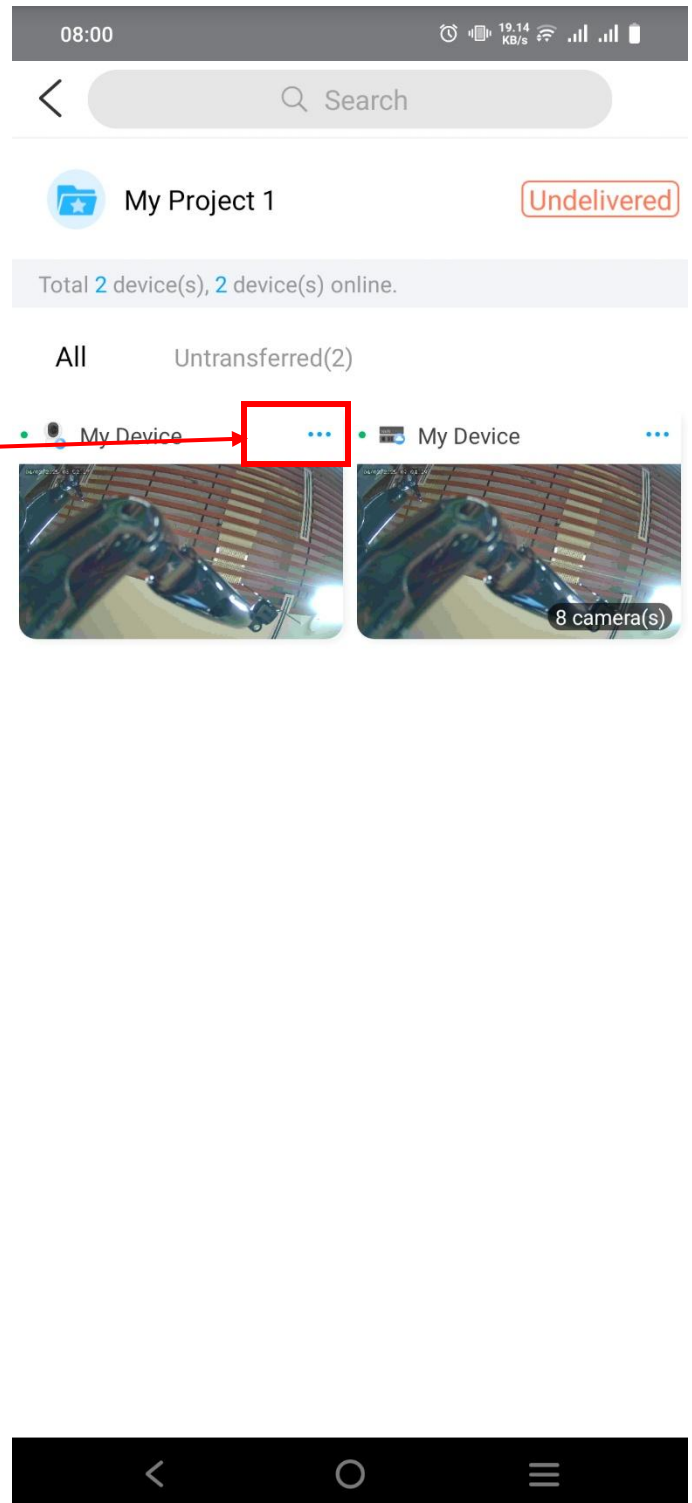


Click **Device Config**

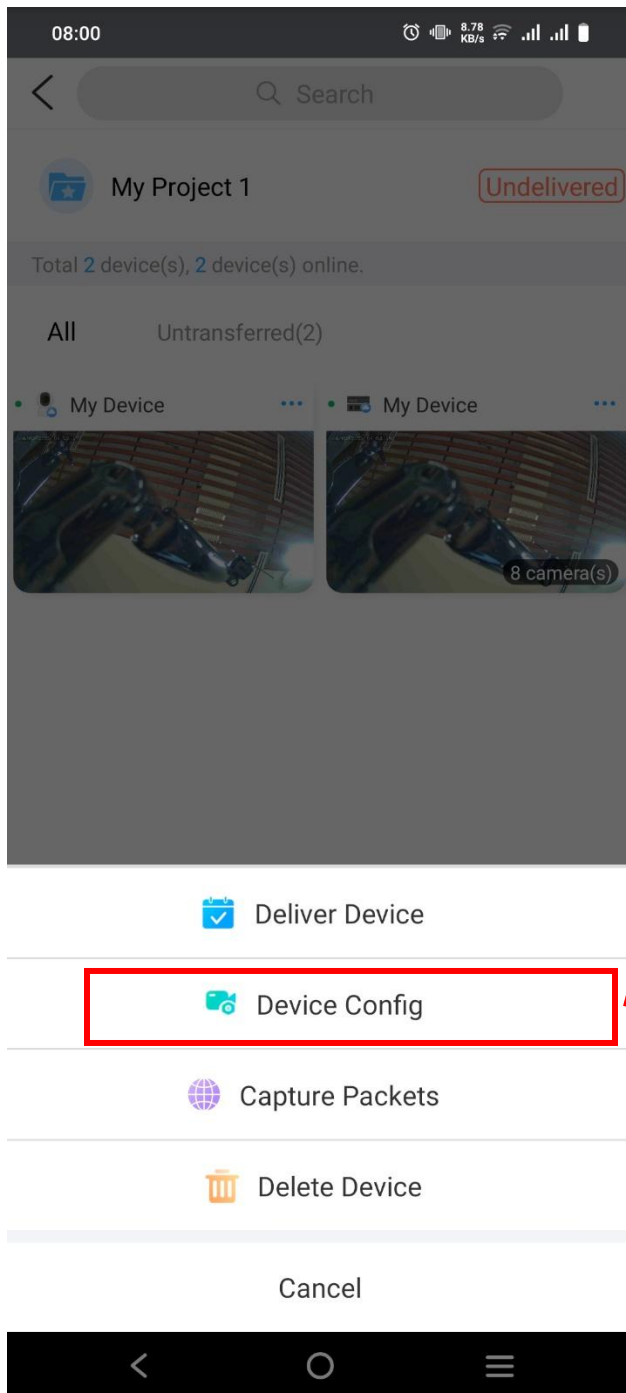


Select **Alarm Detection**

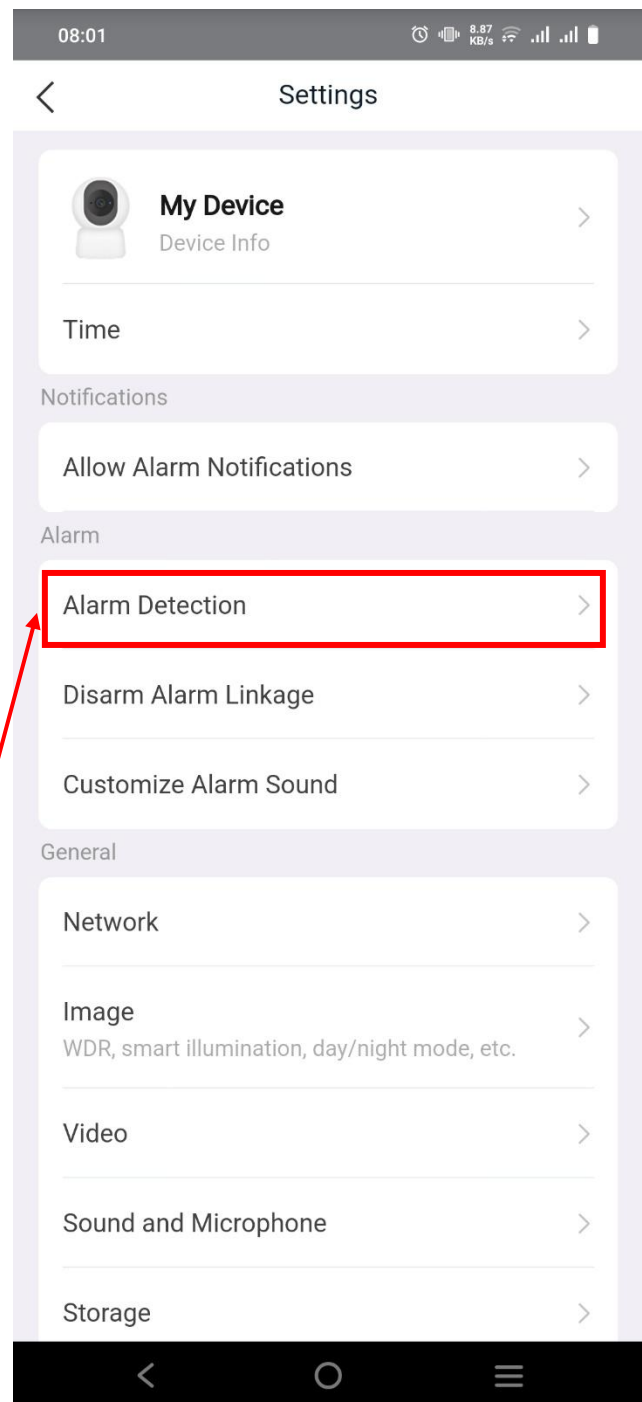


Select the Type of Alarm Detection you want to setup, for this we will setup Intrusion

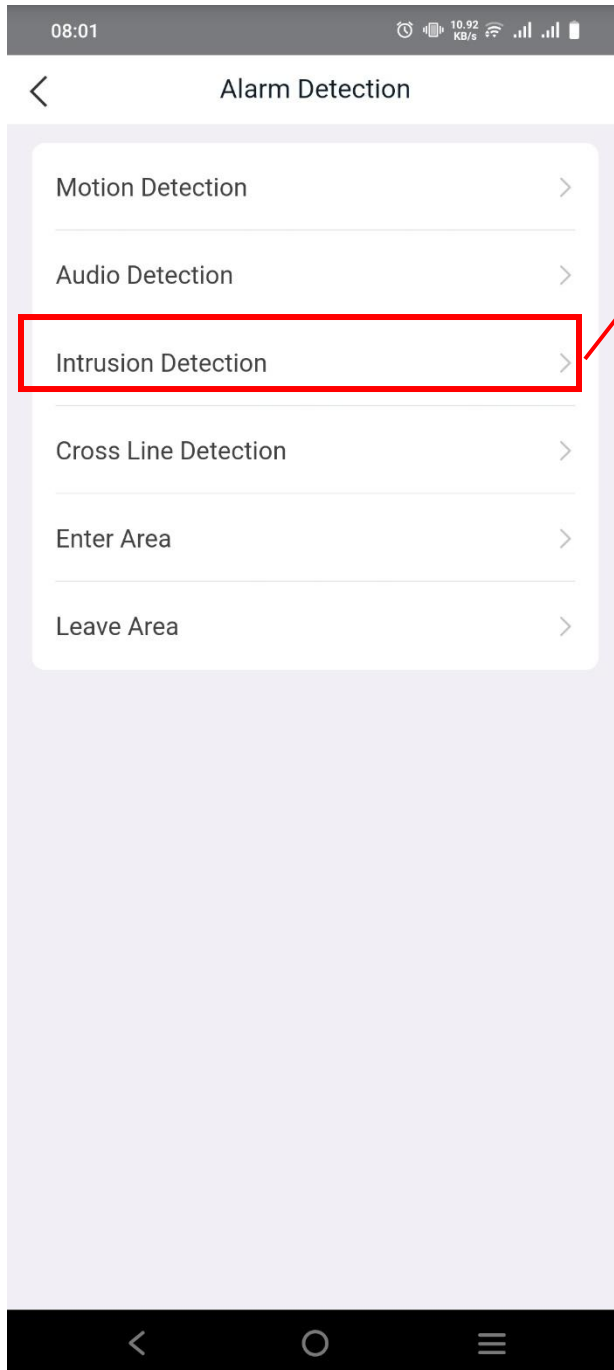

Enable the **Intrusion Detection**

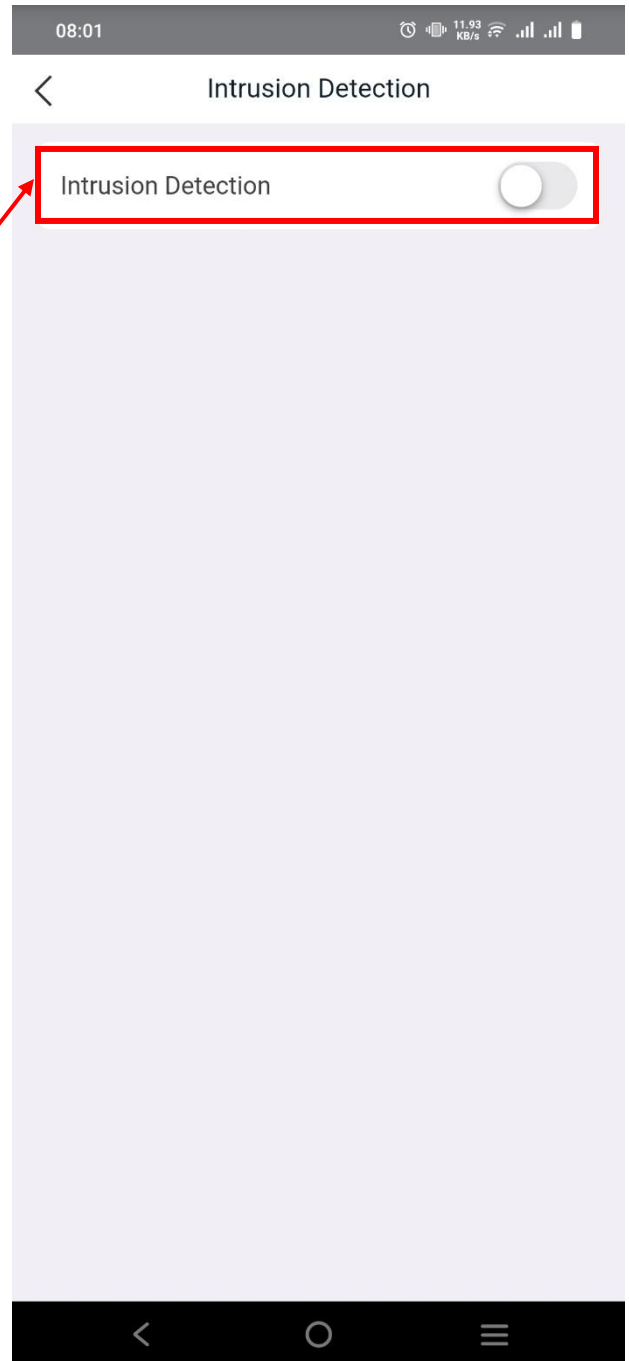

Once enabled, you can setup the parameters, as well as the **Detection Area**

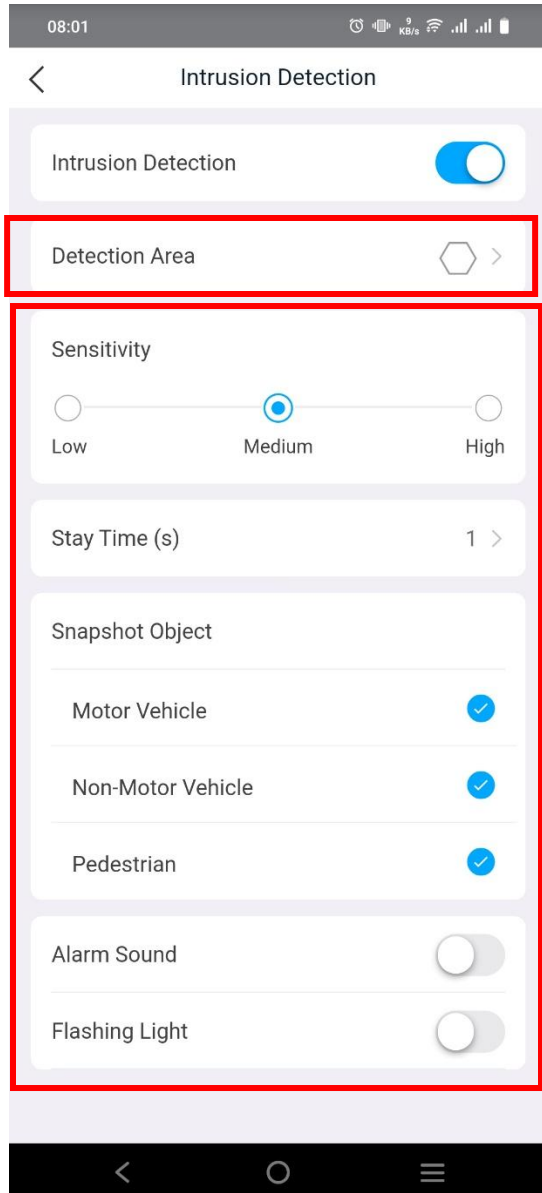

Adjust the detection area base on your requirements

