



Technical Quick Guides

How to Unbind an NVR


Open a web browser and navigate to the NVR's IP address. Input the username and password for the NVR, then click "Login."

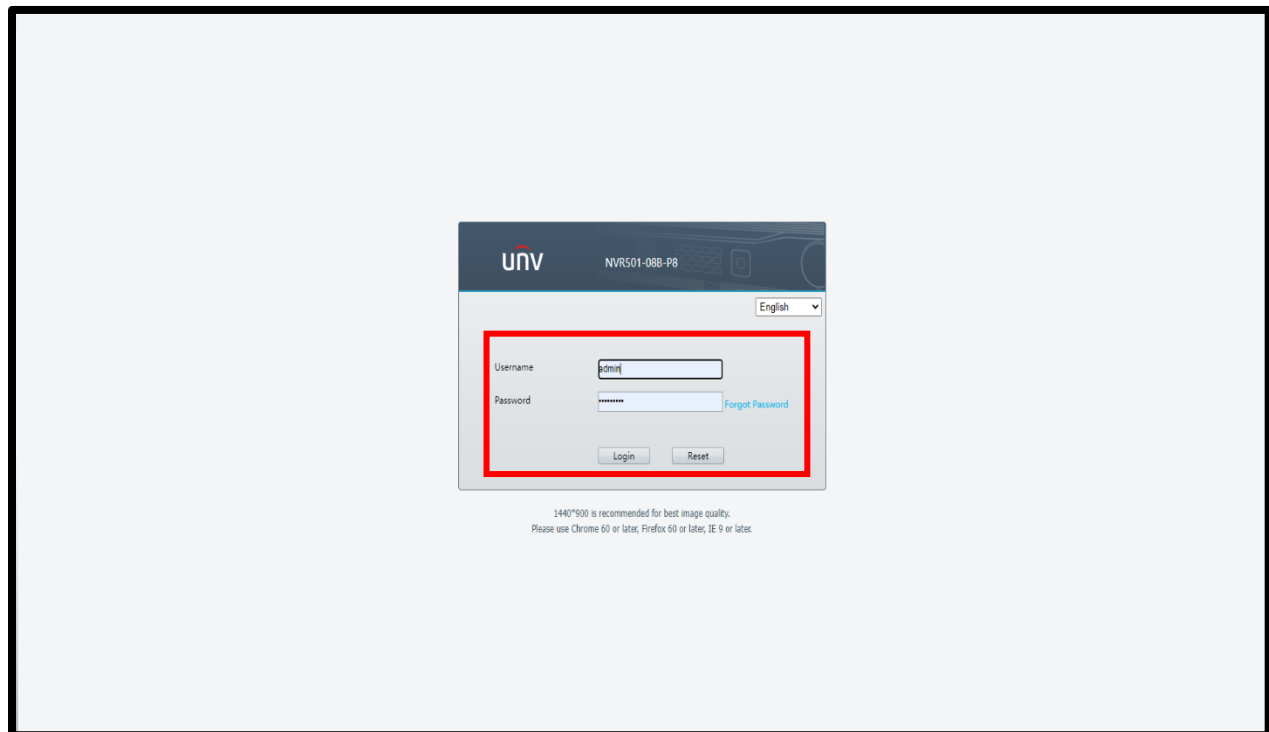

After logging in at the top of the screen, select the "Setup" tab.

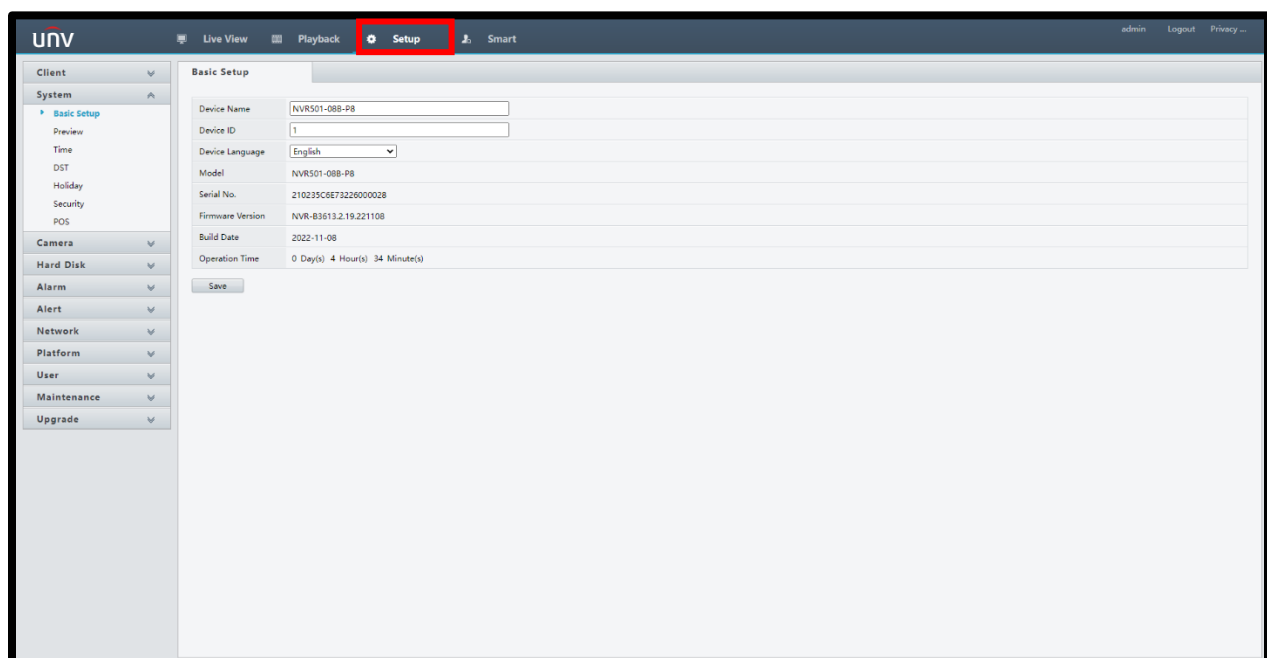

On the left-hand side, click on the network tab. From the drop-down "Network" tab, select "EZCloud."

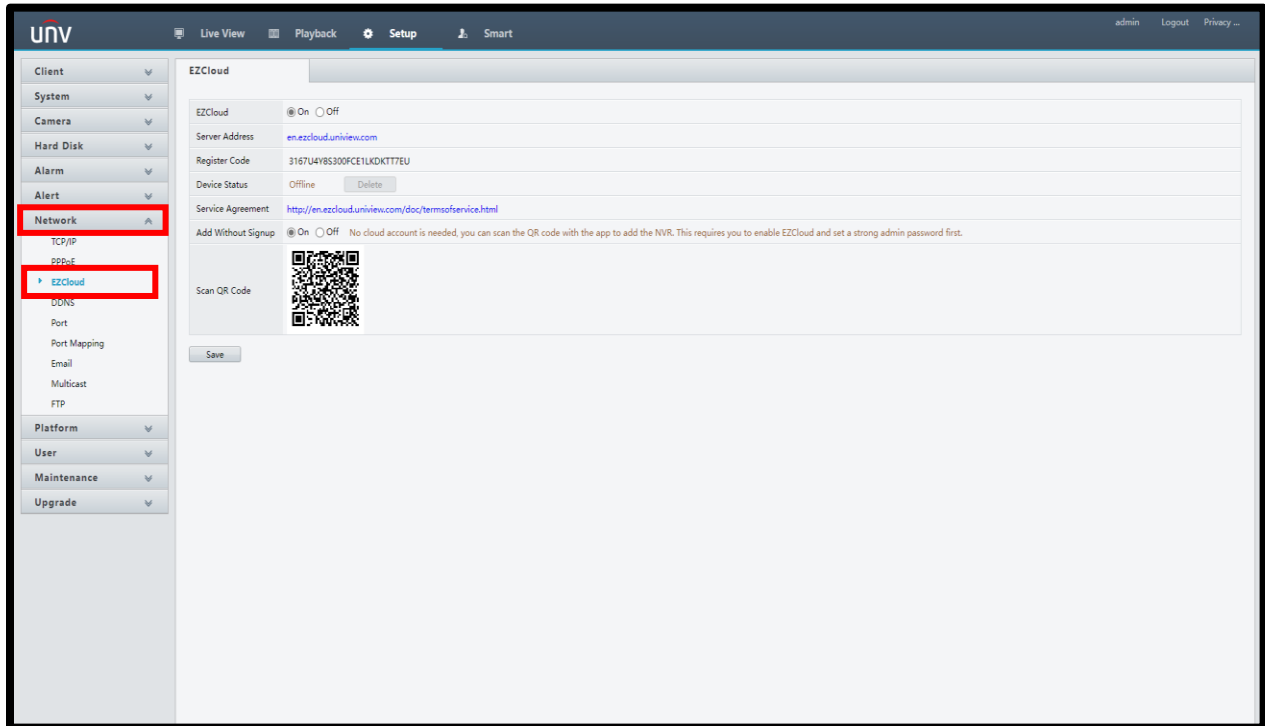

In the settings, in the "Device Status" section, click the "Delete" button.

A pop-up box will appear saying "Log out of the device." Select "Ok" to confirm the unbinding of the NVR.

