



## Technical Quick Guides

### How to Setup PTZ Preset and Auto-tracking on NVR


Login first on the NVR

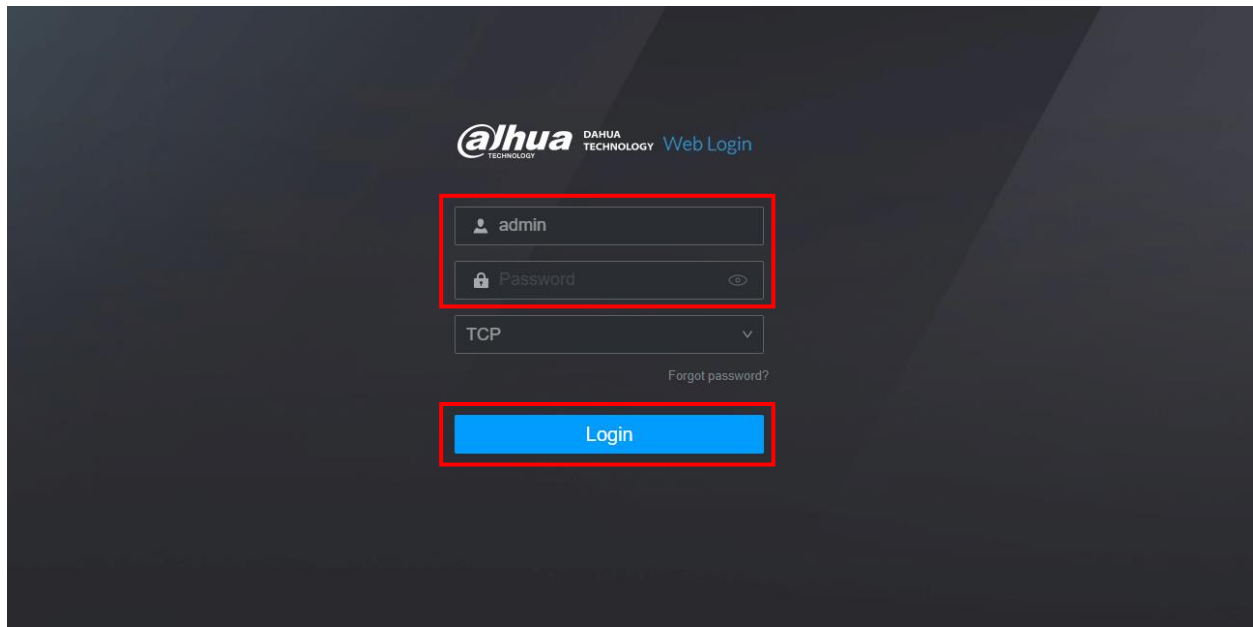

Click the Live view tab

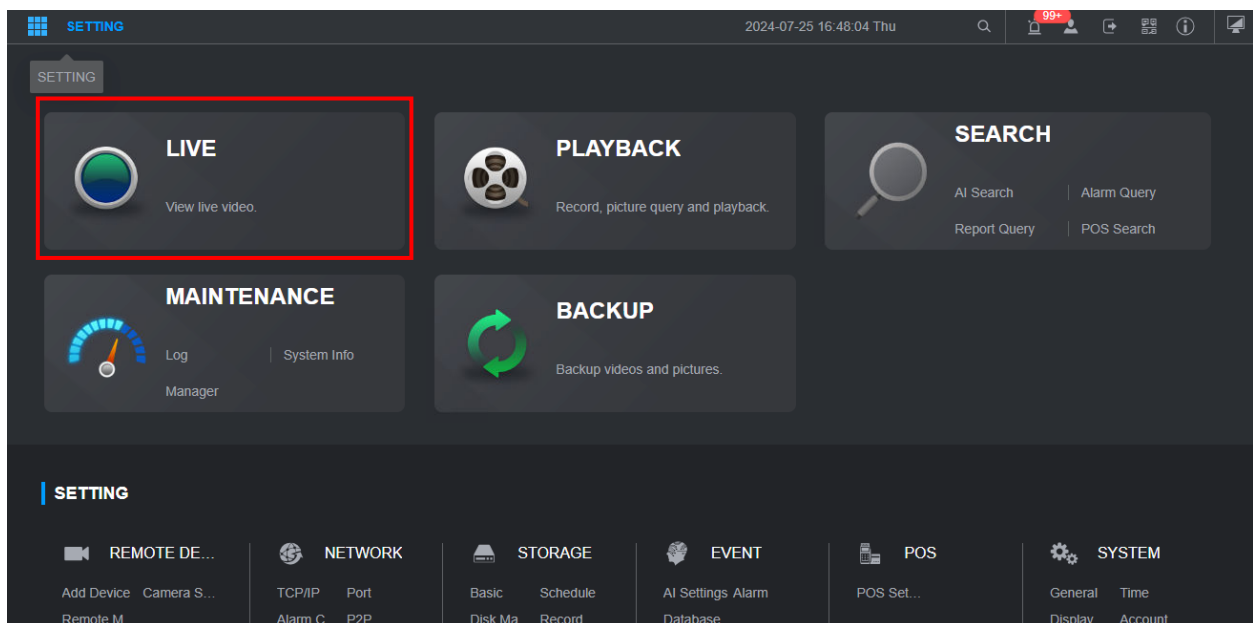


**Under the live view tab click the ptz channel**

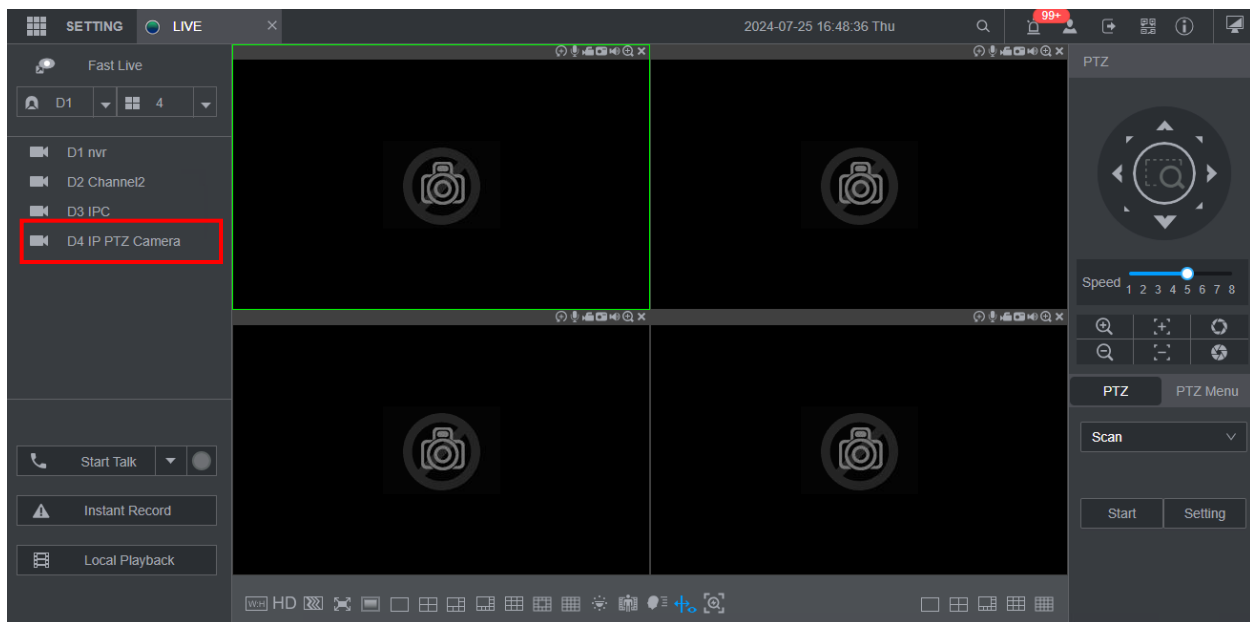


**On the Live view, position the camera on the view you want for the preset use the navigation control of PTZ to move the camera base on your preference, enter the preset number and click Add button,**




After clicking the Add button it will show on the live view the preset number you set

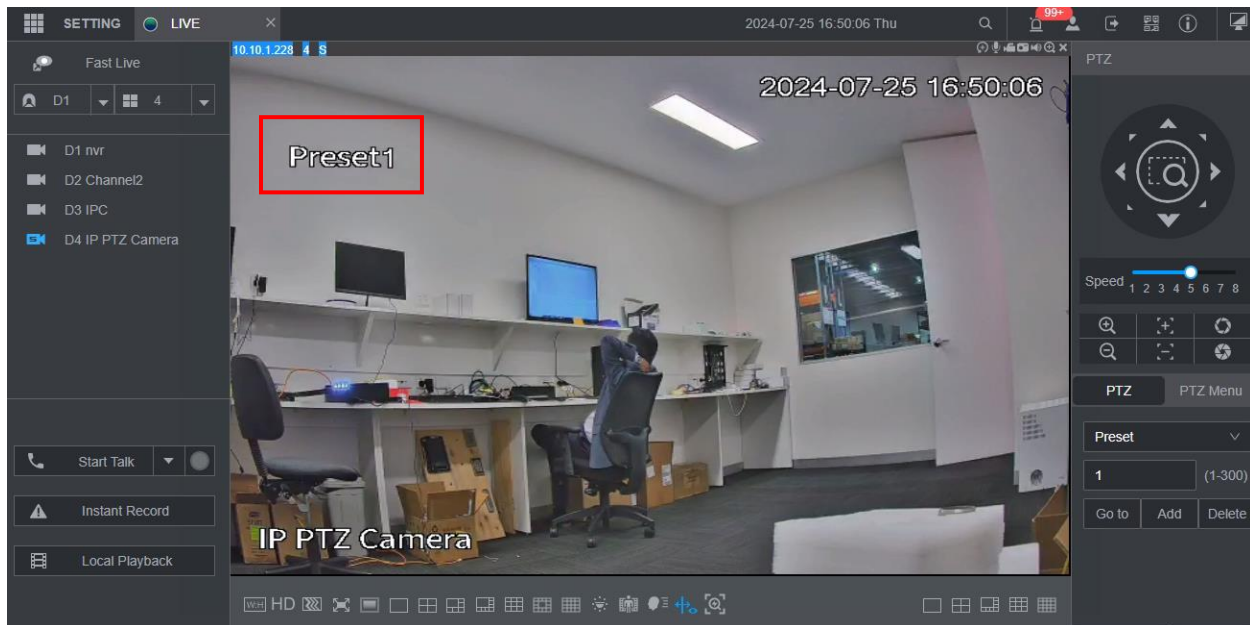


You can create another preset by follow the steps on the above and label it with preset number 2

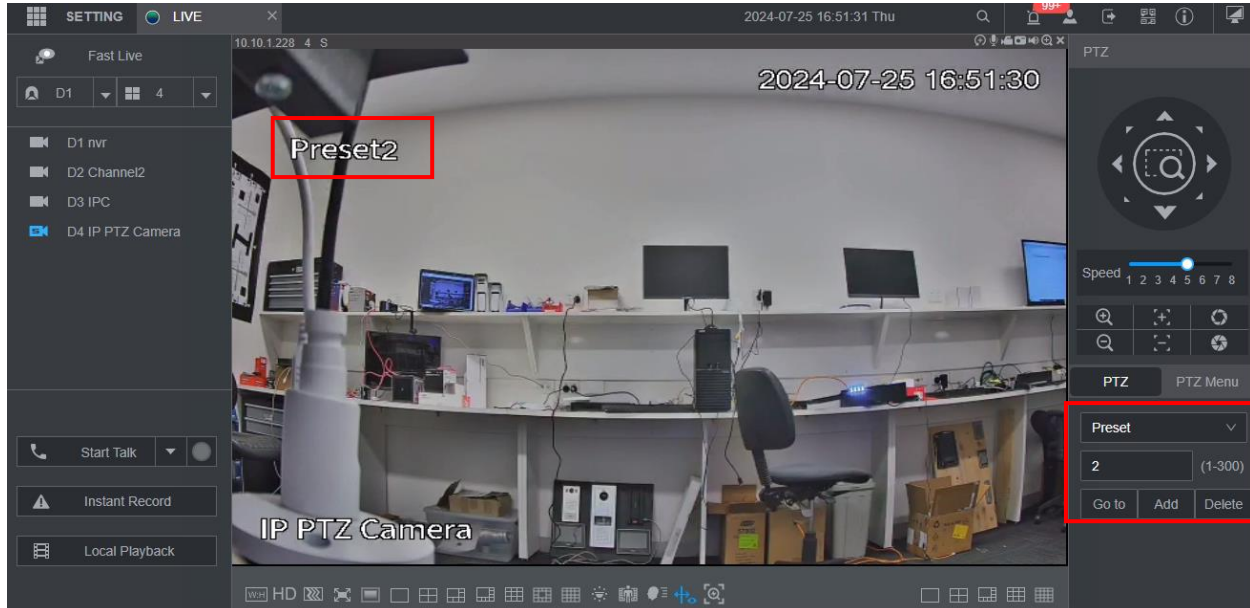


After successfully creating a preset, go back to the dashboard and click AI Settings

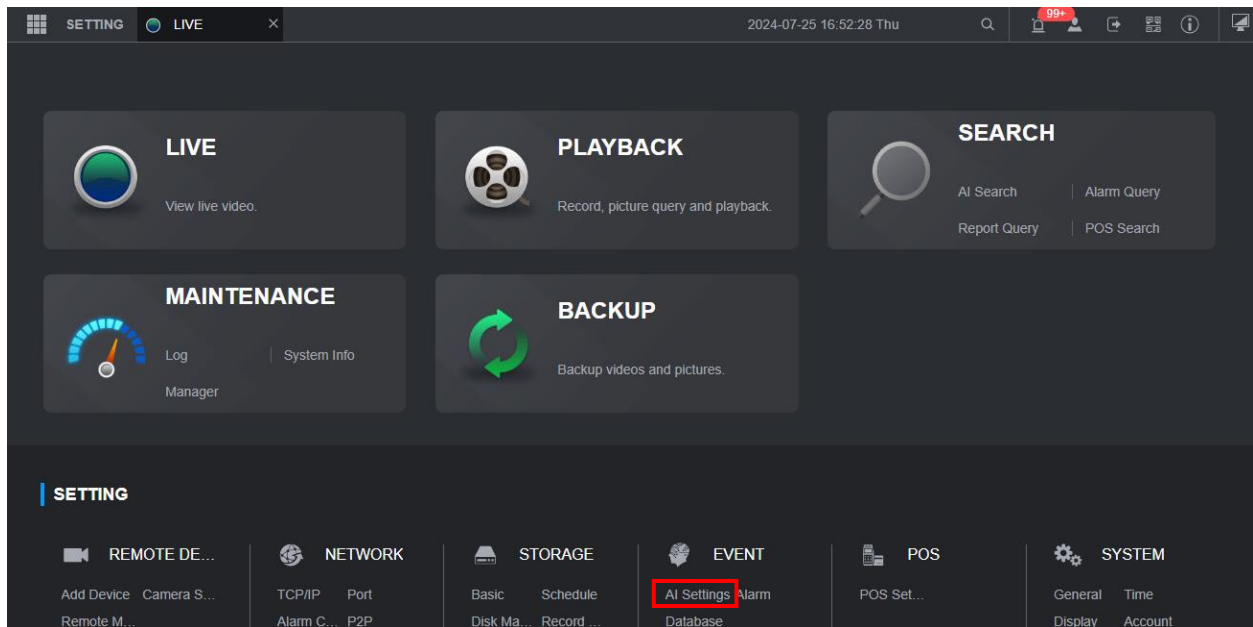


Under the AI settings select Smart Plan and select the channel of the PTZ

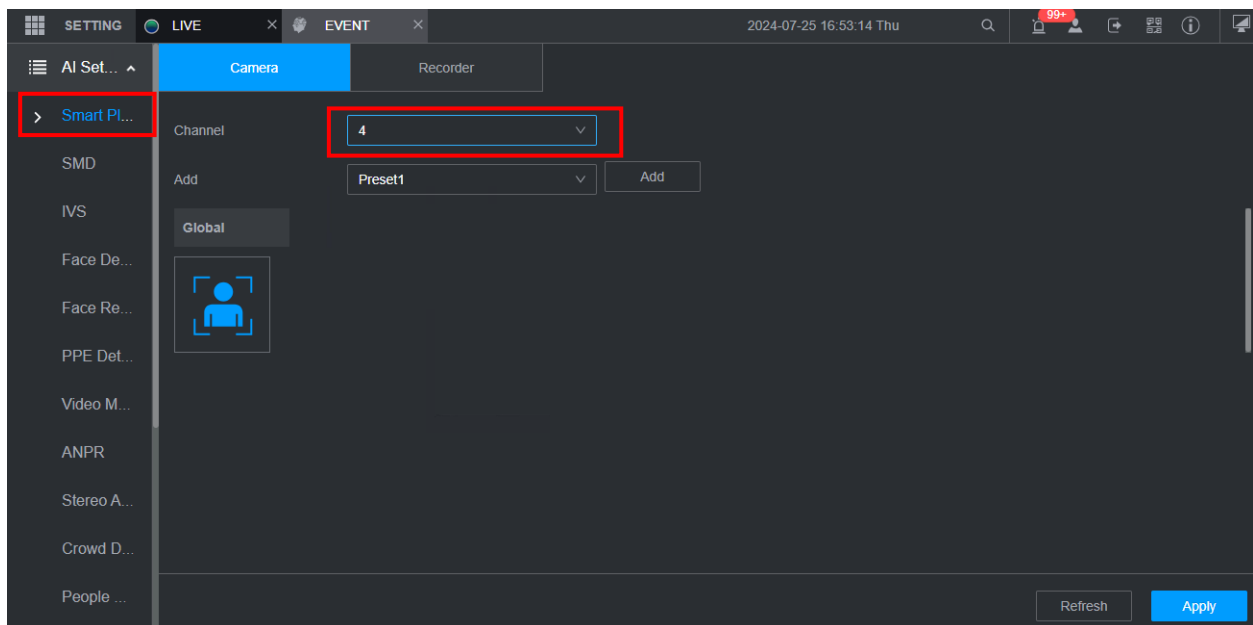


**On the Add section select the preset you want to setup the IVS then click Add button and enable the IVS function**

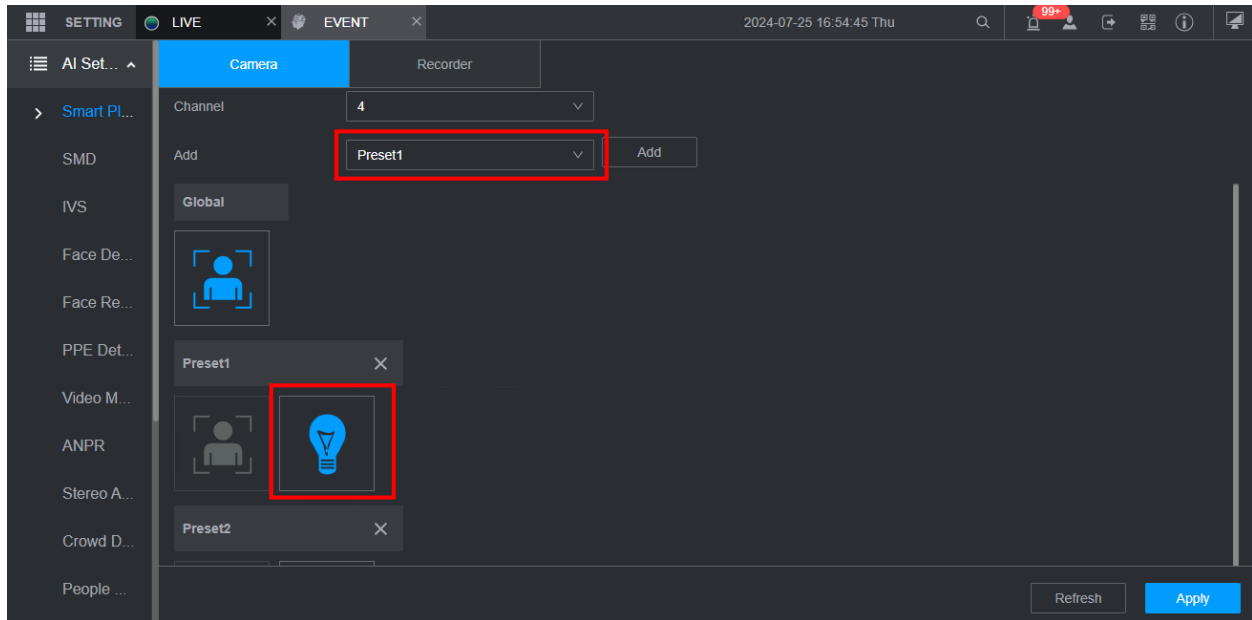


**Add both preset if you want, depending on your settings then click apply.**

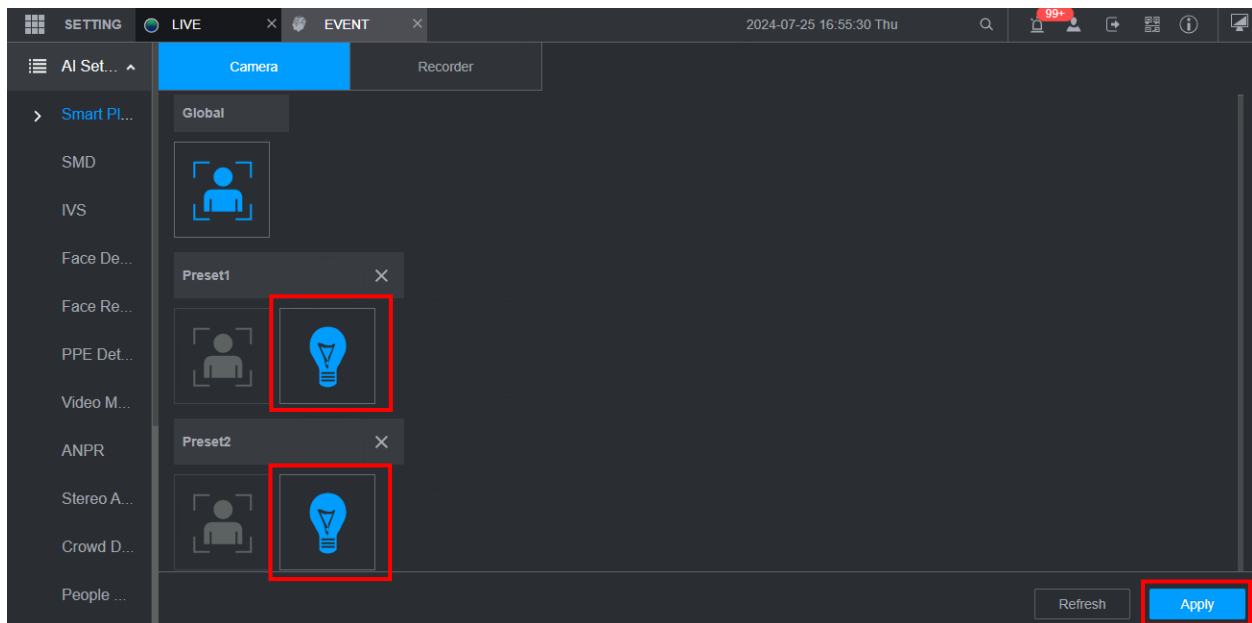

On the Ai settings click the IVS tab select the channel of the ptz

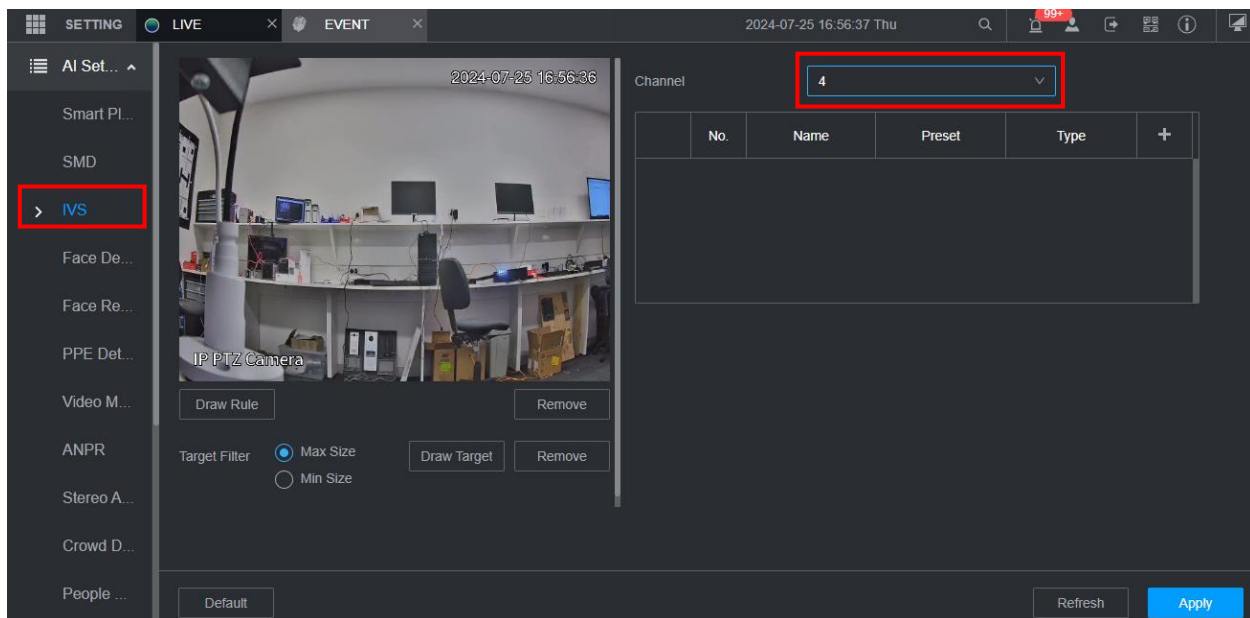


Click the Add icon and add the rule and select the preset you want to setup and draw the rule of the IVS.

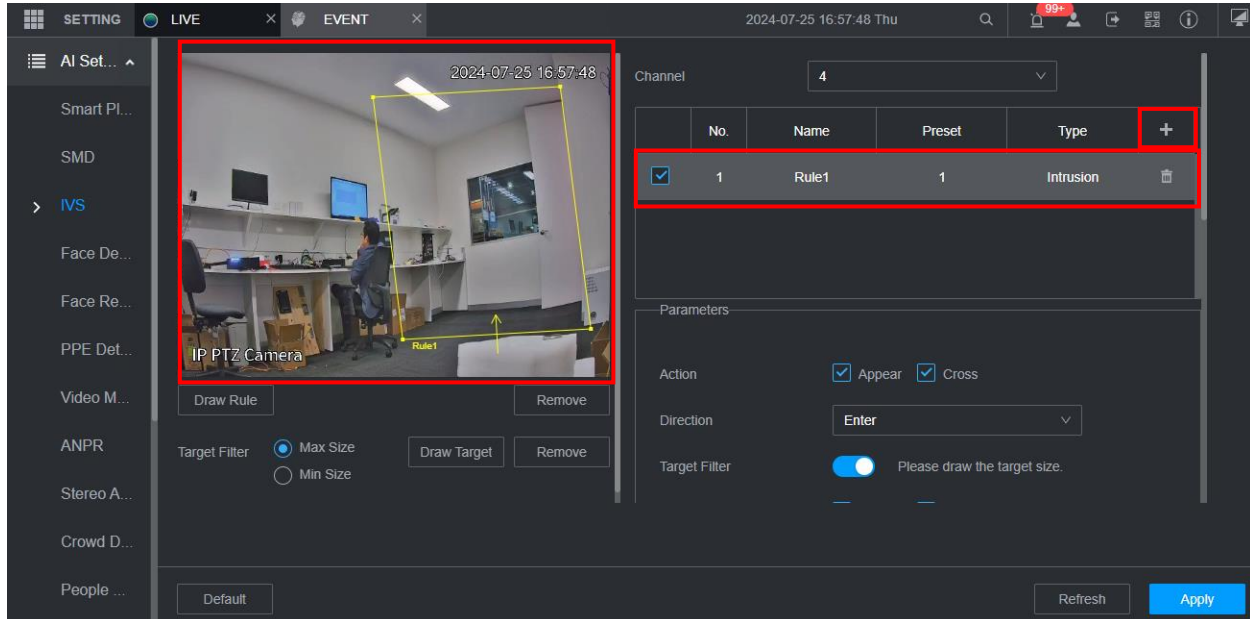





**Setup other settings and enable the tracking duration and input the number of seconds you want to track the target.**

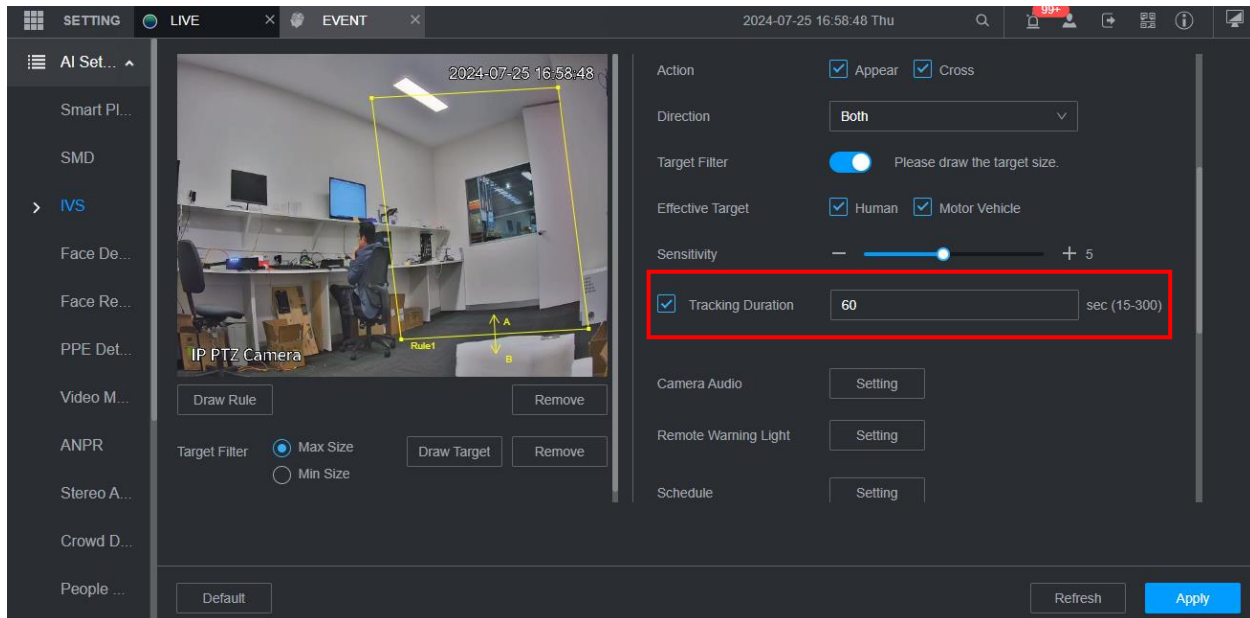

**Create another rule for the other preset and select the preset number and draw the rule base on your preference.**

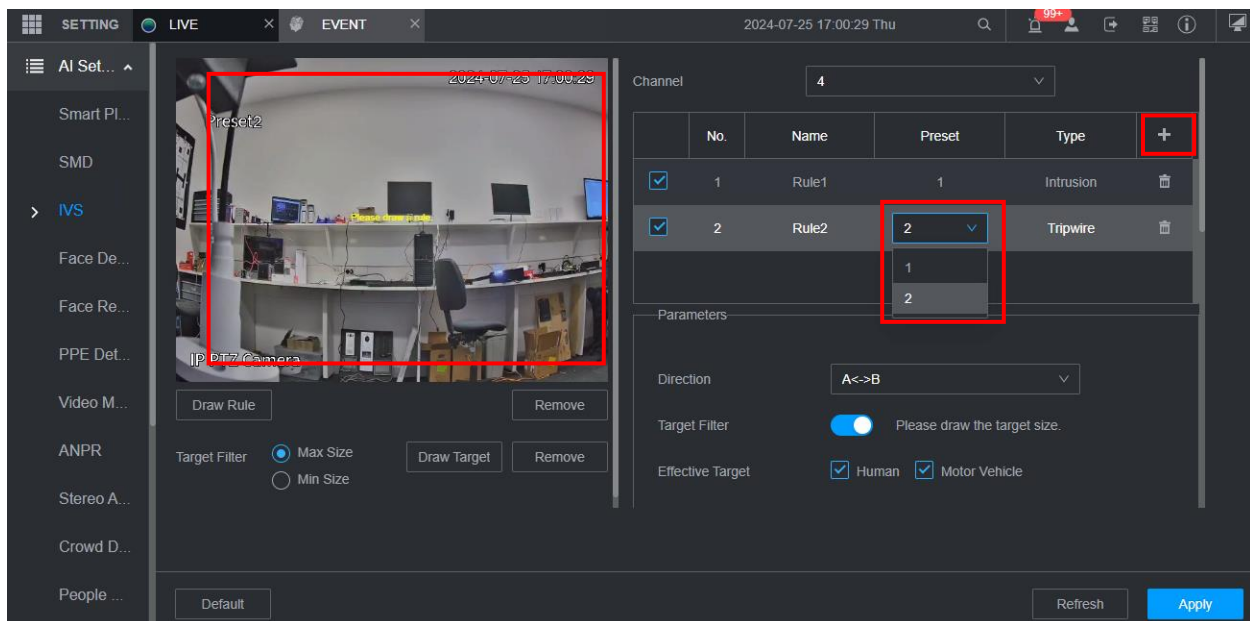

**Enable the tracking duration and input the number of seconds you want to track the target and click Apply.**

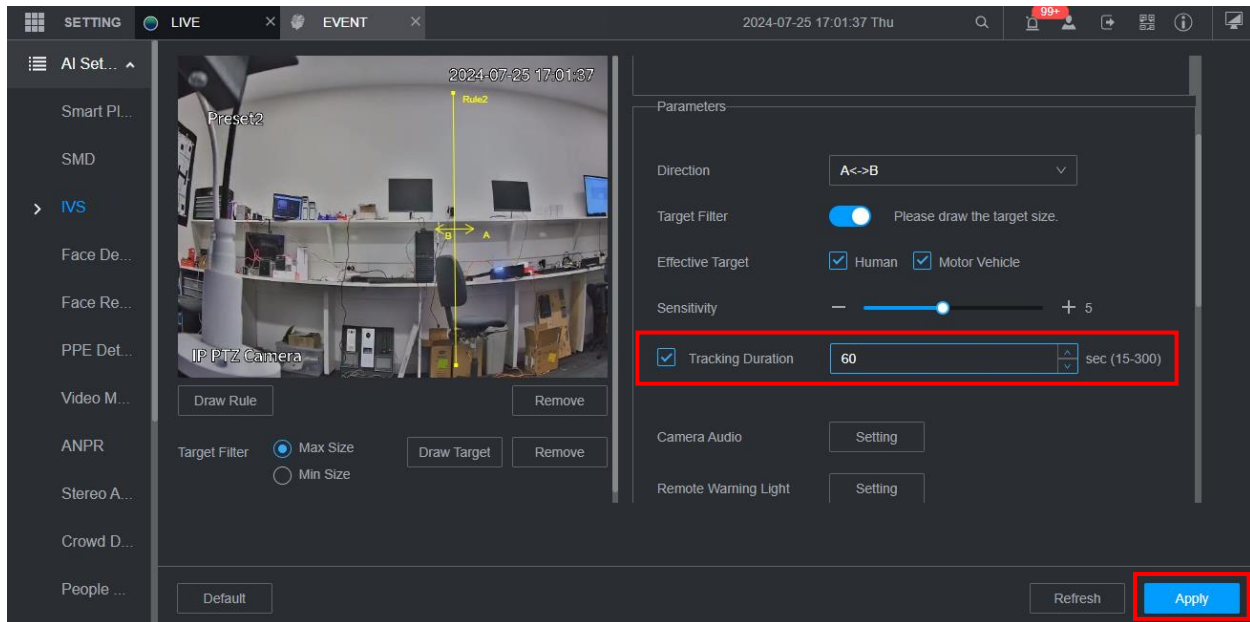

**Adjust other settings you want if needed then test the PTZ if it is working on auto tracking.**