



Technical Quick Guides

How to change TIOC Camera Speaker and Microphone Volume


First Log in to Camera web interface.

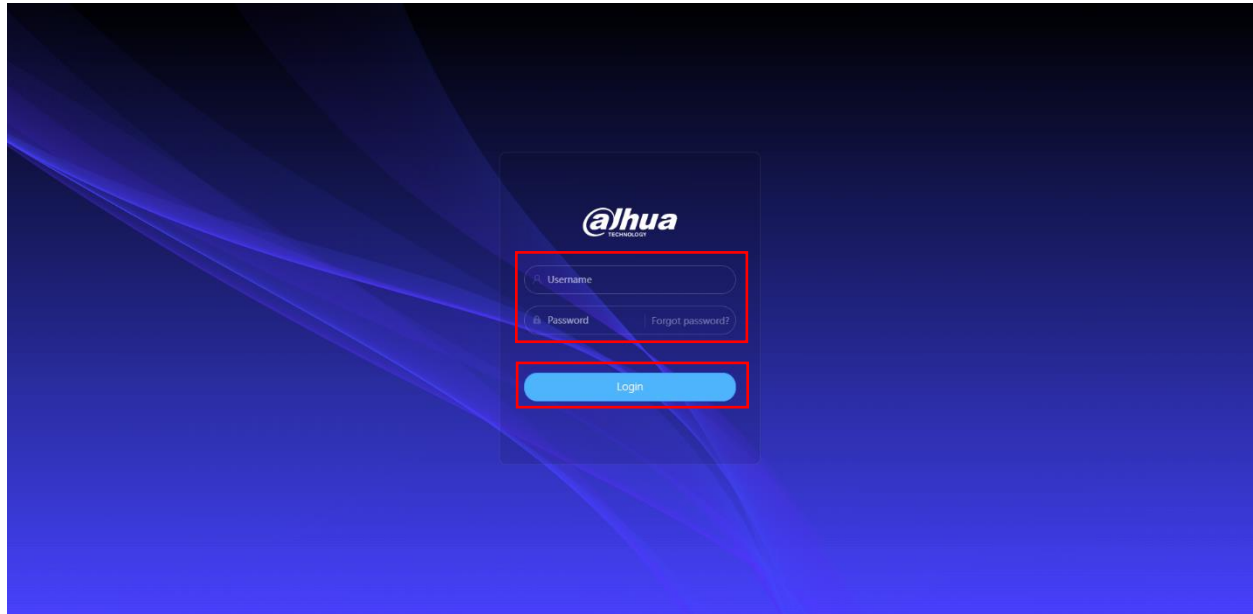


At the upper right click the Home Icon

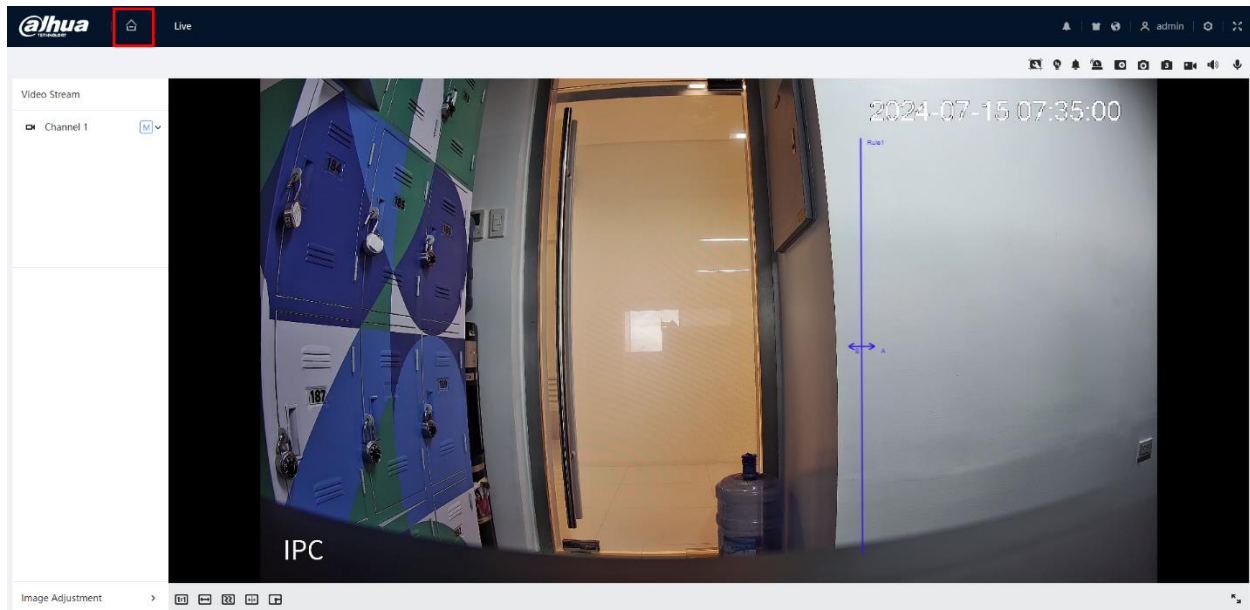


At the Home tab select Camera

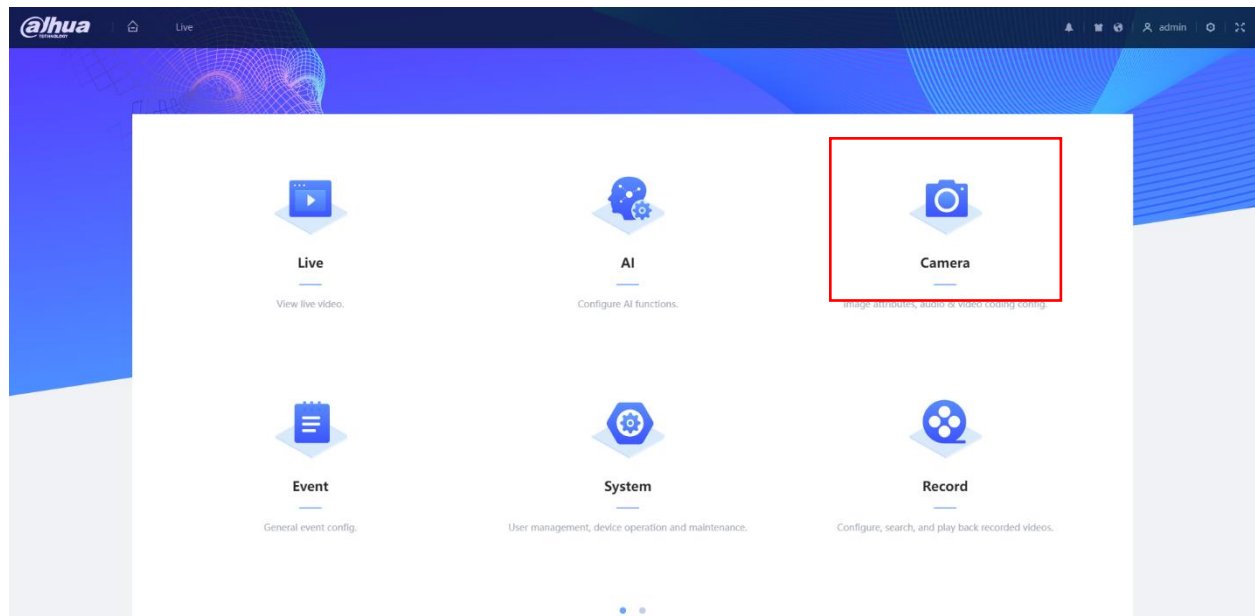

At the camera tab, click the Audio section

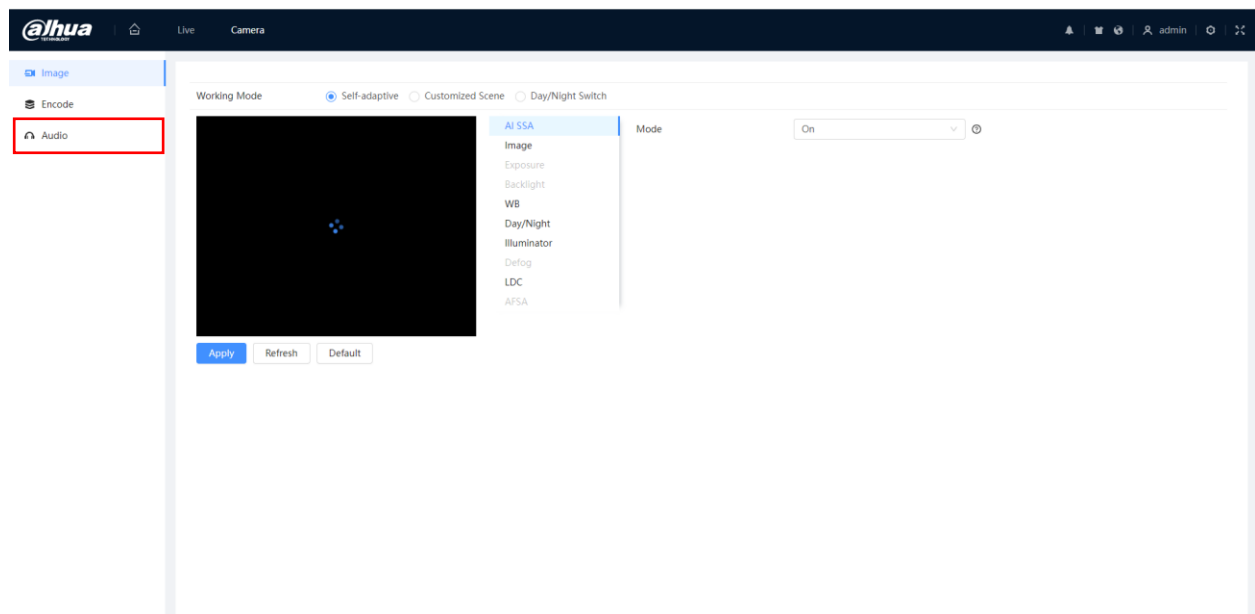

On Audio Tab you can Adjust the Microphone and Speaker volume based on your preference.

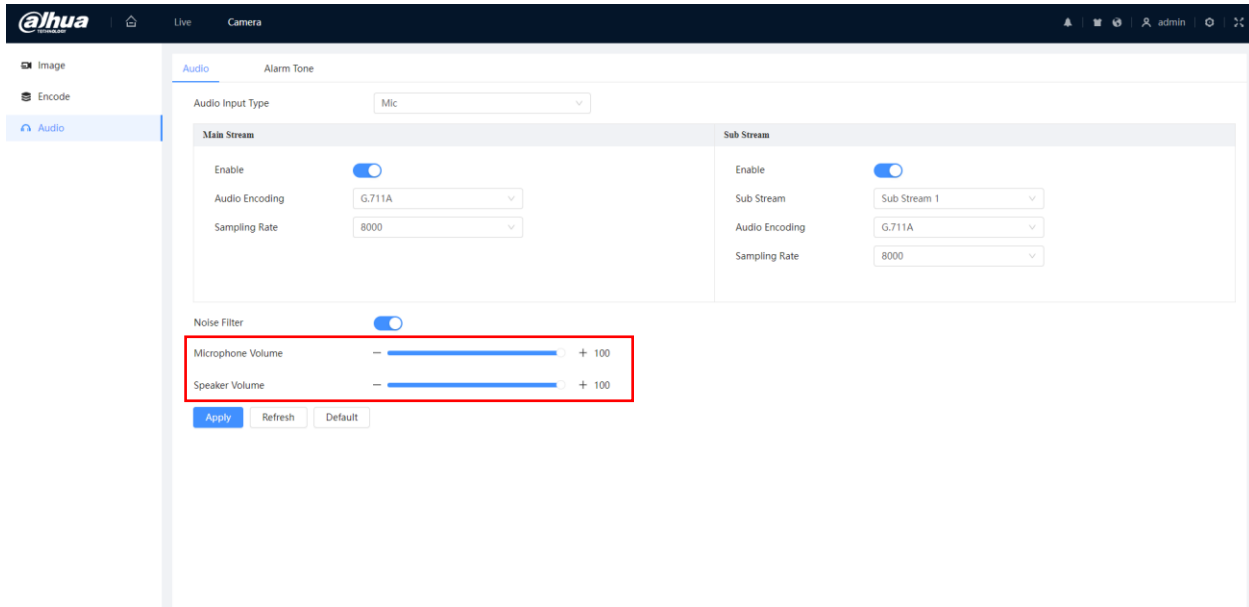

The screenshot displays the Dahua camera web interface, specifically the 'Audio' configuration tab. The interface is divided into several sections:

- Audio Input Type:** A dropdown menu set to 'Mic'.
- Main Stream:**
 - Enable:** A toggle switch that is turned on.
 - Audio Encoding:** A dropdown menu set to 'G.711A'.
 - Sampling Rate:** A dropdown menu set to '8000'.
- Sub Stream:**
 - Enable:** A toggle switch that is turned on.
 - Sub Stream:** A dropdown menu set to 'Sub Stream 1'.
 - Audio Encoding:** A dropdown menu set to 'G.711A'.
 - Sampling Rate:** A dropdown menu set to '8000'.
- Noise Filter:** A toggle switch that is turned on.
- Microphone Volume:** A slider control with a red box highlighting the label and the slider bar. The slider is positioned at the maximum value, indicated by a '+' sign and the number '100'.
- Speaker Volume:** A slider control with a red box highlighting the label and the slider bar. The slider is positioned at the maximum value, indicated by a '+' sign and the number '100'.

At the bottom of the interface, there are three buttons: 'Apply', 'Refresh', and 'Default'.