

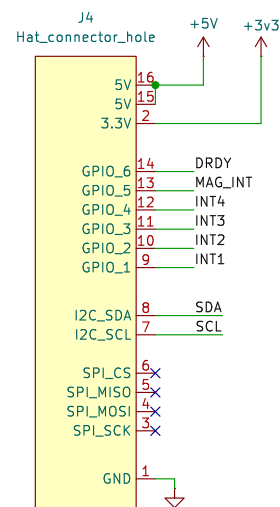



HAT Connectors

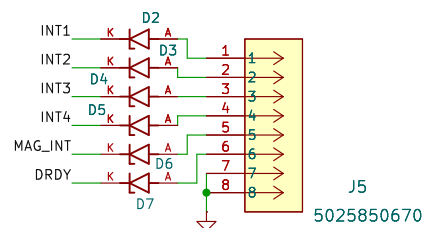

CAN and INT/GPIO Headers

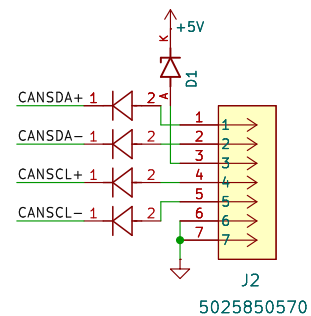


Additional connectors (Delocalizing)

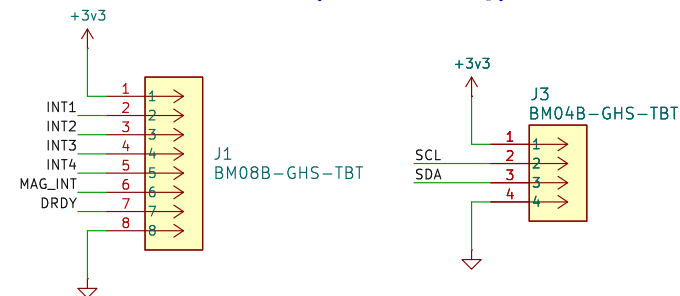


BM08B might appear redundant because 502585470 has same labels but it is used to bring the interrupt signals to the IMU while this one delocalizes them if needed

LT3960 I2C – CAN


Switch should be turned on for Master Mode

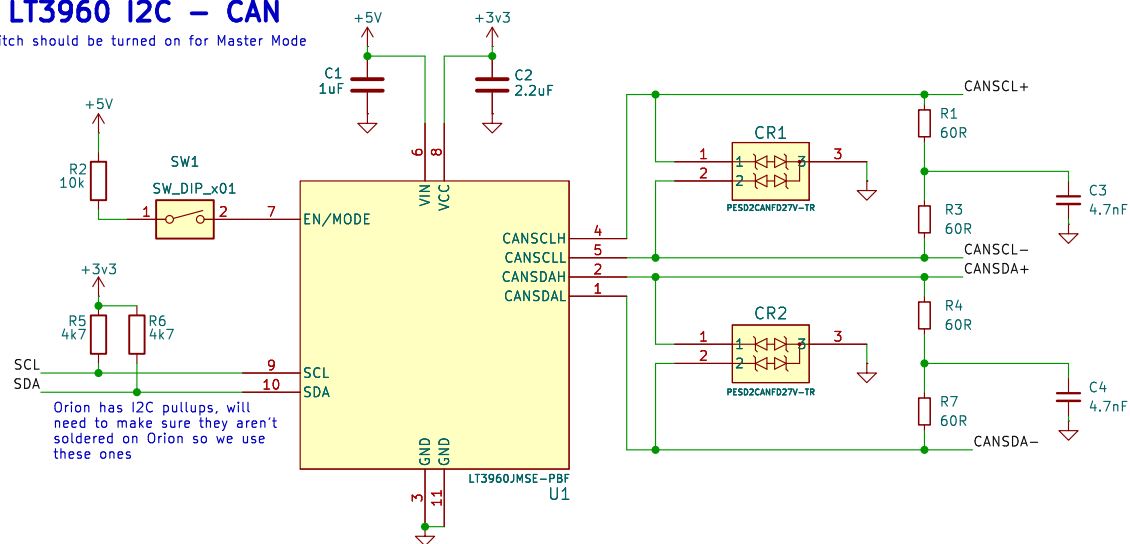

Mounting



Power flags

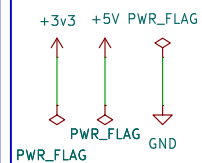

Logo



Sheet: /
File: Xplore ERC IMU HAT.kicad_sch

Title:

Size: A4	
KiCad E.D.A. 8.0.5	

Date:

Rev:
Id: 1/1