


# \_WindIndicator

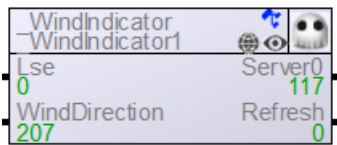

The class shows the wind direction. For this an arrow is drawn in a screen object. This class is used in the AddOn "Weather Forecast"

## Interfaces

### Servers

Server0	Is set to the current wind direction minus 90 degrees for drawing the arrow.
Refresh	Writing access to this server updates the output area

### Clients

Lse	object channel to the LSE object
WindDirection	Connection to transfer the current wind direction

## Global Methods

Draw	serves for drawing the content
IF_Run	is automatically called, when the object is opened in the visualization

