

온라인 활성화

다음 절차를 수행하여 FlexNet 임베디드 라이선스의 온라인 Activation을 수행할 수 있습니다.

필수 확인 사항


1. Docking Station 사용 유무 확인 (Docking Station 제거 필요)
2. Activation ID의 유지보수 기간 확인 (아래 내용 참고)

수행 절차


1. ETAS License Manager를 실행합니다.
2. "Devices -> Settings" 로 이동하십시오.
3. Internet Proxy 의 Proxy Mode를 "None"으로 하십시오.



※ ETAS License Manager 에 "**Certificatie**" 버튼이 있는 경우, Proxy Mode 변경 후 "**Certificatie**" 실행 (최신 버전 ETAS License Manager 에는 "**Certificatie**" 버튼이 없습니다.)

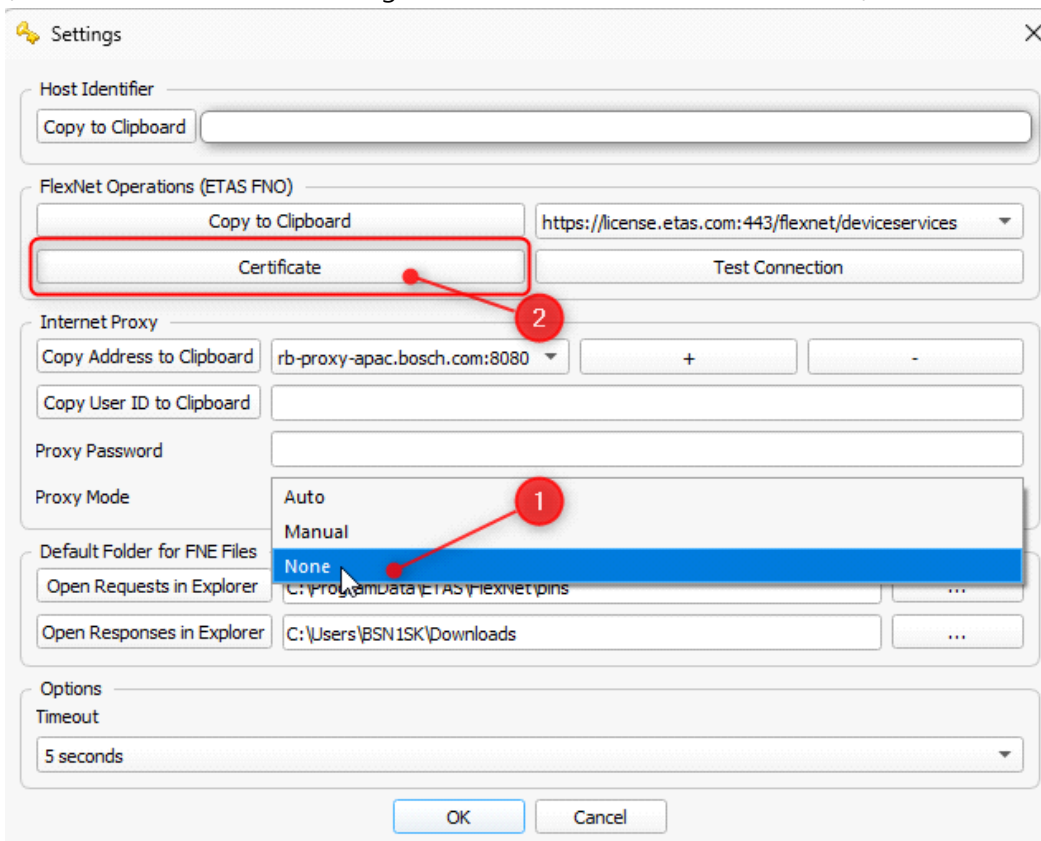

4. "Devices -> Online Activation..."으로 이동하십시오.
5. 입력 창에 활성화하고자 하는 Activation ID를 입력하고 "Activate"를 클릭합니다.

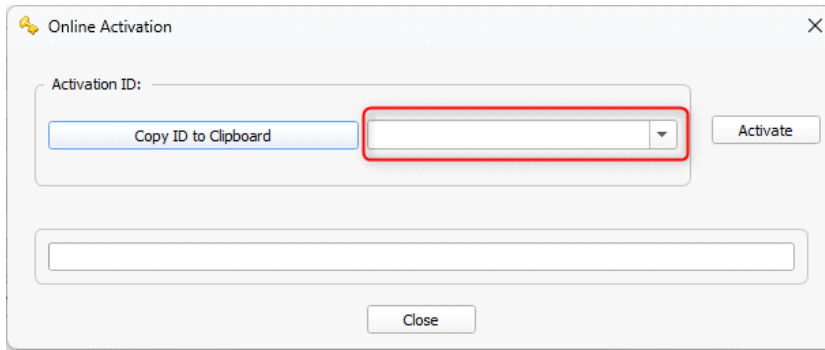

※ ETAS License 유지보수 기간 확인

1. [ETAS License & Download Portal](https://license.etas.com) (<https://license.etas.com>)에 접속합니다.

- ① To maintain your Activation ID 선택
- ② Activation ID 입력
- ③ Login

① Activation & Entitlements > List Entitlements



2. Maintenance 필드에서 Expiration 확인

List of your Entitlements

Your license entitlements are listed here. You can sort this list by clicking on a column header.

View ▾

Export ▾

◀

Page 1 of 1

▶

⌵

Activation ID ▾

Contains ▾

⌕

Advanced Search

| <input type="checkbox"/> | Type | License model | Original copies | Available quantity | Total quantity | Maintenance | Product |
|--------------------------|------|---------------|-----------------|--------------------|----------------|--|--|
| <input type="checkbox"/> | | FNE-LIC-MP | 1 | 0 | 1 | <div>ISW_INCA_SRV-ME52</div> <div>Version 1.0.</div> <div>Expiration: <input type="text"/></div> <div>Show all »</div> | ISW_INCA_LIC-MP, Version 7.5.0 FNE Product - Machine-named license for INCA (Base Product) |