

Welcome to Teensy® LC

32 Bit Arduino-Compatible Microcontroller

To begin using Teensy, please visit the website & click [Getting Started](http://www.pjrc.com/teensy).

www.pjrc.com/teensy

Digital Pins

digitalRead
digitalWrite
pinMode

Analog Pins

analogRead
analogReference
analogReadRes

PWM Pins

analogWrite
analogWriteRes

Touch Sense Pins

touchRead

Serial Ports


Serial1
Serial2
Serial3

I²C Ports

Wire Library


SPI Ports

SPI Library

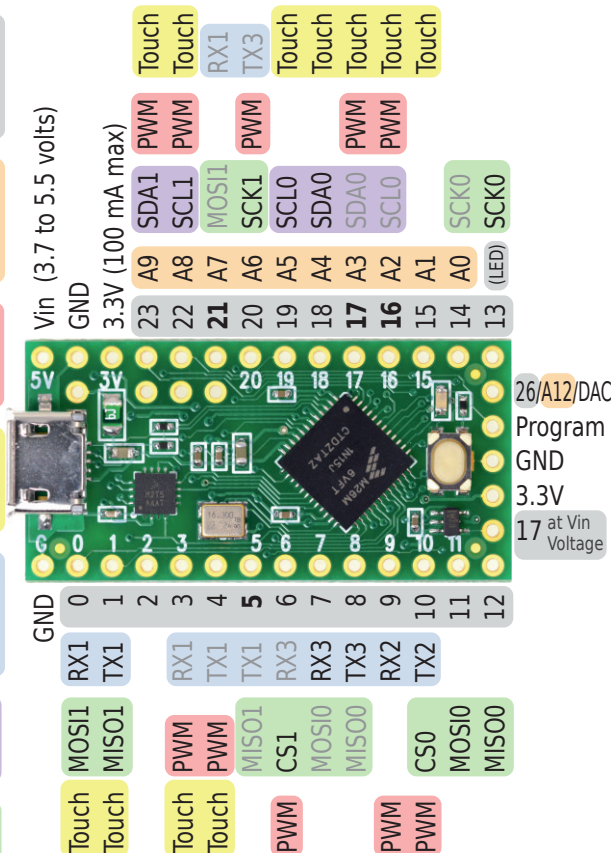

Teensy[®] LC Back Side

Additional pins, features, and specifications

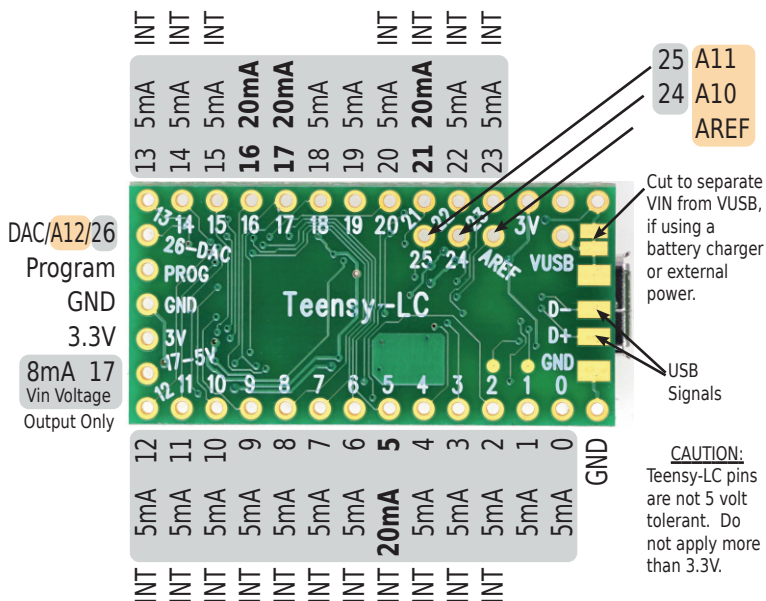

For solutions to the most common issues
and technical support, please visit:

www.pjrc.com/help

Teensy-LC System Requirements:

PC computer with Windows 7, 8, 10 or later
or Ubuntu Linux 14.04 or later
or Macintosh OS-X 10.8 or later
USB Micro-B Cable

