


Download the Arduino IDE software



Link to download <https://www.arduino.cc/en/software>

Download the version **Arduino IDE 1.8.19**

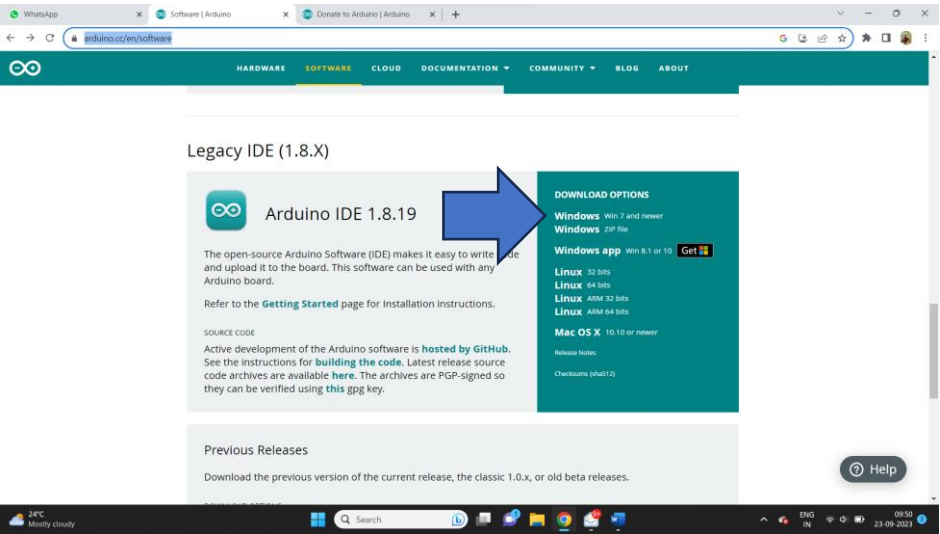

After downloading – install it

After installing we need to change fue settings as show in below picture

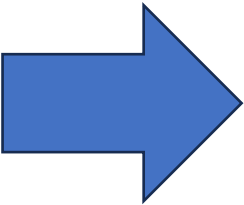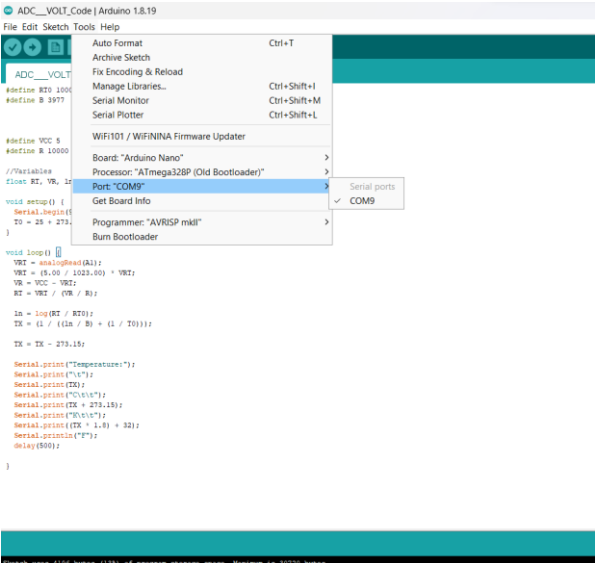

After these settings
Upload the code &
Press the serial monitor &
You can see the temperature reading