


## 1. Installation of FeView


+ Follow the following steps:

Step-1: click "FeView\_Setup.exe"


Step-2:

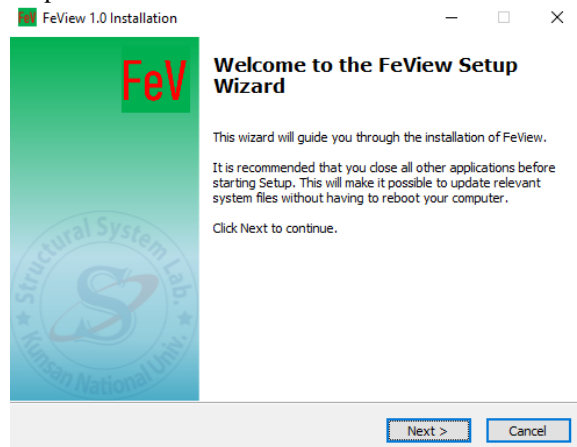


Step-4:

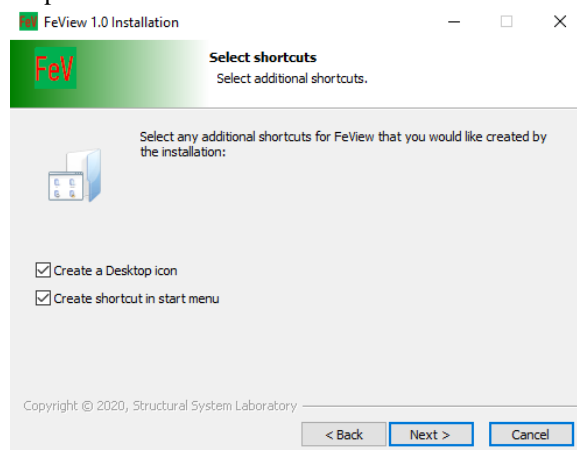


Step-6:

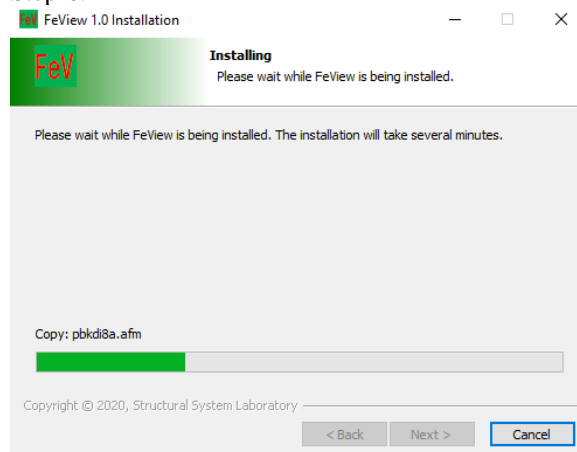


Step-3:

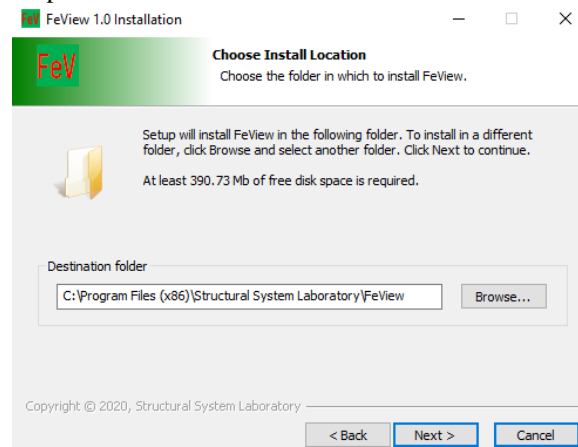

Step-5:

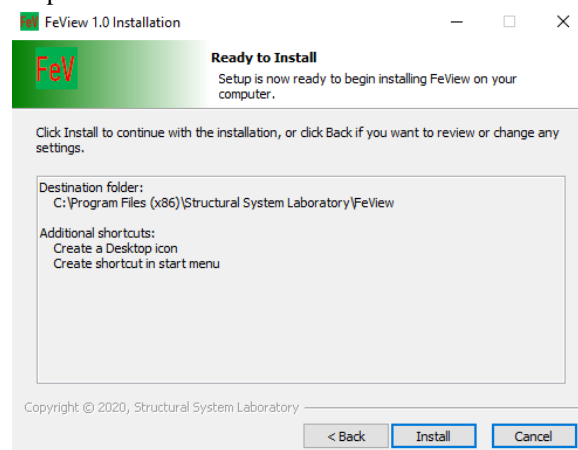

Step-7:

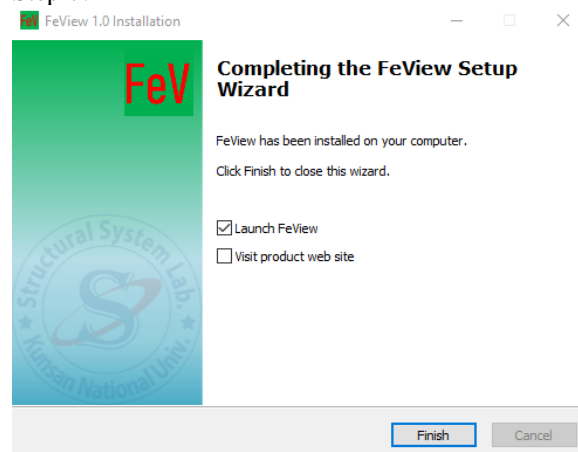

## 2. Installation of Active Tcl (required)

+ For running OpenSees in your system, you should have installed tcl/tk. If you already installed tcl/tk8.5 no need to installed again but if you don't have follow the following procedure

### 3.1 Download:


+ You can download tcl/tk from <https://www.activestate.com/products/tcl/downloads/>

### 3.2 Installation of tcl/tk

+ After downloading the Tcl/Tk executable, you will need to run it to install the DLL's on your computer.

+ Install by this way


Step 1:

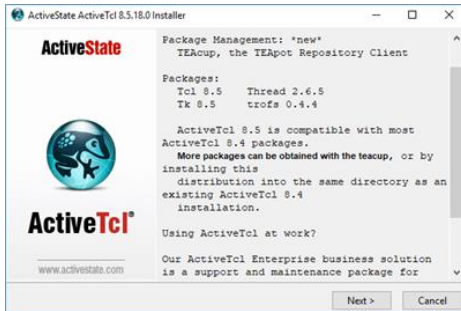


Step 2:




Step 3:

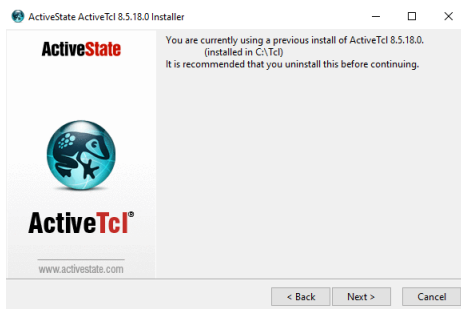

Step 4:

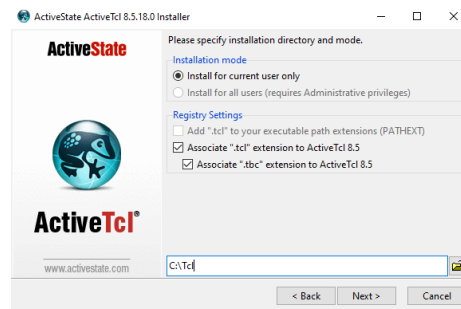

Step 5:

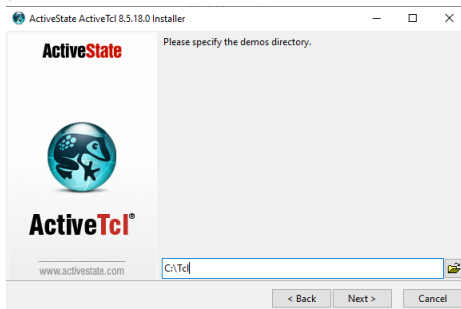

Step 6:



Step 7:



Step 8:

