

# 零死角玩转STM32



## 如何安装KEIL5

淘宝：[fires-tm32.taobao.com](http://fires-tm32.taobao.com)

论坛：[www.firebbs.cn](http://www.firebbs.cn)



扫描进入淘宝店铺

# 主讲内容



01

**获取KEIL5安装包**

---

02

**开始安装KEIL5**

---

03

**安装STM32芯片包**

---

# 获取KEIL5安装包



## 注意事项

- 1、安装路径不能带中文，必须是英文路径。
- 2、安装目录不能跟51的KEIL或者KEIL4冲突，三者目录必须分开。
- 3、KEIL5的安装比起KEIL4多了一个步骤，必须添加芯片包，不然没法使用。
- 4、如果使用的时候出现莫名其妙的错误，先到网上查找解决方法，莫乱阵脚。

## 获取KEIL5安装包


百度搜索关键字“KEIL5下载”即可，我们这里使用MDK5.15版本，如果后面出了更高的版本选择性升级即可。

网友提供：<http://pan.baidu.com/s/1bpc7Xmf?qq-pf-to=pcqq.c2c>


# 开始安装KEIL5



①：双击KEIL5安装包，Next。

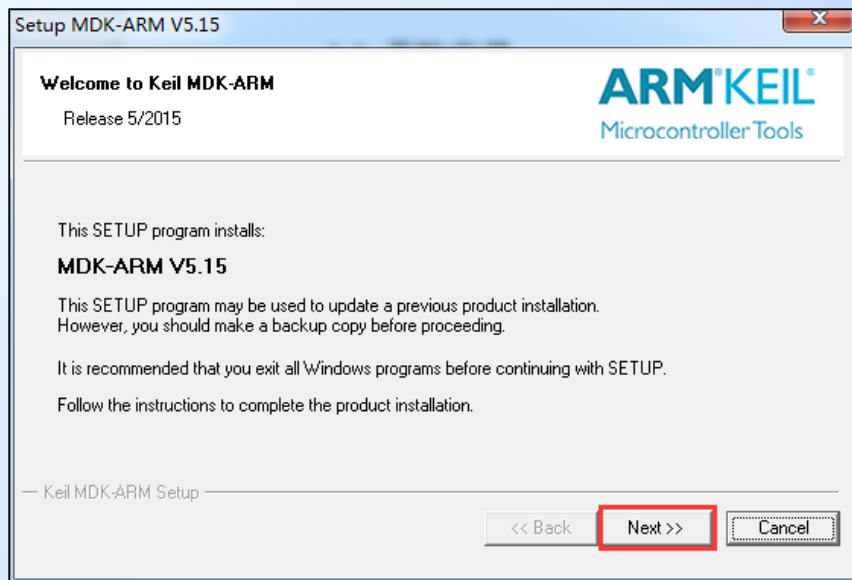


②：同意协议，Next。

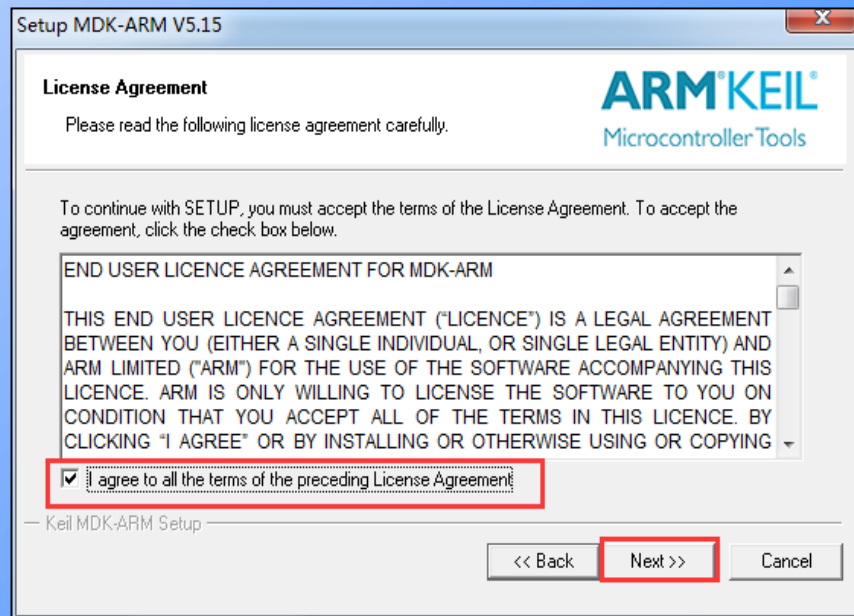


# 开始安装KEIL5



③：选择安装 路径，路径不能带中文（要特别注意），Next。

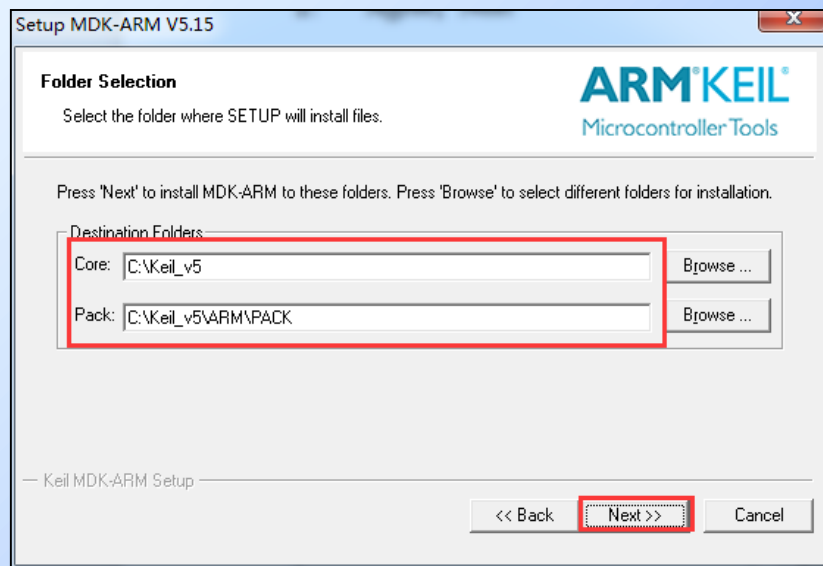


④：填写用户信息，全部填空格（键盘的space键）即可，Next。

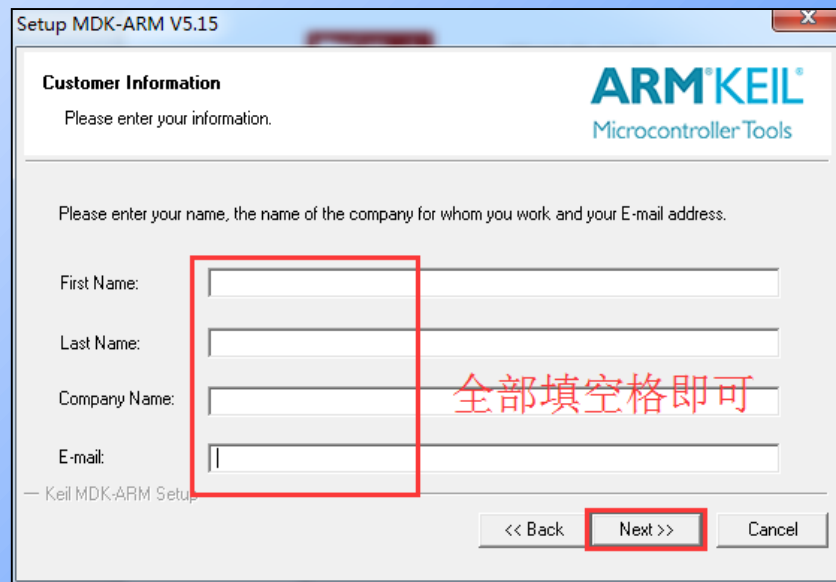

# 开始安装KEIL5



⑤ : Finish , 安装完毕。

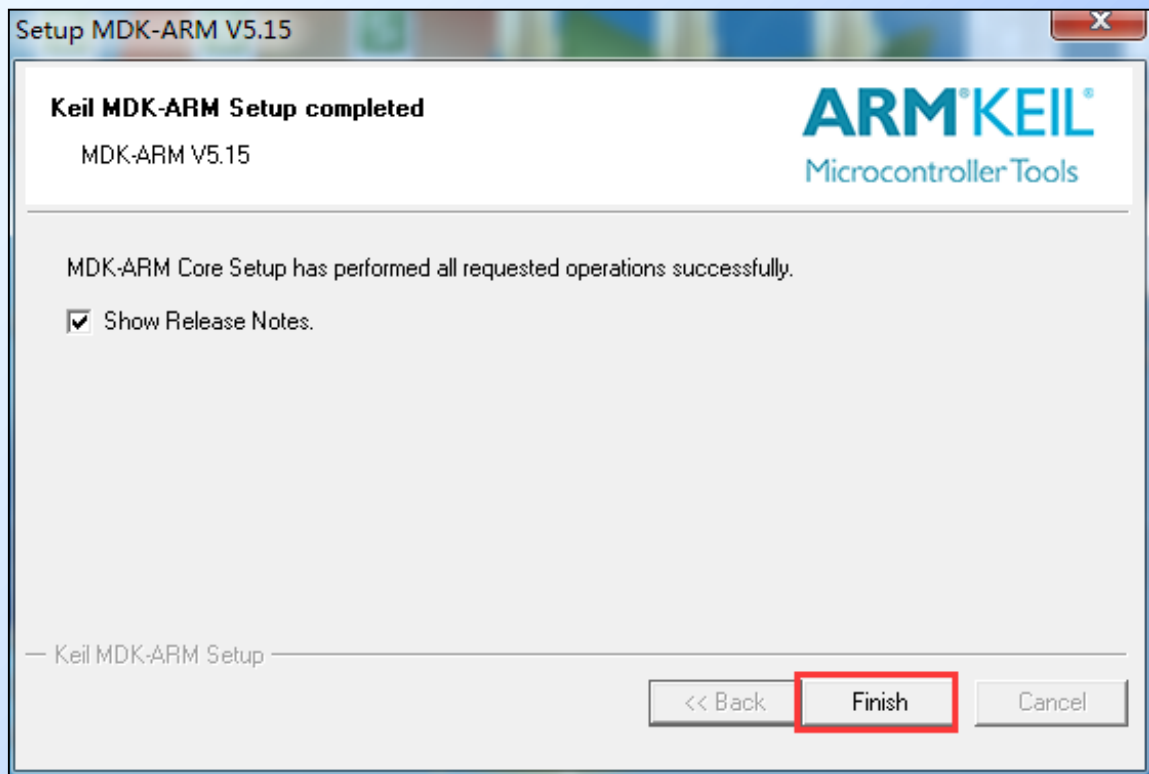

如果安装的是KEIL4，到这里已经安装完毕，与KEIL4自带各种芯片包不同，KEIL5需要用户手动安装，否则在新建工程的时候没有芯片可选。

如果后面更新了有更高的版本可选择安装更高的版本。要注意的是KEIL5的工程KEIL4打不开。

# 安装STM32芯片包



- 1、STM32芯片包需要去KEIL的官网下载，我们使用的是STM32F4系列单片机，即M4系列。如果是使用其他系列的，根据实际情况下载即可。
- 2、下载完成后，双击安装，安装目录同KEIL5即可。

网址：<http://www.keil.com/dd2/pack/>

➤ STMicroelectronics STM32F1 Series Device Support, Drivers and Examples	2.0.0	↓
➤ STMicroelectronics STM32F2 Series Device Support, Drivers and Examples	2.5.0	↓
➤ STMicroelectronics STM32F3 Series Device Support and Examples	1.3.0	↓
➤ STMicroelectronics STM32F4 Series Device Support, Drivers and Examples	2.7.0	↓
➤ STMicroelectronics STM32F7 Series Device Support, Drivers and Examples	2.4.0	↓

# 零死角玩转STM32



**THANKS**

论坛：[www.firebbs.cn](http://www.firebbs.cn)

淘宝：[fire-stm32.taobao.com](http://fire-stm32.taobao.com)



扫描进入淘宝店铺