



4.2.3.5 SMZ Info Update

The "SMZ Info/Update" dialog covers information on a connected frequency multiplier, like type, serial number revision state, frequency range and firmware version. You can directly perform an update of the multiplier firmware.

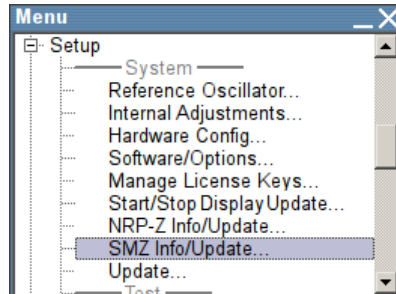

To access the "SMZ Info/Update" dialog, perform one of the following

- On the front panel, press the [SETUP] key and select "SMZ > SMZ Info Update".
- In the block diagram, select "RF Block > Configure > SMZ Info Update"

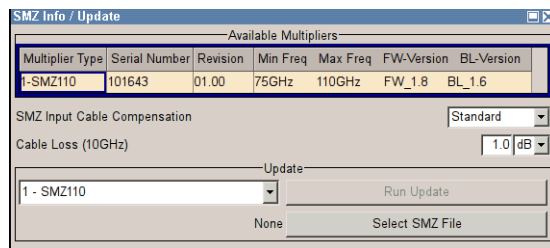

- Where you can find the description...
Since this section is relevant when an R&S SMZxxx frequency multiplier is connected, you can find a detailed description in the user manual of the frequency multiplier. It is included in the online help of the R&S SMB, but can also be found in pdf format on the CD, or on the R&S website <http://www.rohde-schwarz.com/product/SMZ.html>.

4.2.3.6 Display Update

The "Start/Stop Display Update" dialog provides the possibility to switch off update of the displayed parameters to increase speed for certain settings.

The indicated values are not updated and may therefore differ from the intern, used values.