

During adjustments, a progress indicator shows the status of the process. If any error occurs, the process aborts and an error message appears in the info line.

- Proceed the same way for further adjustments the instrument provides.

Continuing the adjustment process on error occurs

Per default, if any error occurs during the adjustment process, the process aborts. An error message appears in the "Info" line.

If you want to continue the adjustments also if there is an error, proceed as follows:


1. Press the [setup] key.
2. Select "Protection > Protection".
3. Unlock protection level 1, see [Chapter 4.2.3.13, "Protection"](#), on page 113.
4. In the setup menu, select "System > Internal Adjustments".
5. Select "Continue Adjustment on Error > On".
6. Proceed as described in ["How to execute internal adjustments"](#) on page 496.

8.4.4 Selftest

A selftest is provided for service purposes.

Access:

1. Select "Setup > Test > Selftest"
2. Select "Start Selftest".

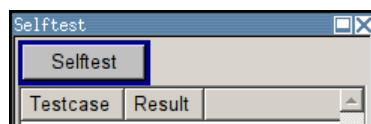

The following tests are only available via remote control:

- `:TEST<hw>:DIRect` on page 457

Start Selftest

Performs a selftest on all installed hardware options.