

3.2.1.1 Utility Keys



The keys to the left of the display cause the R&S SMB to return to a definite instrument state and provide information on the instrument and assistance.

For more information refer to chapter "Instrument Settings".

[PRESET]

Sets the instrument to a defined state (see [Chapter 3.1.13, "Default Settings"](#), on page 29).

[LOCAL]

Switches from remote control to local (manual) control.

[SETUP]

Opens the "Setup" dialog for configuring presets.

For more information, see [Chapter 4.2.3, "General Configuration of Instrument - Setup Key"](#), on page 97.

[File]

Activates the menu for storing or loading files (see [Chapter 3.5.1.8, "File Management"](#), on page 86).

INFO

Displays status messages, error messages and warnings.


[WINBAR]

Toggles between the diagram and active menus.

[HELP]

Displays context-sensitive help text.

3.2.1.2 Standby LEDs and Standby Key

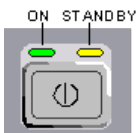

The standby LEDs and the [ON/STANDBY] key are located in the bottom left corner of the front panel.

The [ON/STANDBY] key toggles the instrument between standby and ready state (indicated by the standby LEDs).

The standby LEDs indicate the instrument states as follow:

- the green LED (left) is on when the instrument is ready for operation,
- the yellow LED (right) is on in the standby mode.

See [Table 3-1](#).