




Remove a nut attaching the link to the actuator first before sliding the link off.

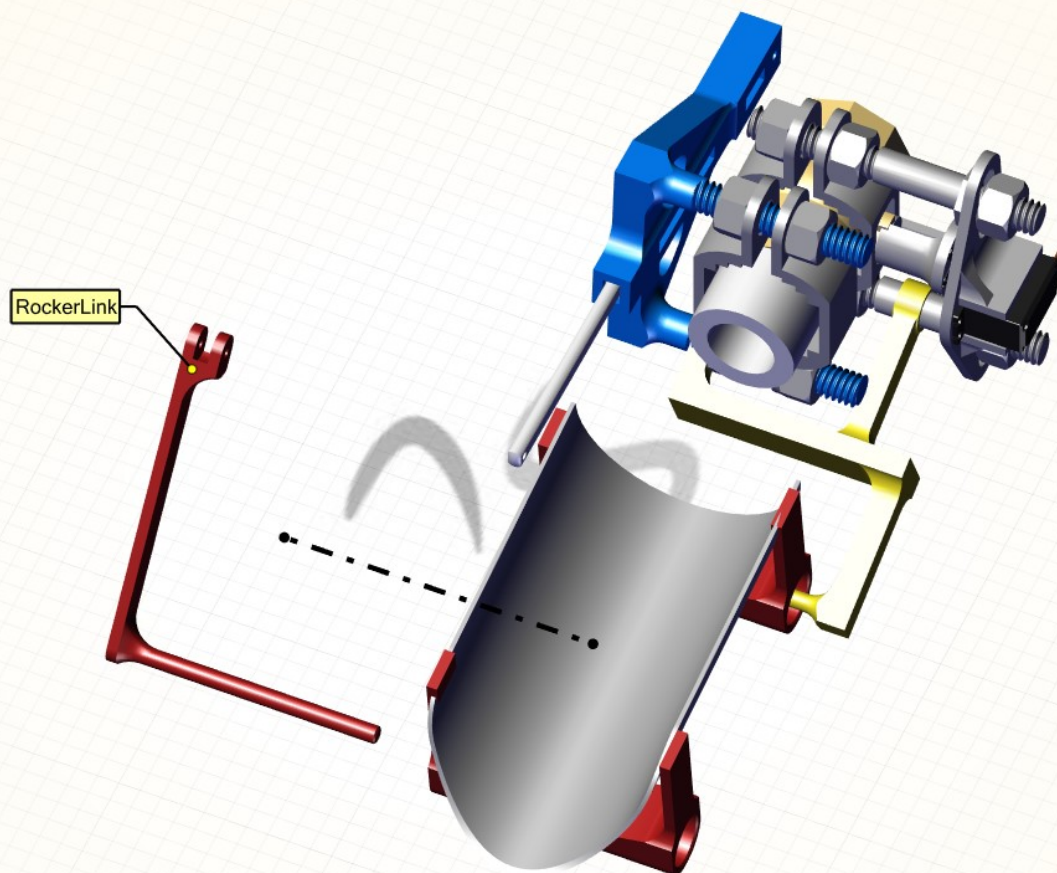


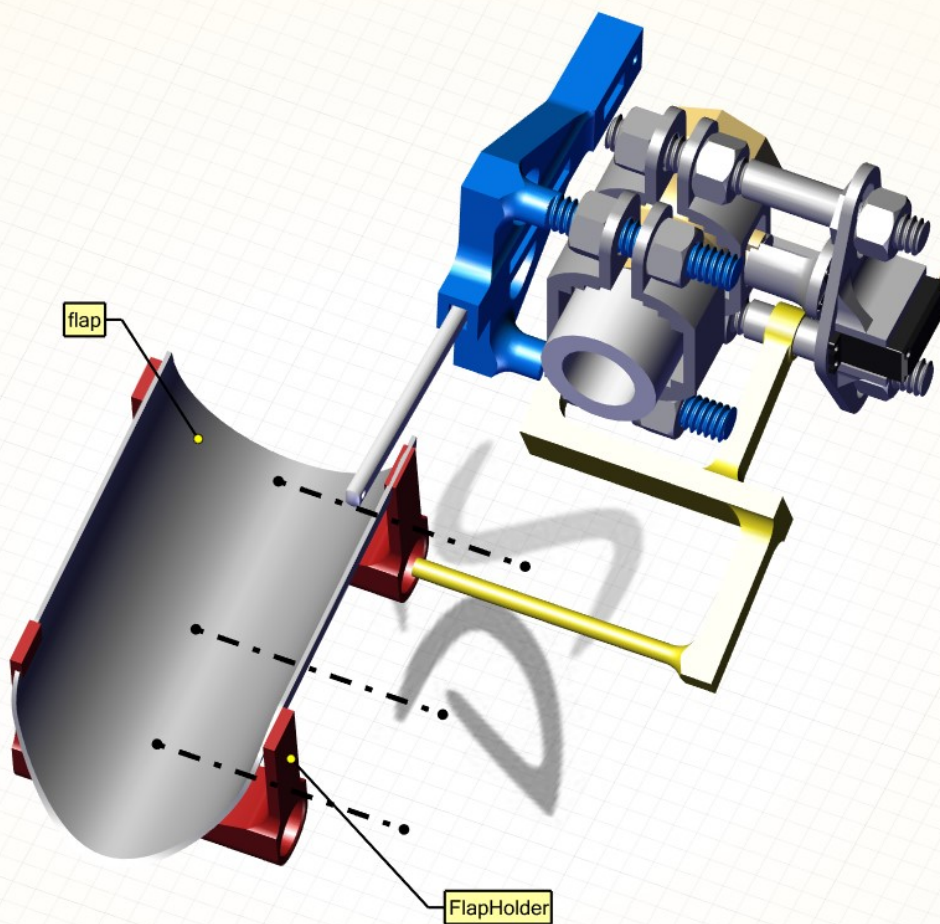

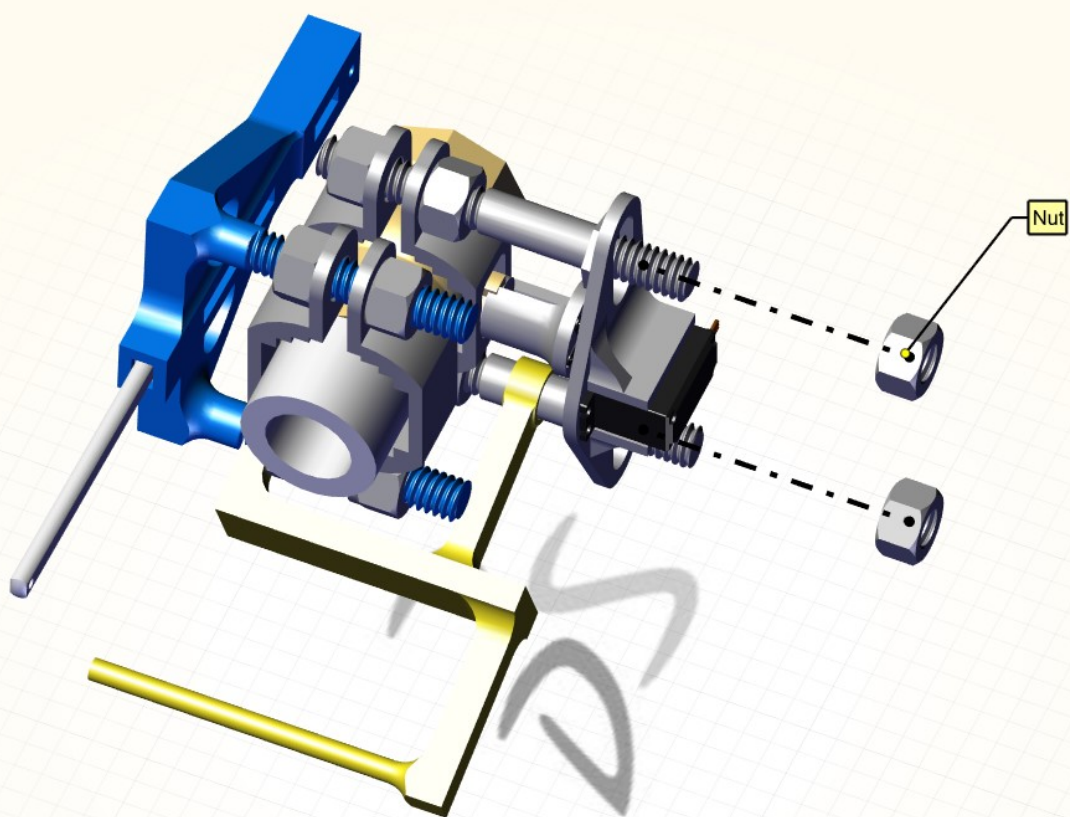





The servo motor is mounted on its casing using screws. Do not unscrew it, remove it as a unit.

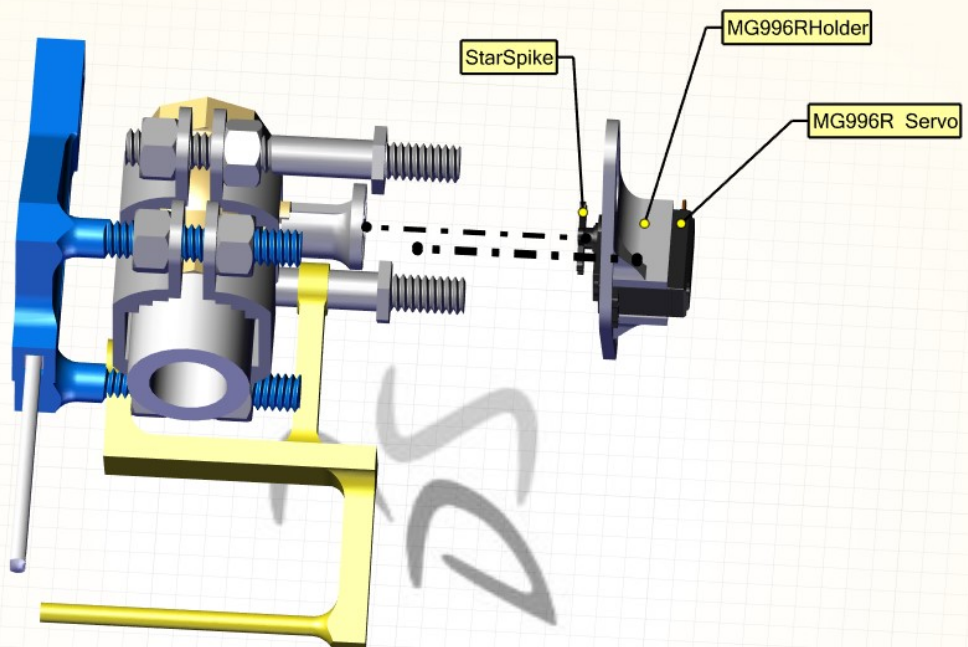


Remove a nut inside the motor interface carefully with the help of a screw driver.

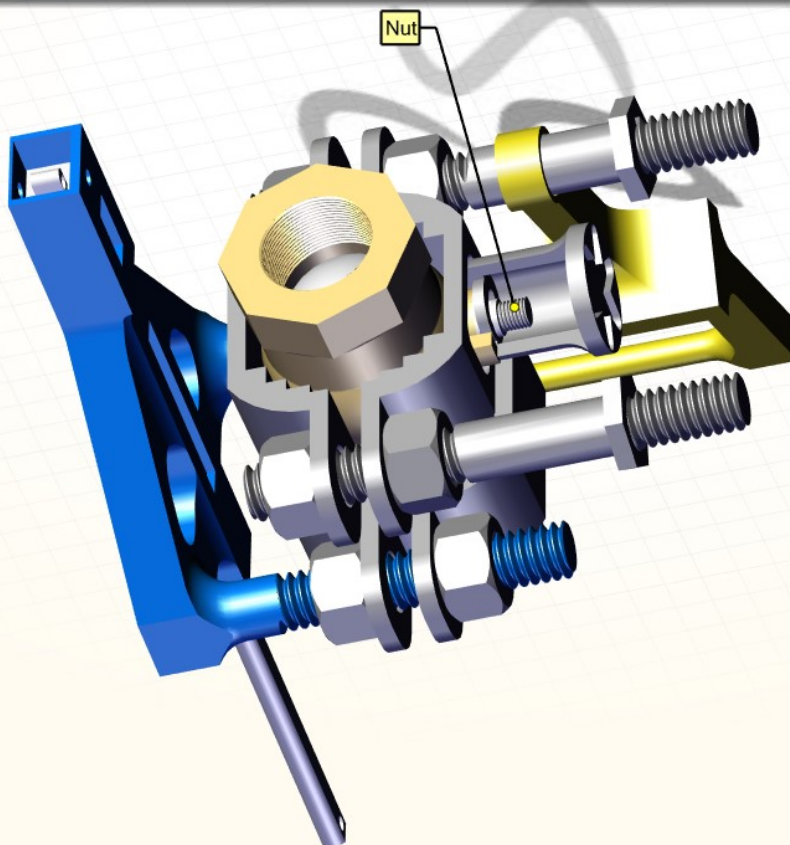

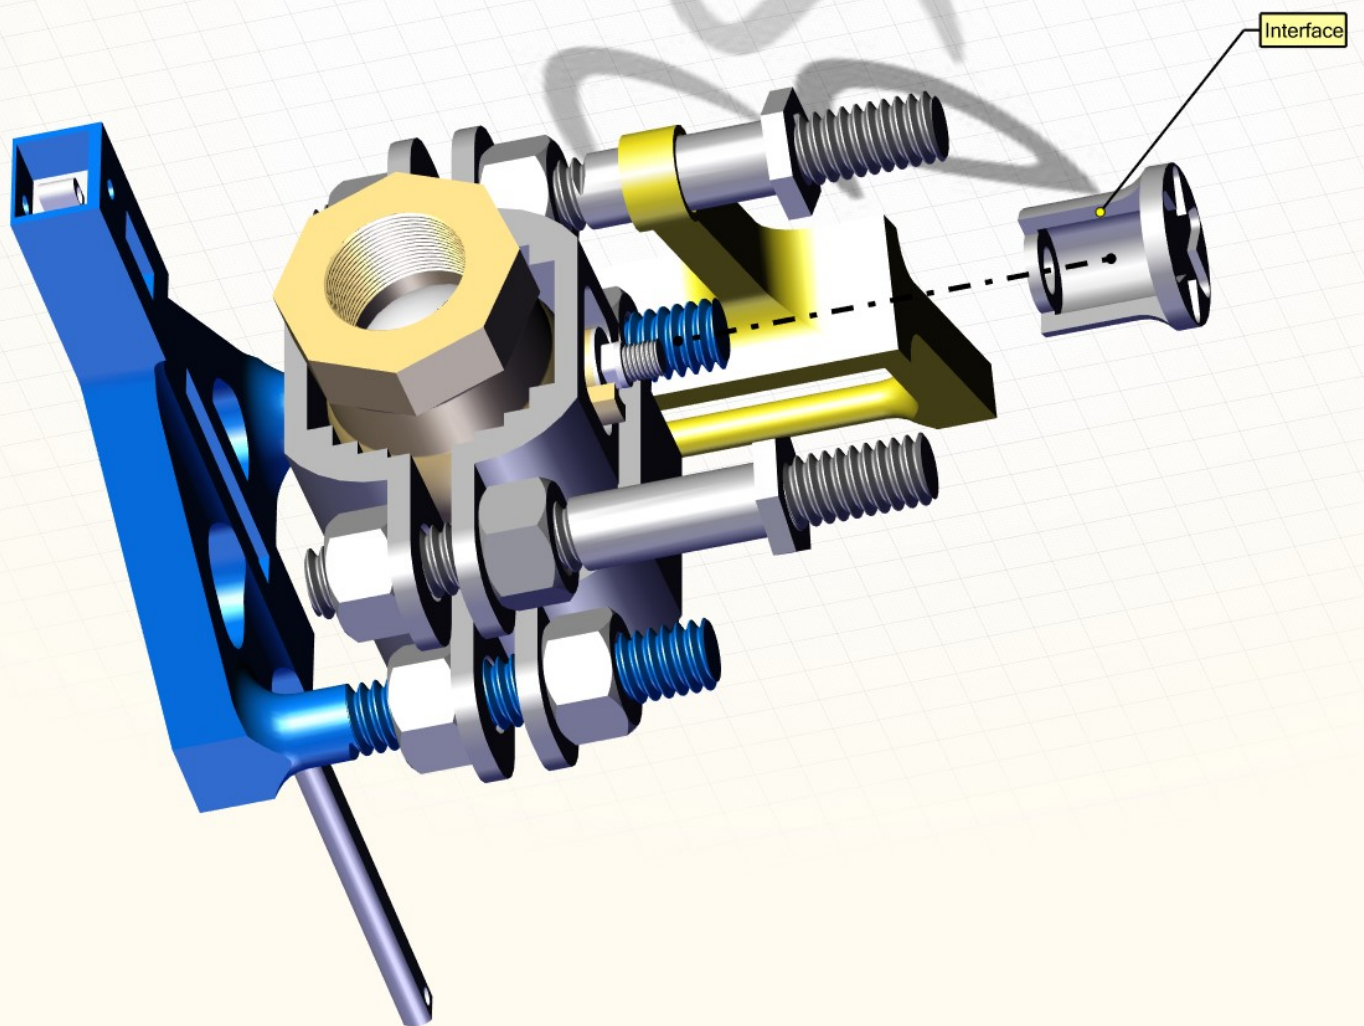




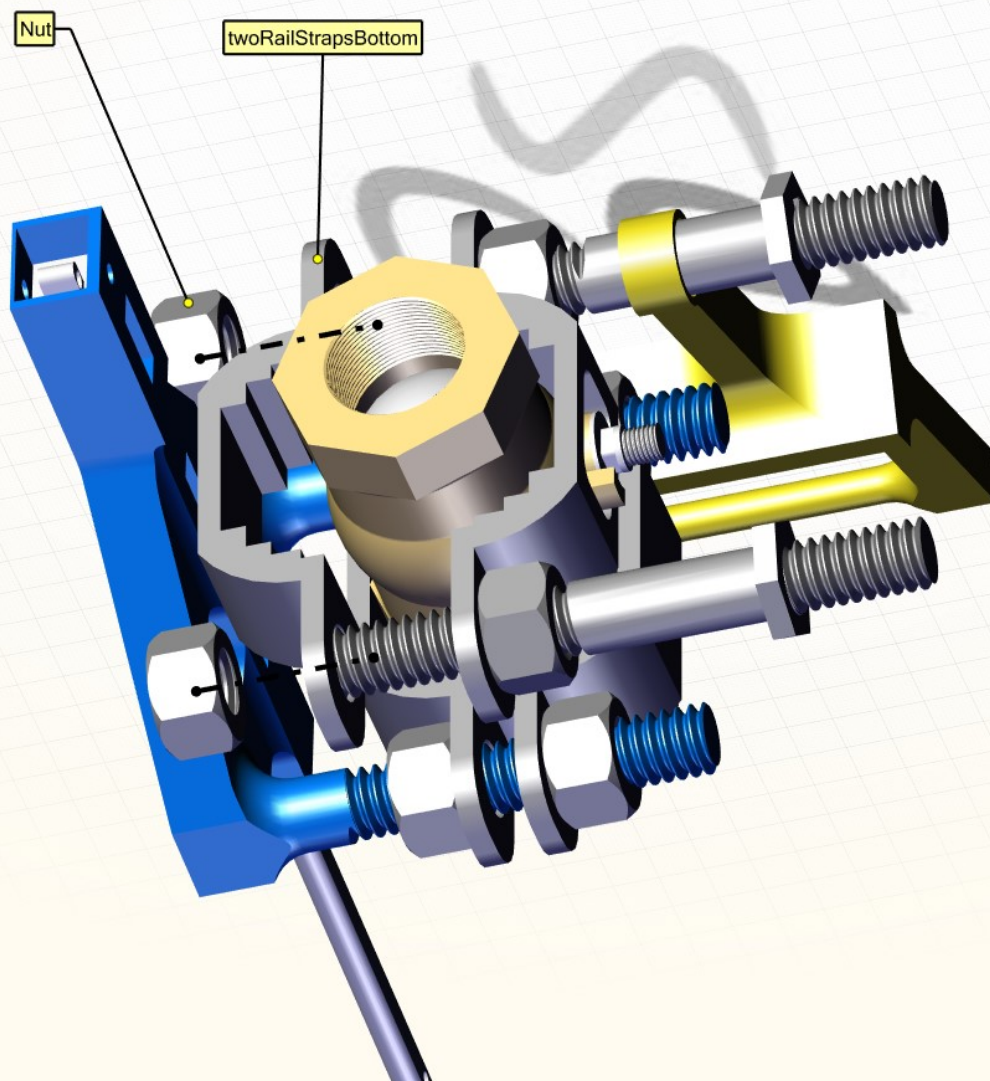




Losen the nuts slightly enough to losen the straps from the valve.

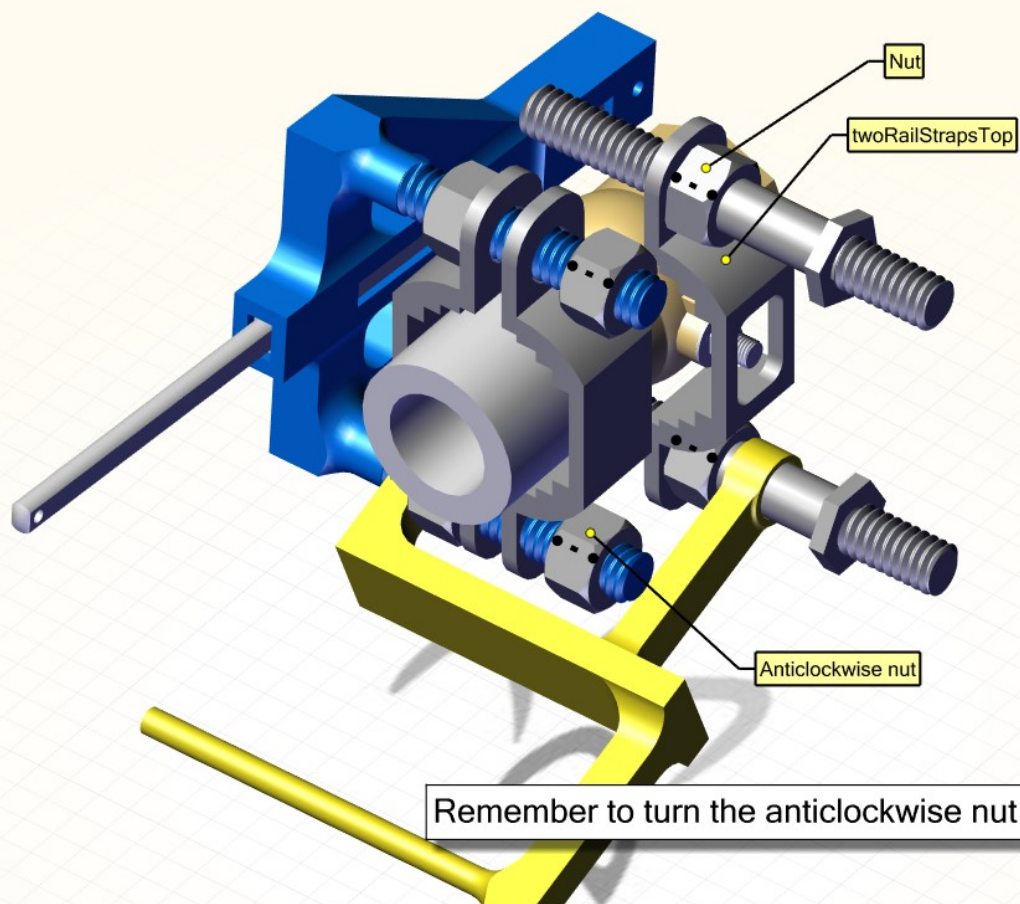

Gently slide the whole structure off the valve.

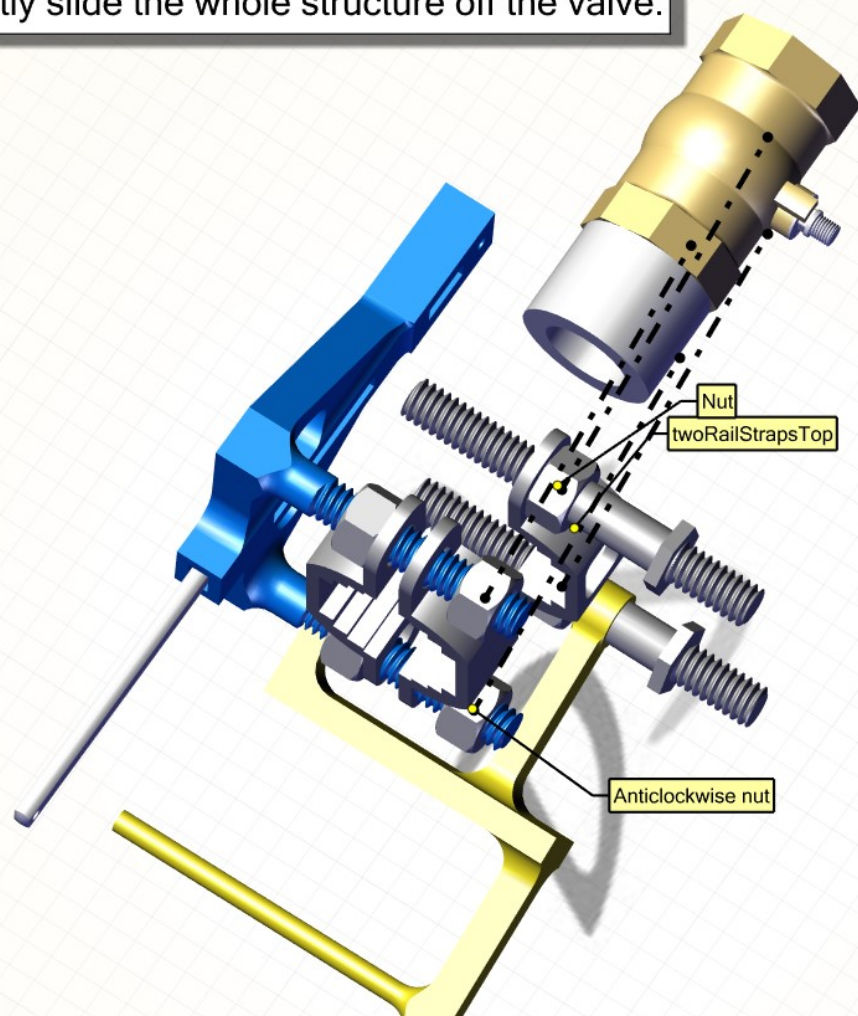

Finally slide the LA-T8 off its barrel.

LA-T8Body

