



304304

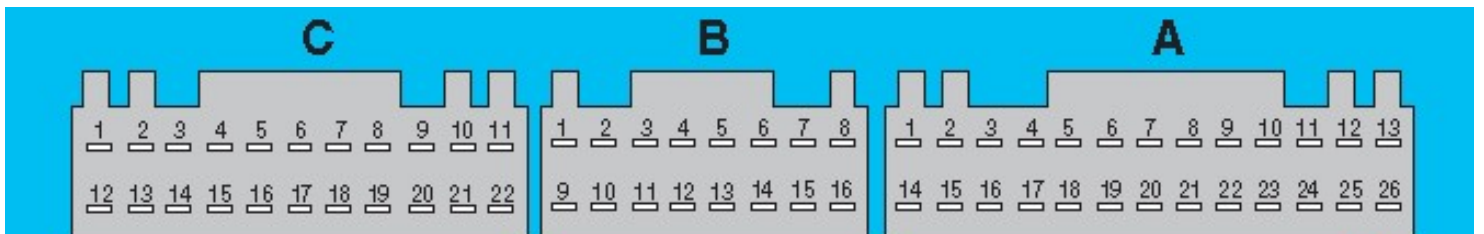

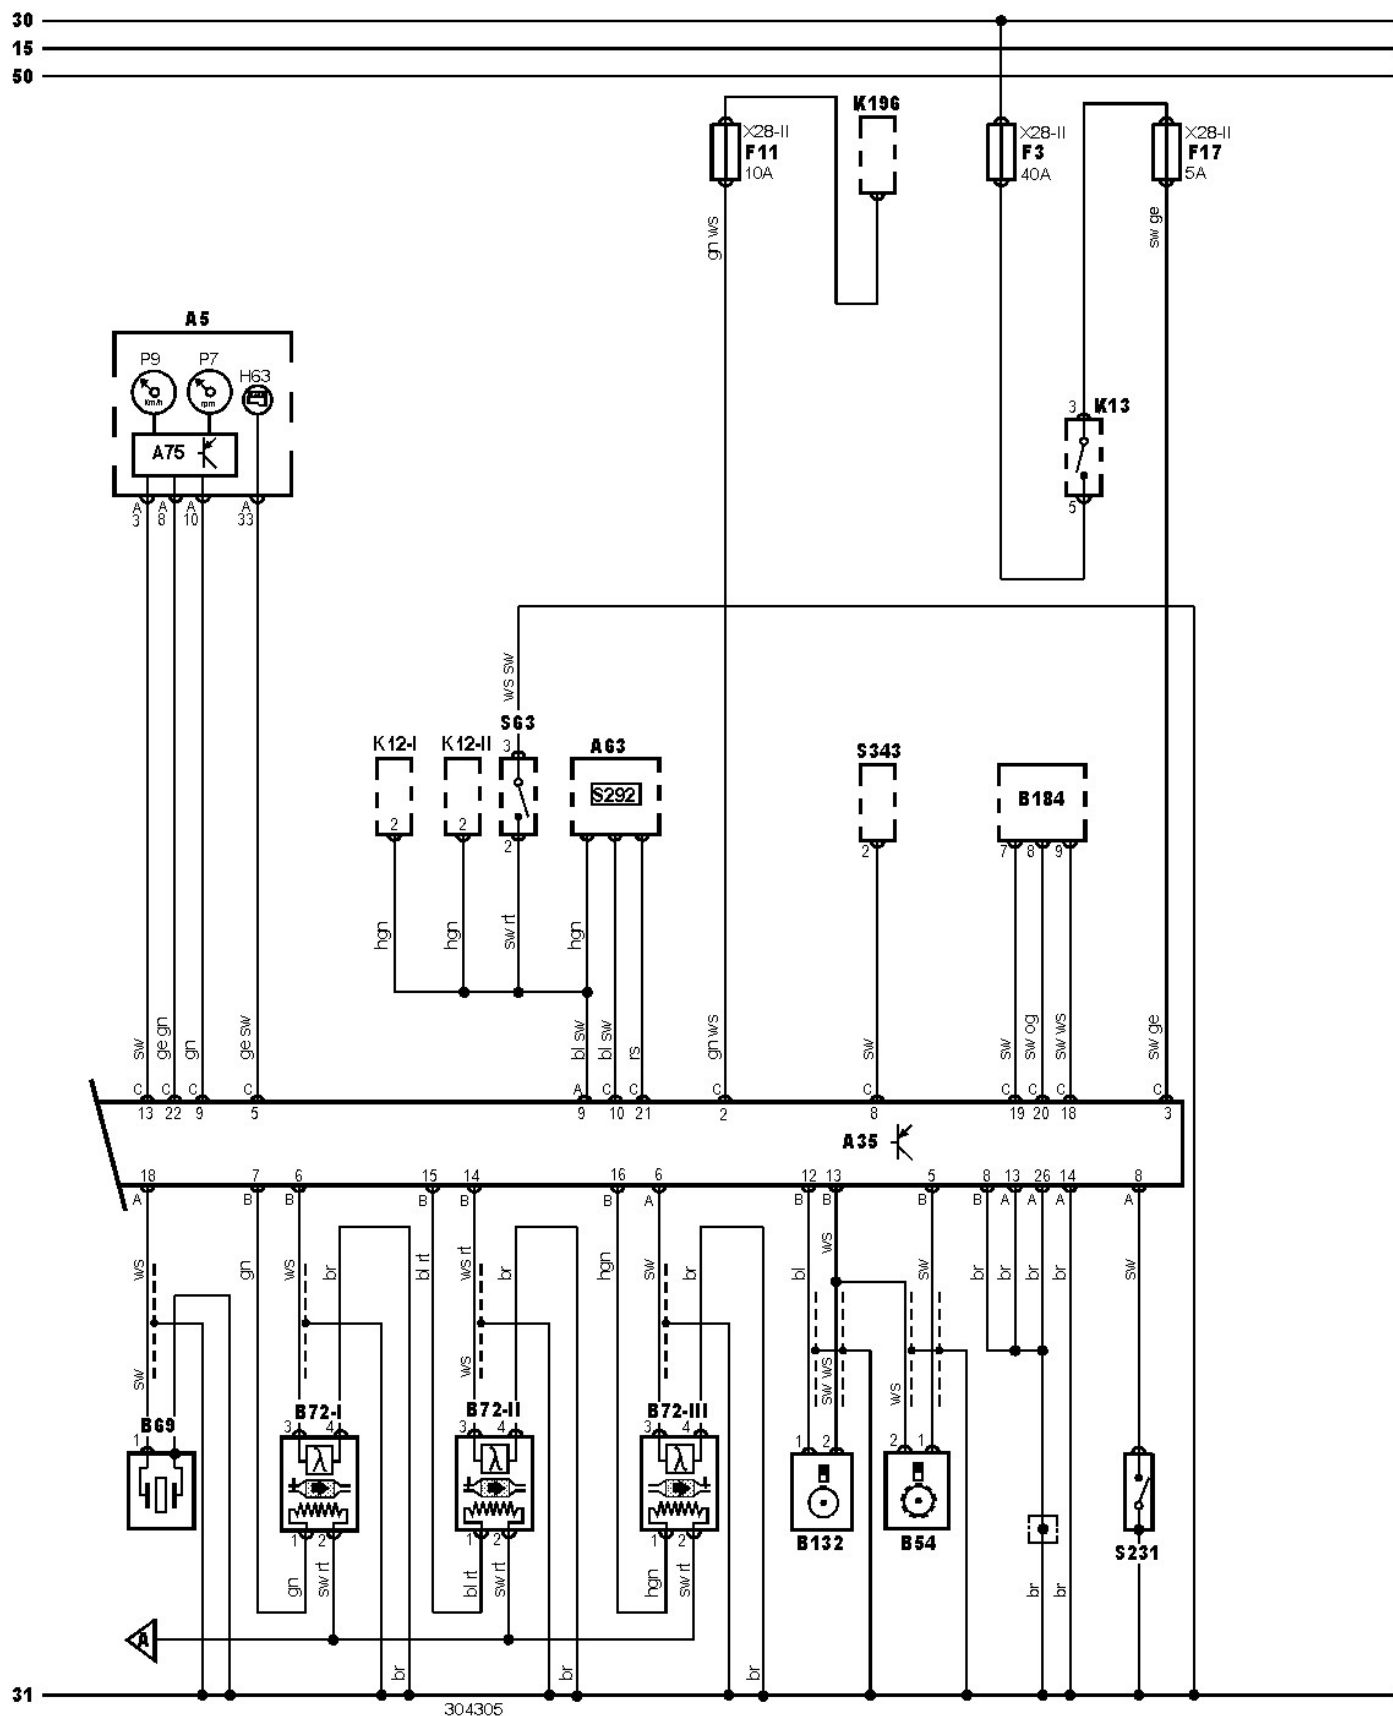

A63	AC control module
S63	AC refrigerant pressure switch
S292	AC/heater function control panel
31	Battery -
30	Battery +
S13	Brake pedal position (BPP) switch
Y81	Camshaft position (CMP) actuator
B132	Camshaft position (CMP) sensor
B54	Crankshaft position (CKP) sensor
X1	Data link connector (DLC)
K46	Engine control (EC) relay
A35	Engine control module (ECM)
K12-I	Engine coolant blower motor relay 1
K12-II	Engine coolant blower motor relay 2
B24	Engine coolant temperature (ECT) sensor
H63	Engine malfunction indicator lamp (MIL)
Y104	Evaporative emission (EVAP) canister purge valve
M12	Fuel pump (FP)
K20	Fuel pump (FP) relay
F	Fuse
X28-I	Fuse box/relay plate, engine bay 1
X28-II	Fuse box/relay plate, fascia 1
B72-I	Heated oxygen sensor (HO2S) 1, bank 1
B72-III	Heated oxygen sensor (HO2S) 1, bank 2
B72-II	Heated oxygen sensor (HO2S) 2
K13	Heated rear window relay
Y99	Idle air control (IAC) valve
A52	Ignition amplifier
T1	Ignition coil
S343	Ignition key warning switch
15	Ignition switch - ignition ON
50	Ignition switch - start signal
B184	Immobilizer read coil
Y3	Injector
A5	Instrument panel
A75	Instrumentation control module
B25	Intake air temperature (IAT) sensor
B69	Knock sensor (KS)
B30	Mass air flow (MAF) sensor
S231	Power steering pressure (PSP) switch
K4	Starter motor relay
A198	Supplementary restraint system (SRS) control module
P7	Tachometer
K196	Tail lamps relay
B147	Throttle position (TP) sensor
P9	Vehicle speedometer