


76	77	78	79	80	81
□	□	□	□	□	□
82	83	84	85	86	87
□	□	□	□	□	□
88	89	90			
□	□	□			
46	47	48	49	50	51
□	□	□	□	□	□
52	53	54	55	56	57
□	□	□	□	□	□
58	59	60			
□	□	□			
16	17	18	19	20	21
□	□	□	□	□	□
22	23	24	25	26	27
□	□	□	□	□	□
28	29	30			
□	□	□			

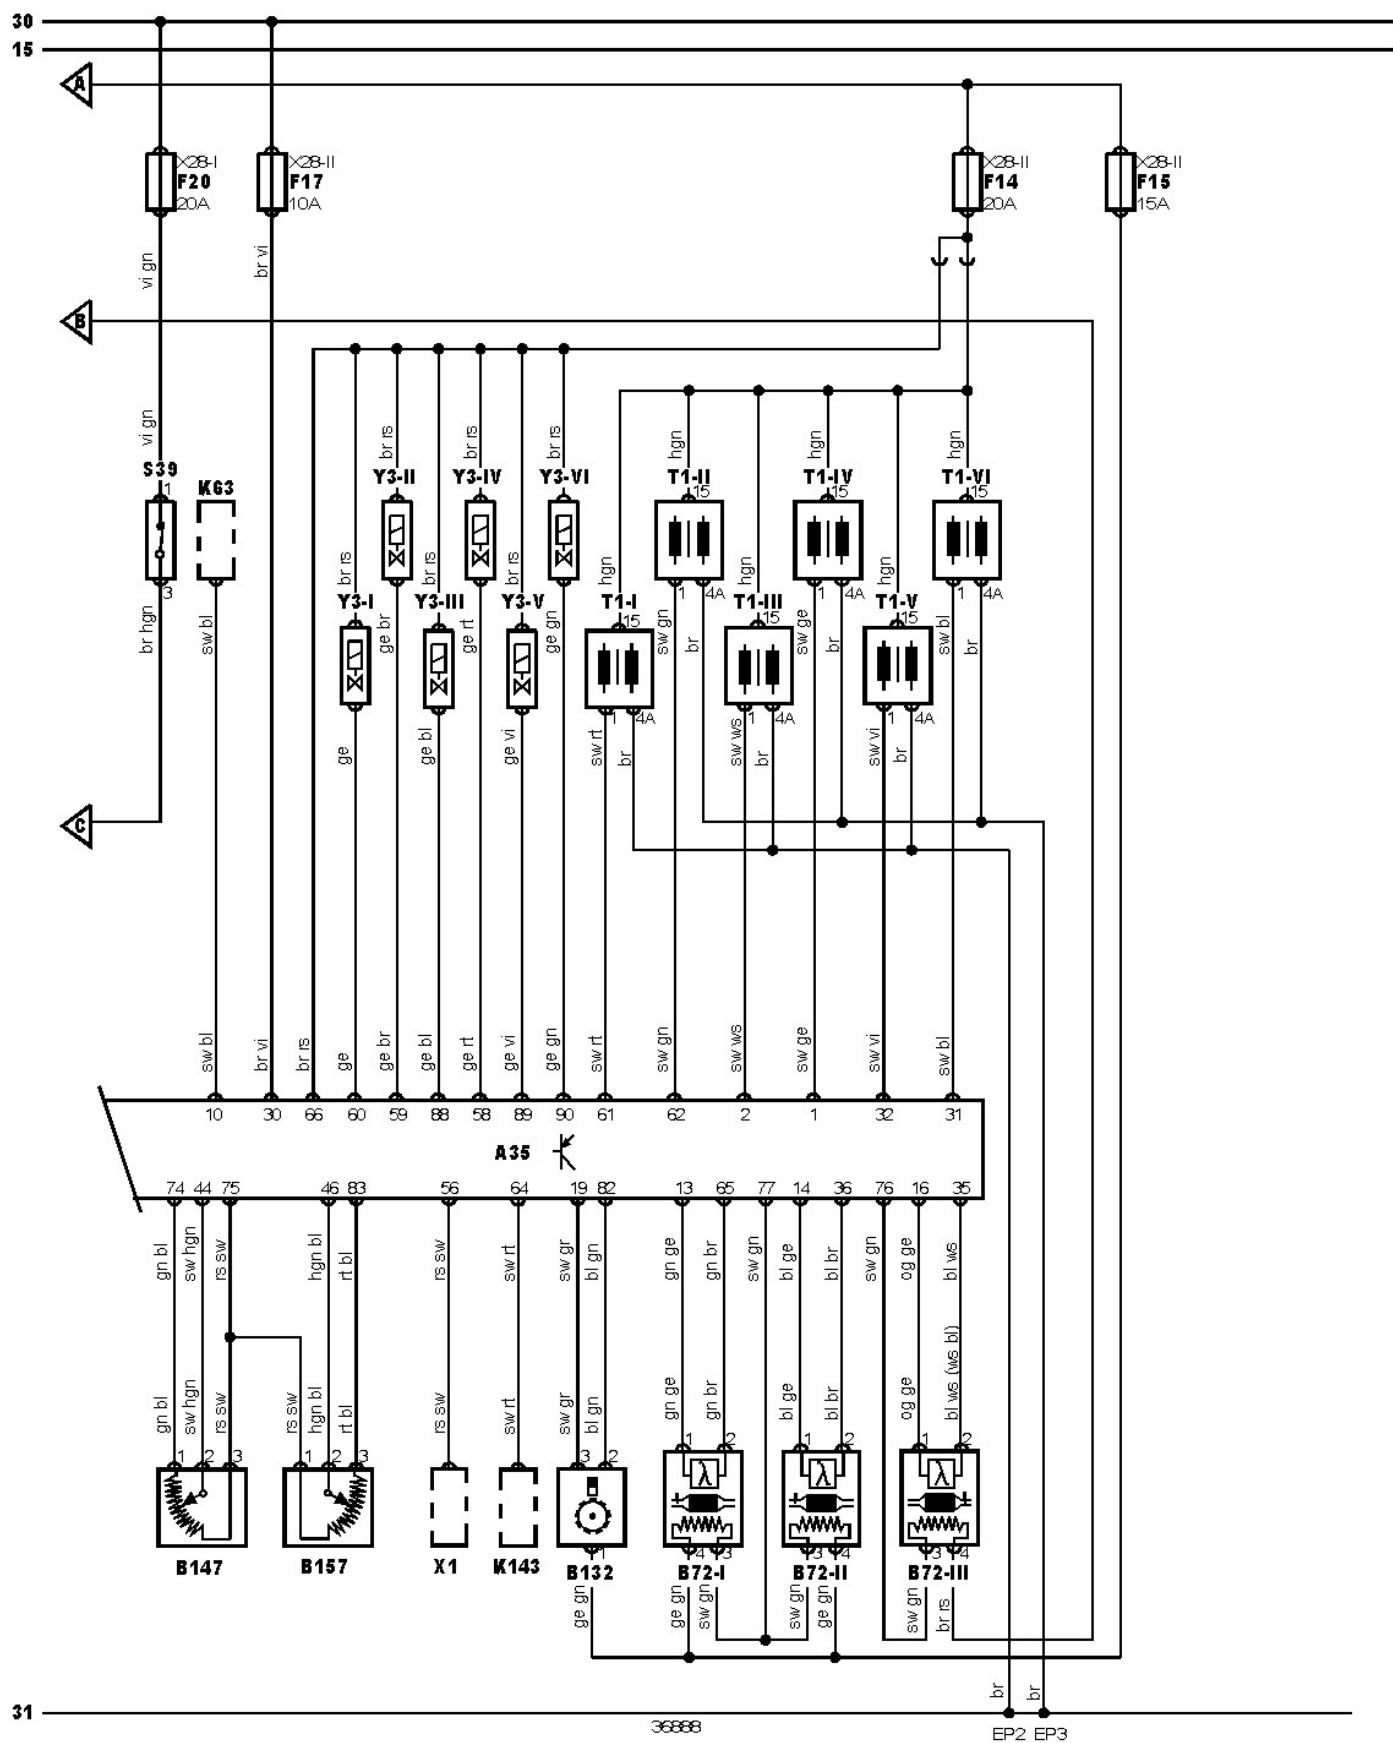

A16	ABS control module
K143	AC compressor clutch relay
S149	AC master switch
G1	Alternator
31	Battery -
30	Battery +
B132	Camshaft position (CMP) sensor
B54	Crankshaft position (CKP) sensor
K63	Cruise control system relay
X1	Data link connector (DLC)
X80	Databus connection
EP	Earth point
K46	Engine control (EC) relay
A35	Engine control module (ECM)
K12	Engine coolant blower motor relay
B24	Engine coolant temperature (ECT) sensor
Y104	Evaporative emission (EVAP) canister purge valve
M12	Fuel pump (FP)
K20	Fuel pump (FP) relay
F	Fuse
X28-II	Fuse box/relay plate, engine bay
X28-I	Fuse box/relay plate, fascia
B72-II	Heated oxygen sensor (HO2S) 1, bank 1
B72-I	Heated oxygen sensor (HO2S) 1, bank 2
B72-III	Heated oxygen sensor (HO2S) 2
Y99	Idle air control (IAC) valve
T1	Ignition coil
15	Ignition switch - ignition ON
A162	Immobilizer control module
S39	Inertia fuel shut-off (IFS) switch
Y3	Injector
Y66	Intake air flap control actuator
B25	Intake air temperature (IAT) sensor
B69	Knock sensor (KS)
B83	Manifold absolute pressure (MAP) sensor
B157	Power steering pressure (PSP) sensor
A171	Relay module (RM)
B147	Throttle position (TP) sensor

616263646566676869707172737475	767778798081828384858687888990
313233343536373839404142434445	464748495051525354555657585960
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15	16 17 18 19 20 21 22 23 24 25 26 27 28 29 30