


39971

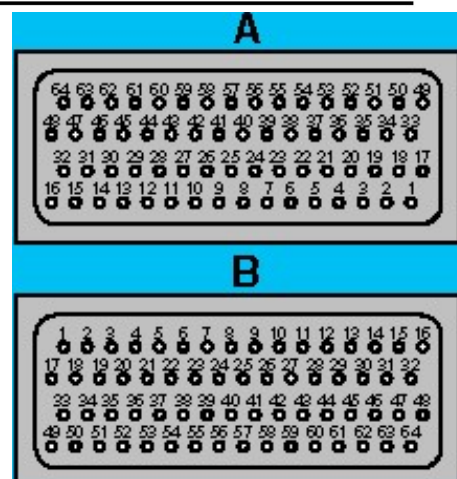



A16	ABS control module
K143	AC compressor clutch relay
B161	AC refrigerant pressure sensor
B138	Accelerator pedal position (APP) sensor
31	Battery -
30	Battery +
S13	Brake pedal position (BPP) switch
B132	Camshaft position (CMP) sensor
S258	Clutch pedal position (CPP) switch
CAN	Controller area network (data bus)
B54	Crankshaft position (CKP) sensor
X1	Data link connector (DLC)
K46	Engine control (EC) relay
A35	Engine control module (ECM)
K12	Engine coolant blower motor relay
K12-I	Engine coolant blower motor relay 1
K12-II	Engine coolant blower motor relay 2
K12-III	Engine coolant blower motor relay 3
P4	Engine coolant temperature (ECT) gauge
B24	Engine coolant temperature (ECT) sensor
H63	Engine malfunction indicator lamp (MIL)
B86	Engine oil level sensor
S25	Engine oil pressure warning lamp switch
Y104	Evaporative emission (EVAP) canister purge valve
Y151	Exhaust gas recirculation (EGR) valve actuator
B149	Exhaust gas recirculation (EGR) valve position sensor
P3	Fuel gauge
B3	Fuel gauge tank sensor
M12	Fuel pump (FP)
K20	Fuel pump (FP) relay
F	Fuse
X28-I	Fuse box/relay plate, engine bay
B72-II	Heated oxygen sensor (HO2S) - after cat
B72-I	Heated oxygen sensor (HO2S) - before cat
T1	Ignition coil
15	Ignition switch - ignition ON
A162	Immobilizer control module
Y3	Injector
A5	Instrument panel
B25	Intake air temperature (IAT) sensor
B69	Knock sensor (KS)
B83	Manifold absolute pressure (MAP) sensor
A11	Multifunction control module
A81	Power steering control module
H50	Service indicator
P7	Tachometer
A177	Throttle control unit
M89	Throttle motor
B169	Throttle motor position sensor
A123	Vehicle speed sensor (VSS) signal amplifier
B19	Wheel speed sensor, left front