


Vento 2.0 2E

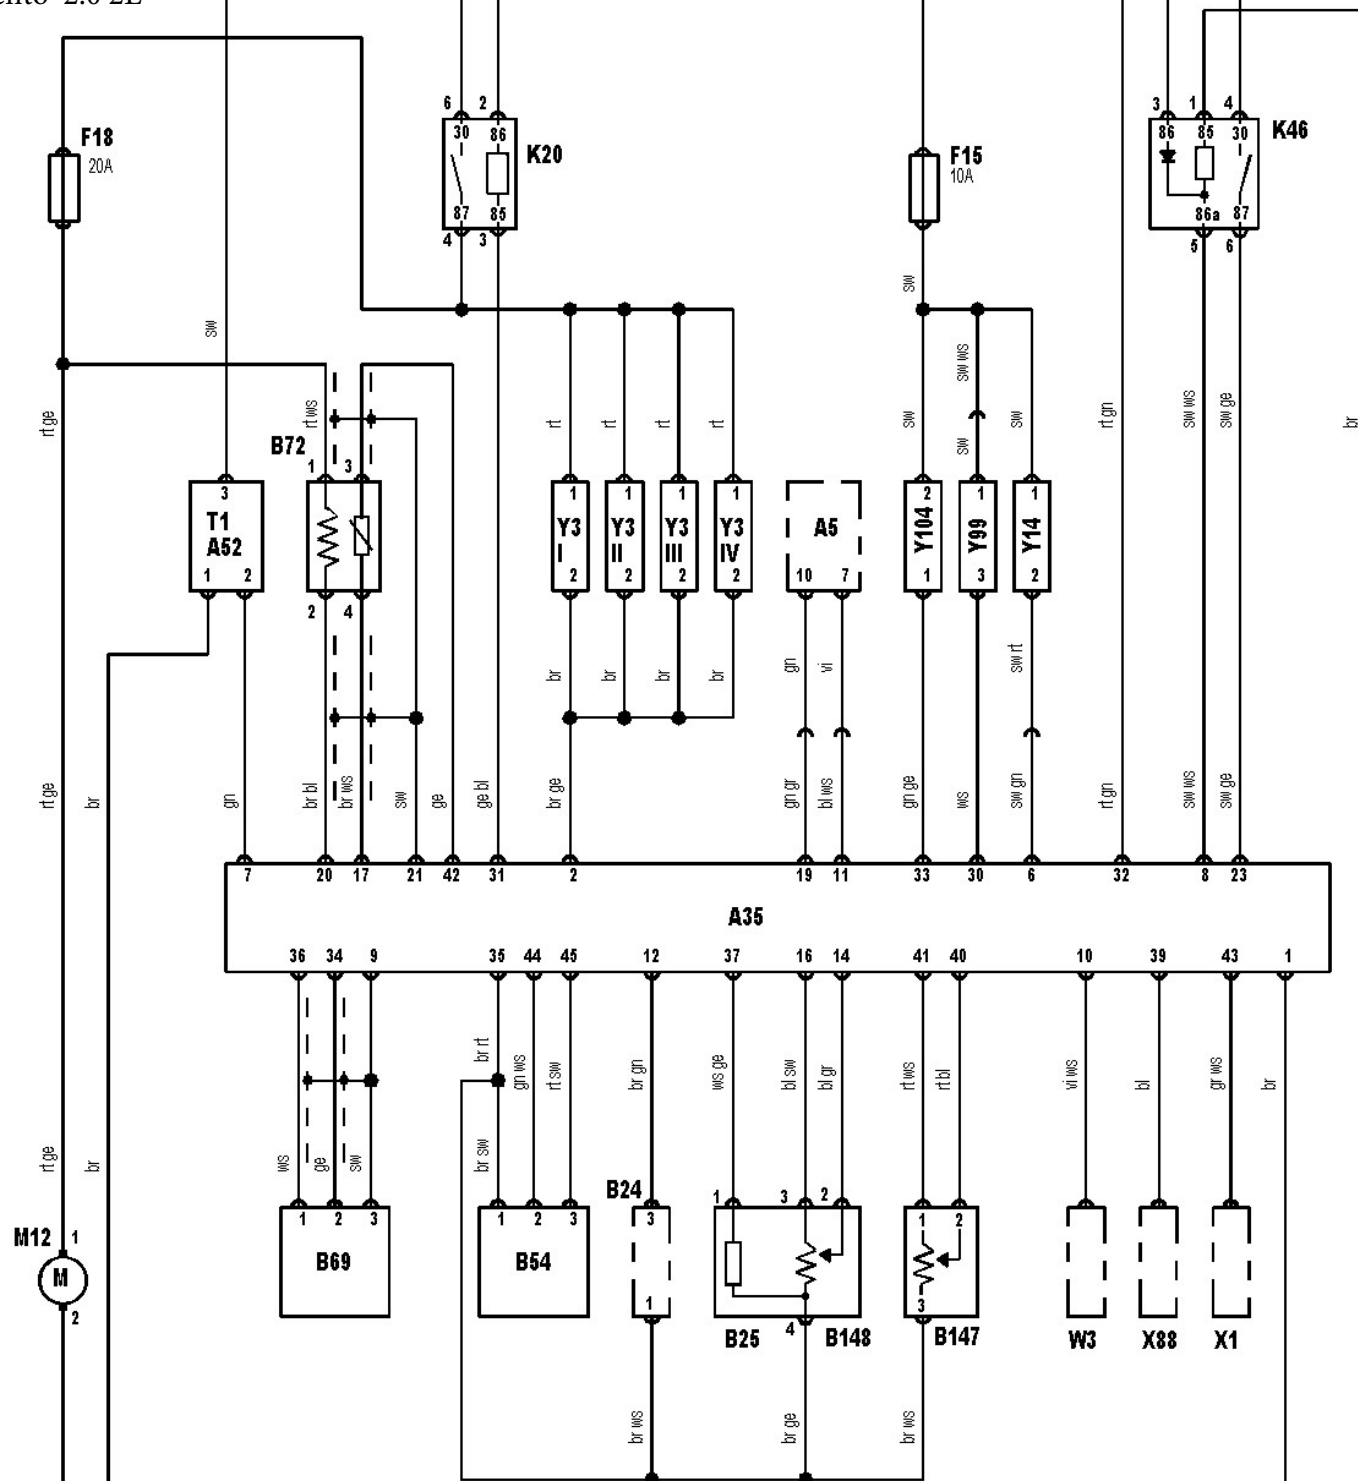

31

30419

X88	AC connector
31	Battery -
30	Battery +
Y14	Cold start injector
B54	Crankshaft position (CKP) sensor
X1	Data link connector (DLC)
A35	Engine control module (ECM)
K46	Engine control relay
B24	Engine coolant temperature (ECT) sensor
Y104	Evaporative emission (EVAP) canister purge valve
M12	Fuel pump
K20	Fuel pump relay
F	Fuse
B72	Heated oxygen sensor (HO2S)
Y99	Idle air control (IAC) valve
A52	Ignition amplifier
T1	Ignition coil
15	Ignition switch - ignition ON
50	Ignition switch - start signal
Y3	Injector
A5	Instrument panel
B25	Intake air temperature (IAT) sensor
B69	Knock sensor (KS)
R62	Mixture adjustment resistor
W3	Spare cable
B147	Throttle position (TP) sensor
X79	Transmission connector
B148	Volume air flow (VAF) sensor

