


|      |  |
|------|--|
| A16  | ABS control module                               |
| A63  | AC control module                                |
| B138 | Accelerator pedal position (APP) sensor          |
| C3   | Audio unit suppressor                            |
| A39  | Auxiliary warning module                         |
| 31   | Battery -  |
| 30   | Battery +  |
| B132 | Camshaft position (CMP) sensor                   |
| S258 | Clutch pedal position (CPP) switch               |
| B54  | Crankshaft position (CKP) sensor                 |
| X1   | Data link connector (DLC)                        |
| A35  | Engine control module (ECM)                      |
| K46  | Engine control relay                             |
| M6   | Engine coolant blower motor                      |
| B187 | Engine coolant blower motor temperature sensor   |
| B24  | Engine coolant temperature (ECT) sensor          |
| R96  | Engine coolant thermostat                        |
| B86  | Engine oil level sensor                          |
| Y104 | Evaporative emission (EVAP) canister purge valve |
| M12  | Fuel pump  |
| K20  | Fuel pump relay                                  |
| F    | Fuse   |
| X28  | Fuse box/relay plate                             |
| B72  | Heated oxygen sensor (HO2S)                      |
| T1   | Ignition coil                                    |
| K189 | Ignition coil relay                              |
| 15   | Ignition switch - ignition ON                    |
| 50   | Ignition switch - start signal                   |
| A162 | Immobilizer control module                       |
| Y3   | Injector   |
| A5   | Instrument panel                                 |
| B25  | Intake air temperature (IAT) sensor              |
| Y102 | Intake manifold air control solenoid             |
| B69  | Knock sensor (KS)                                |
| A192 | Lamps control module                             |
| B30  | Mass air flow (MAF) sensor                       |
| M73  | Secondary air injection (AIR) pump               |
| K152 | Secondary air injection (AIR) pump relay         |
| Y111 | Secondary air injection (AIR) solenoid           |
| B106 | Steering position sensor                         |
| B147 | Throttle position (TP) sensor                    |
| M89  | Throttle position motor                          |
| A61  | Traction control module                          |
| A57  | Transmission control module (TCM)                |
| 15   | Under rear window shelf                          |



|                   |                  |                          |              |
|-------------------|------------------|--------------------------|--------------|
| bl = blue         | br = brown       | el = cream               | ge = yellow  |
| gn = green        | gr = grey        | nf = neutral             | og = orange  |
| rs = pink         | rt = red         | sw = black               | vi = violet  |
| ws = white        | hbl = light blue | hgn = light green        | rbr = maroon |
| x = braided cable | y = high tension | z = non-cable connection |              |

**NOTE:** In certain diagrams (Citroen, Peugeot & Renault), colour codes are replaced by numbers which are used to identify a particular cable and not the colour. In this instance, the cables will be numbered at each end close to the harness connector.

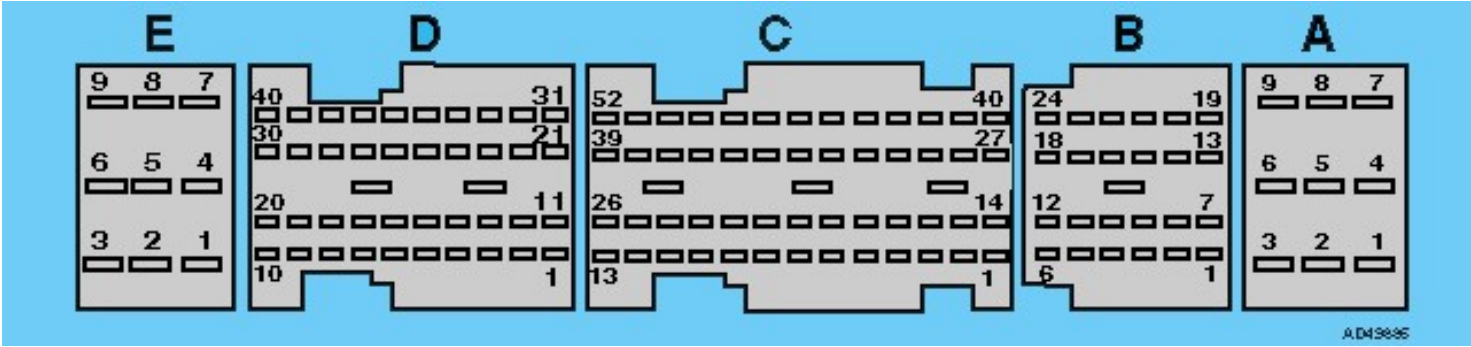

