



B161	AC refrigerant pressure sensor
G1	Alternator
31	Battery -
30	Battery +
CAN	Controller area network (data bus)
B54	Crankshaft position (CKP) sensor
X1	Data link connector (DLC)
A35	Engine control module (ECM)
K12-I	Engine coolant blower motor relay 1
K12-III	Engine coolant blower motor relay 3
B24	Engine coolant temperature (ECT) sensor
S186	Engine coolant temperature (ECT) switch
H63	Engine malfunction indicator lamp (MIL)
Y104	Evaporative emission (EVAP) canister purge valve
M12	Fuel pump (FP)
F	Fuse
X28-II	Fuse box/relay plate, engine bay 1
X28-III	Fuse box/relay plate, engine bay 2
X28-I	Fuse box/relay plate, fascia 1
X28-IV	Fuse box/relay plate, fascia 2
B72-I	Heated oxygen sensor (HO2S) 1 - before cat
B72-II	Heated oxygen sensor (HO2S) 2 - after cat
Y99	Idle air control (IAC) valve
T1	Ignition coil
15	Ignition switch - ignition ON
Y3	Injector
A5	Instrument panel
A75	Instrumentation control module
B25	Intake air temperature (IAT) sensor
B69	Knock sensor (KS)
B83	Manifold absolute pressure (MAP) sensor
A11-I	Multifunction control module 1
A11-II	Multifunction control module 2
S231	Power steering pressure (PSP) switch
P7	Tachometer
B147	Throttle position (TP) sensor
B33	Vehicle speed sensor (VSS)
P9	Vehicle speedometer

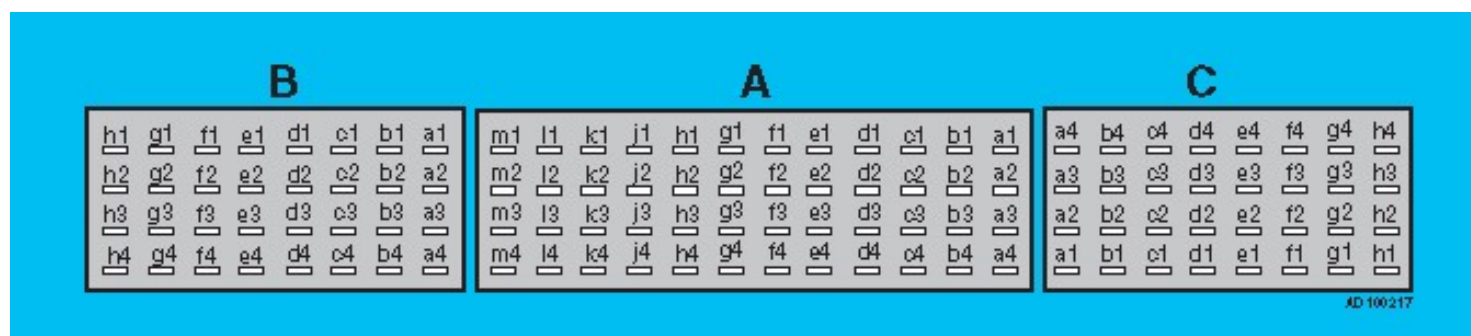

bl = blue	br = brown	el = cream	ge = yellow
gn = green	gr = grey	nf = neutral	og = orange
rs = pink	rt = red	sw = black	vi = violet
ws = white	hbl = light blue	hgn = light green	rbr = maroon
x = braided cable	y = high tension	z = non-cable connection	

NOTE: In certain diagrams (Citroen, Peugeot & Renault), colour codes are replaced by numbers which are used to identify a particular cable and not the colour. In this instance, the cables will be numbered at each end close to the harness connector.

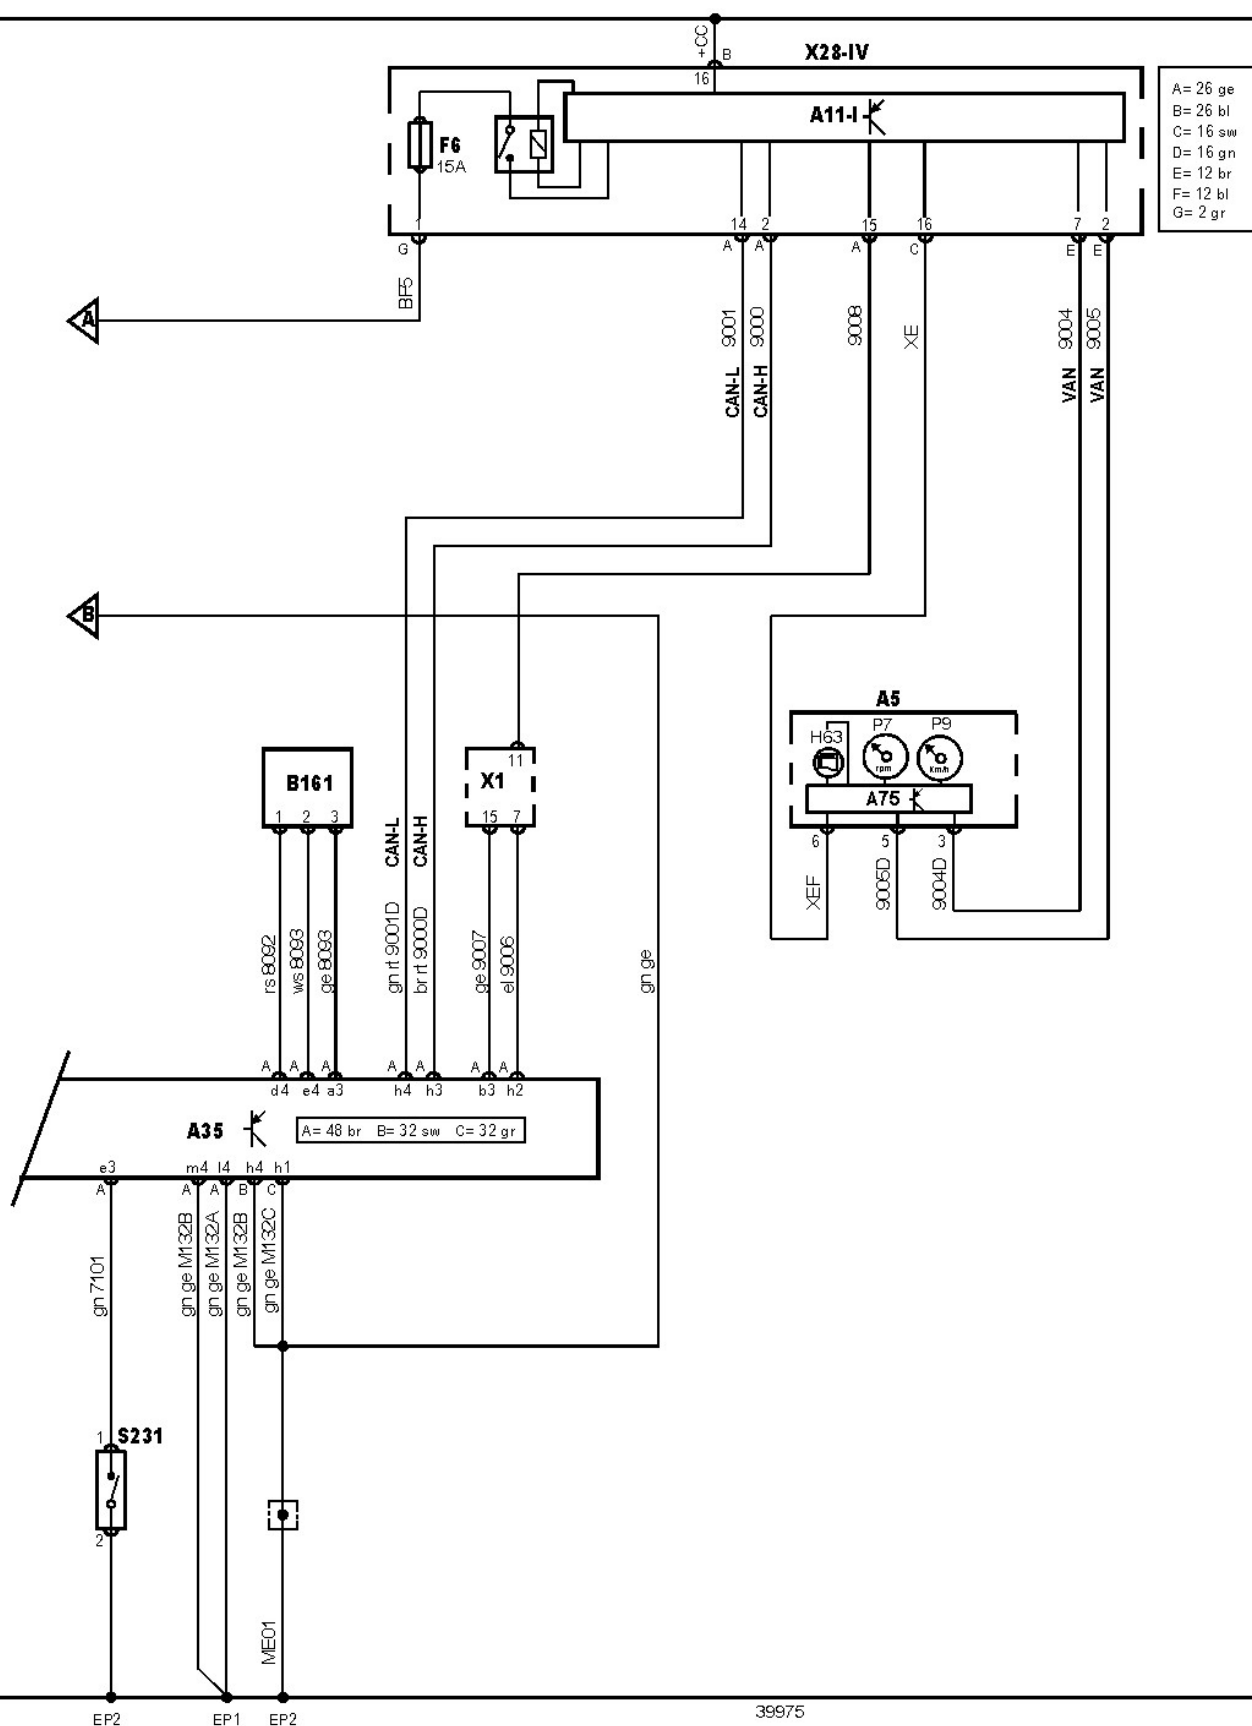

39975