



A63	AC control module
A142	AC temperature sensors control module
B121	Barometric pressure (BARO) sensor
31	Battery -
30	Battery +
A124	Coded keypad
B54	Crankshaft position (CKP) sensor
X1	Data link connector (DLC)
EP	Earth point
A35	Engine control module (ECM)
B24	Engine coolant temperature (ECT) sensor
H63	Engine malfunction indicator lamp (MIL)
S25	Engine oil pressure warning lamp switch
Y28	Exhaust gas recirculation (EGR) solenoid
A150	Fuel injection pump
Y132	Fuel injection timing solenoid
B171	Fuel lever position sensor
Y12	Fuel shut-off solenoid
F	Fuse
X28-I	Fuse box/relay plate, engine bay
X28-II	Fuse box/relay plate, fascia 1
R5	Glow plug
A104	Glow plug control module
H25	Glow plug warning lamp
Y56	Idle speed control (ISC) actuator
15	Ignition switch - ignition ON
A162	Immobilizer control module
B184	Immobilizer transponder
S39	Inertia fuel shut-off (IFS) switch
B141	Injector needle lift sensor
A5	Instrument panel
A75	Instrumentation control module
A171	Relay module (RM)
X92	Shorting link connector
P7	Tachometer
A57	Transmission control module (TCM)
B33	Vehicle speed sensor (VSS)
P9	Vehicle speedometer



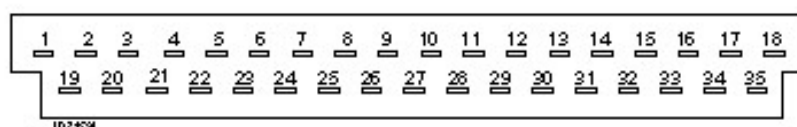

1	Barometric pressure (BARO) sensor - in ECM
2	Crankshaft position (CKP) sensor
3	Data link connector (DLC) - fascia fuse box/relay plate
4	Engine control module (ECM)
5	Engine coolant temperature (ECT) sensor
6	Exhaust gas recirculation (EGR) solenoid
7	Fuel injection pump
8	Fuel injection timing solenoid
9	Fuel lever position sensor
10	Fuel shut-off solenoid
11	Glow plug control module
12	Glow plugs
13	Idle speed control (ISC) actuator
14	Inertia fuel shut-off (IFS) switch - some models
15	Injector needle lift sensor
16	Injectors
17	Relay module (RM)
18	Vehicle speed sensor (VSS) - transmission

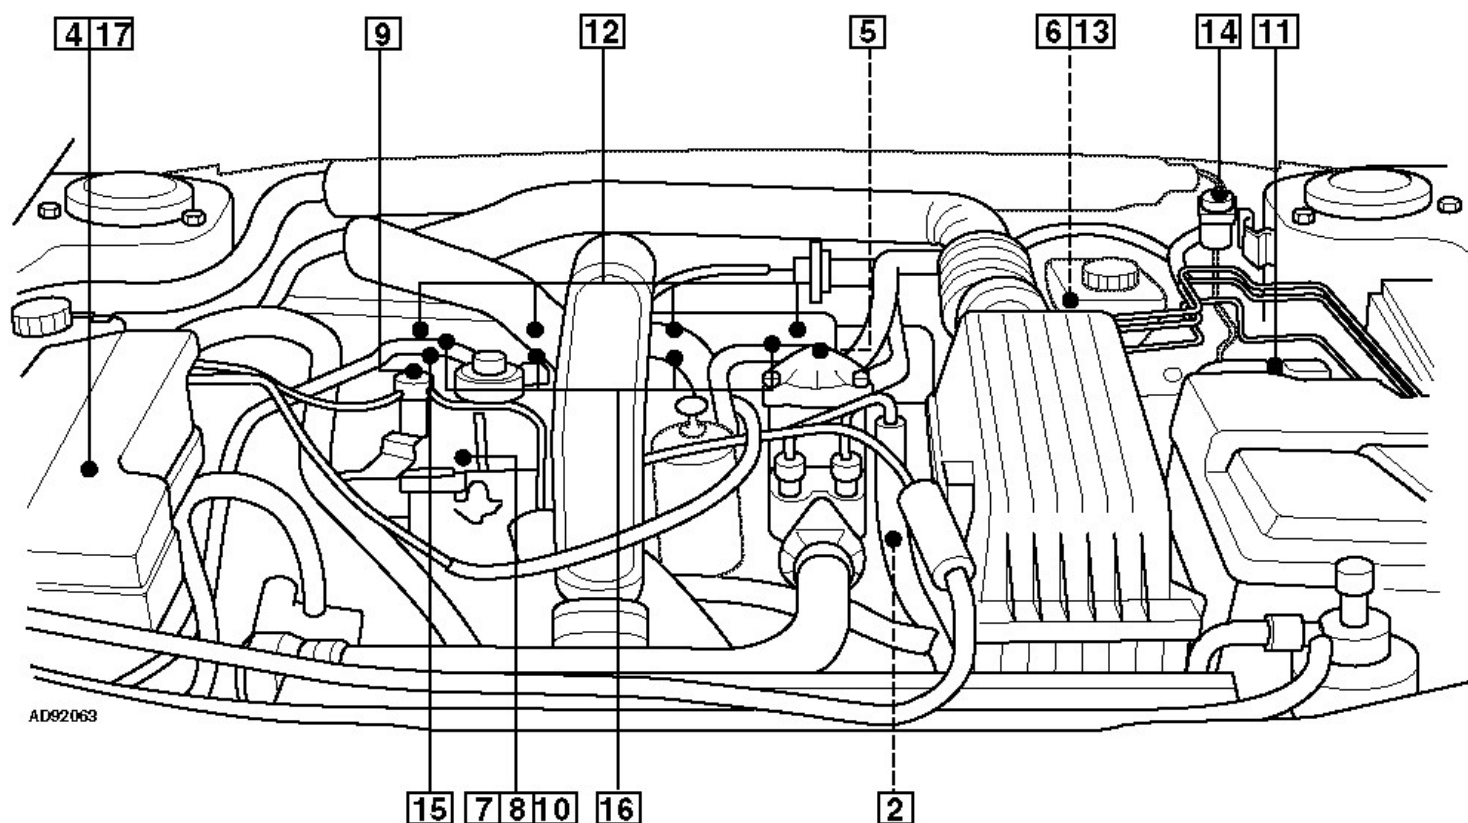