


Fuse and relay box, MY 1995 - 1998

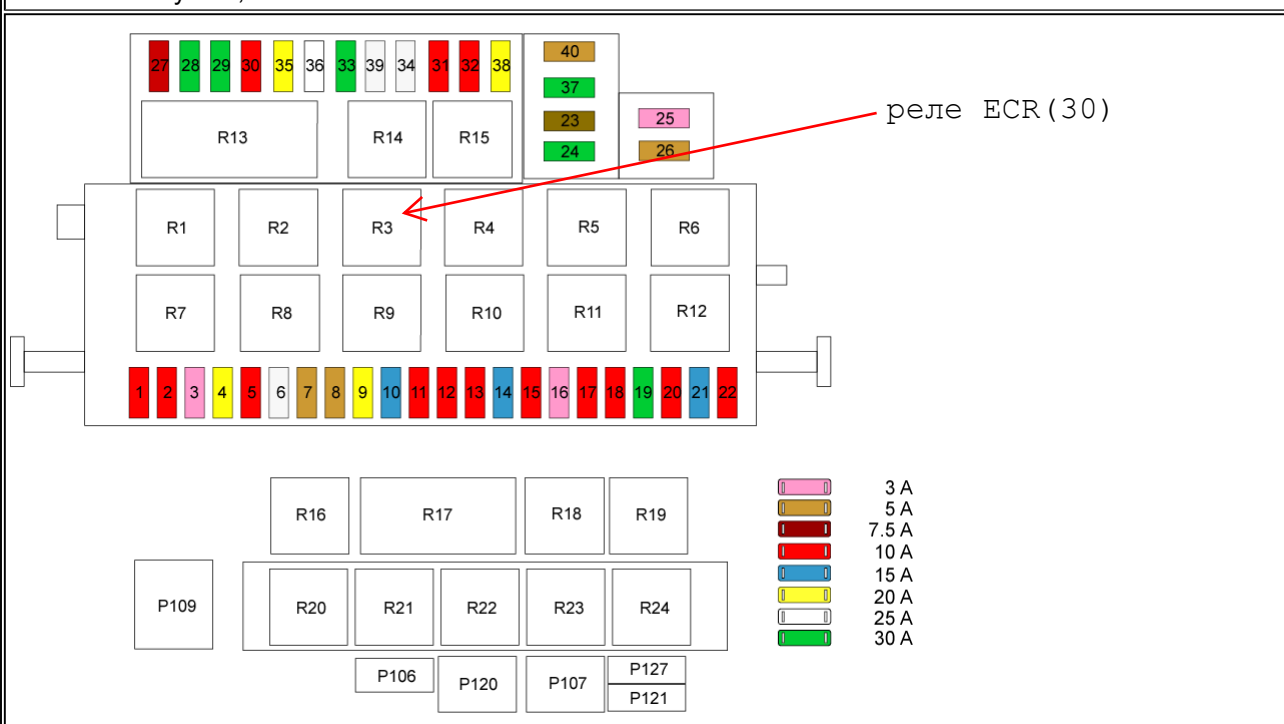

Location 1 LHD is shown	Location 2 No location drawing available	Fuse 1 10 A Headlights Headlight levelling Instruments
Fuse 2 10 A Headlights Headlight levelling Instruments	Fuse 3 3 A Sidelights Licence plate light(s)	Fuse 4 20 A Dipped beam Wiper system Heating and ventilation
Fuse 5 10 A Wiper system	Fuse 6 25 A Heating and ventilation Air conditioning	Fuse 7 5 A Headlights Instruments Sidelights Licence plate light(s) Interior lights Alarm horn Instruments Trailer connector socket
Fuse 8 5 A Headlights Instruments Sidelights Licence plate light(s) Interior lights Instruments Trailer connector socket	Fuse 9 20 A De-icing	Fuse 10 15 A Fog light(s) Trailer connector socket
Fuse 11 10 A ABS	Fuse 12 10 A Headlights	Fuse 13 10 A Horns

<div>Fuse 1415 A</div> ABS Air conditioning Reversing light(s) Central locking Engine control Windows Automatic transmission HALL system	<div>Fuse 1510 A</div> Engine management (5A also used)	<div>Fuse 163 A</div> Interior lights De-icing Sliding roof
<div>Fuse 1710 A</div> Hazard warning lights Direction indicators Trailer connector socket	<div>Fuse 1810 A</div> Engine management	<div>Fuse 1930 A</div> Engine management Air conditioning
<div>Fuse 2010 A</div> ABS Brake lights Automatic transmission	<div>Fuse 2115 A</div> Cigarette lighter Instrument panel Interior light(s) CD player	<div>Fuse 2210 A</div> Diagnosis system Air conditioning
<div>Fuse 23</div> Engine management Air conditioning	<div>Fuse 2430 A</div> Wash/wipe system	<div>Fuse 253 A</div> Engine management (60A also used)
<div>Fuse 265 A</div> Engine management	<div>Fuse 2750 A</div> Heating and ventilation	<div>Fuse 2830 A</div> Automatic transmission
<div>Fuse 2930 A</div> Automatic transmission	<div>Fuse 3010 A</div> Door light(s) Alarm horn Central locking Windows Trailer connector socket	<div>Fuse 3110 A</div> Central locking Alarm horn
<div>Fuse 3210 A</div> Alarm horn	<div>Fuse 3330 A</div> Heating and ventilation	<div>Fuse 3425 A</div> Air conditioning
<div>Fuse 3520 A</div> Cigarette lighter Trailer connector socket	<div>Fuse 36</div> Not used	<div>Fuse 3730 A</div> Windows Comfort function
<div>Fuse 3820 A</div> Seats	<div>Fuse 3925 A</div> Air conditioning	<div>Fuse 405 A</div> Engine management
<div>Relay R1</div> Not used	<div>Relay R2</div> Wash/wipe, rear	<div>Relay R3</div> Power
<div>Relay R4</div> Power distribution	<div>Relay R5</div> Not used	<div>Relay R6</div> Hazard warning lights
<div>Relay R7</div>	<div>Relay R8</div>	<div>Relay R9</div>

Headlight washers	Intermittent wiper, front	Buzzer
Relay R10 Rear fog light(s)	Relay R11 Horn	Relay R12 Fuel pump
Relay R13 Headlights	Relay R14 Heated rear screen	Relay R15 Wiper system
Relay R16 Heated windscreen	Relay R17 Not used	Relay R18 Not used
Relay R19 Not used	Relay R20 Heated windscreen cut-off	Relay R21 Central locking
Relay R22 Not used	Relay R23 Daylight system	Relay R24 Not used
Other P106 HALL system	Other P107 Power distribution 58B	Other P109 Data communication
Other P120 Power distribution 15A	Other P121 Power distribution 54	Other P127 Power distribution TK