


ADP 000000

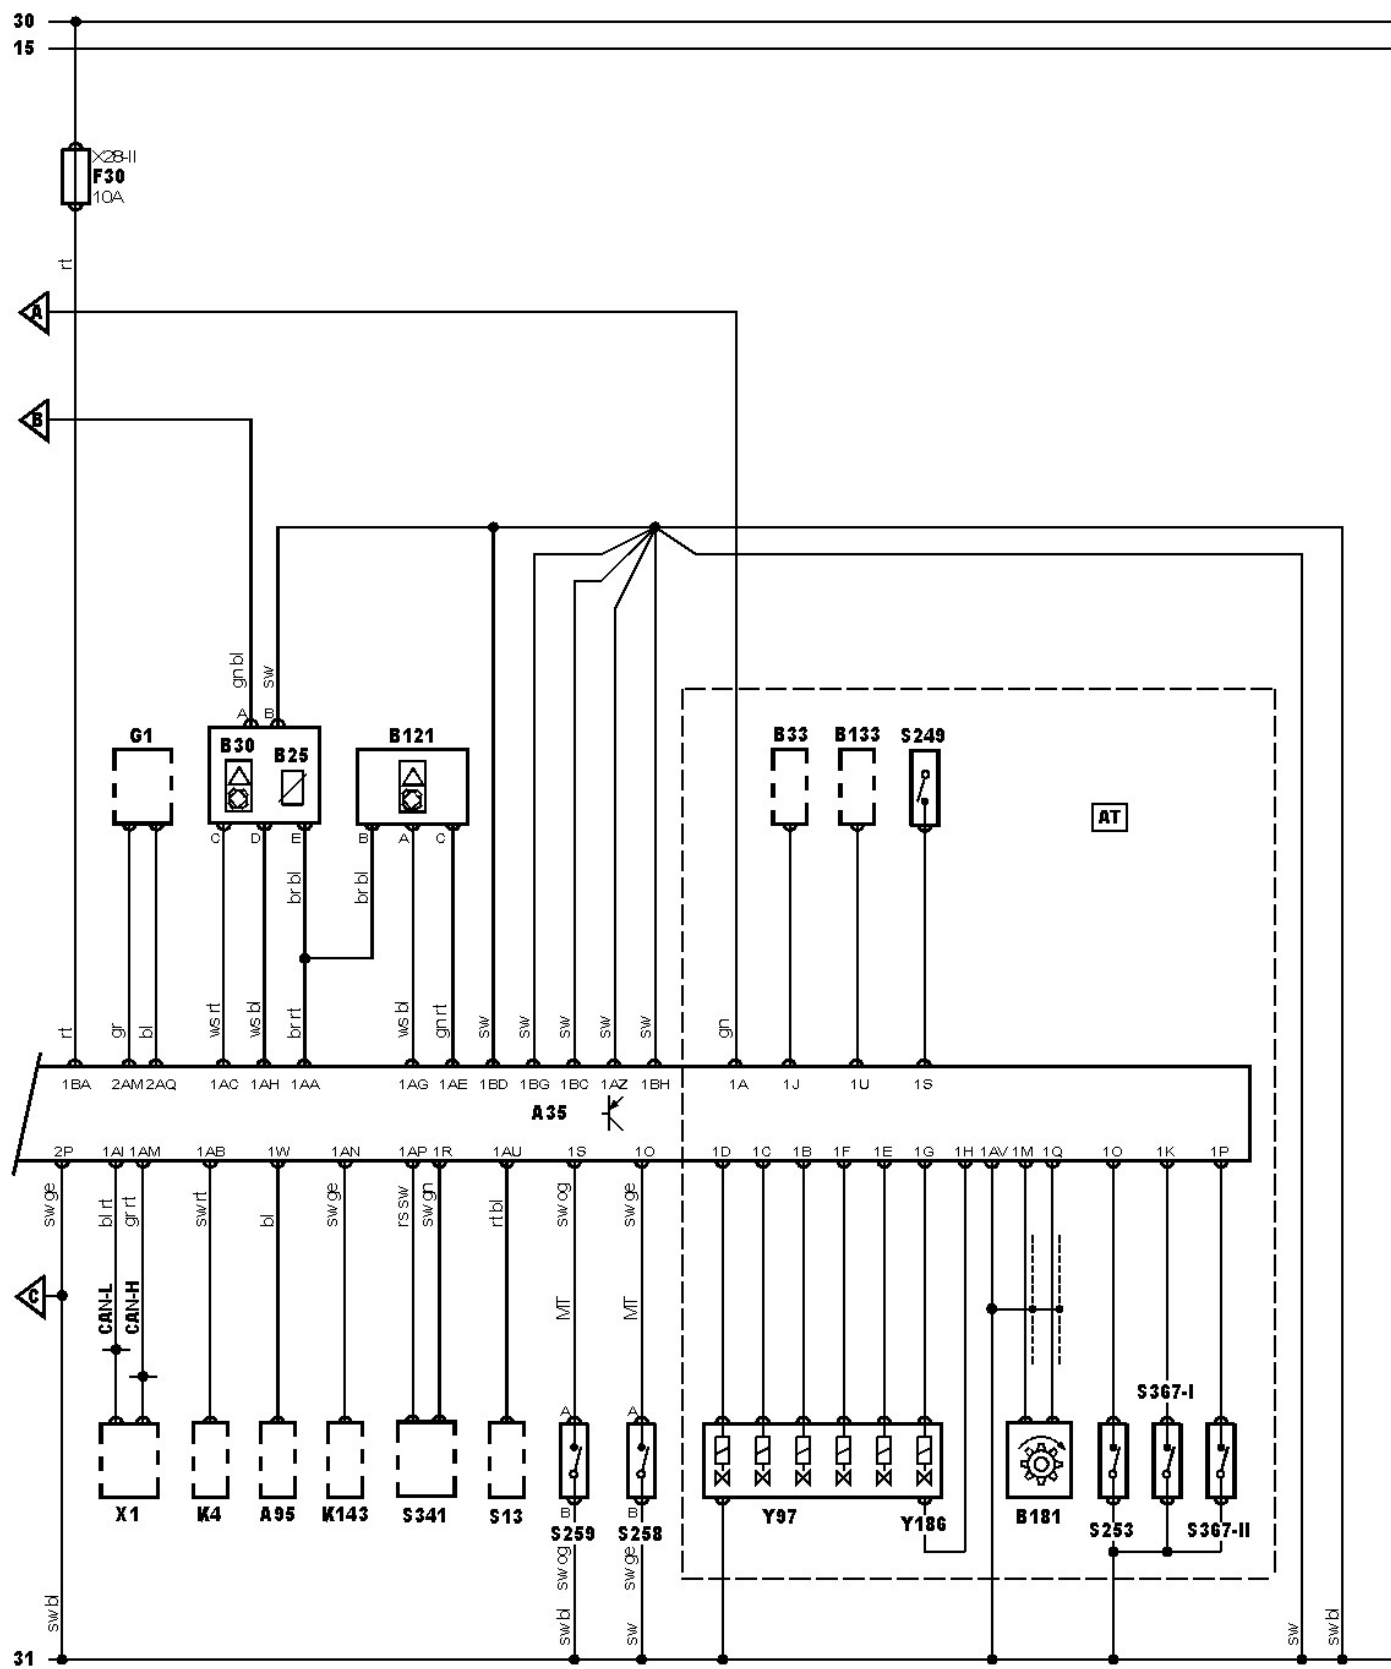

301542

K143	AC compressor clutch relay
S341	AC refrigerant triple pressure switch
G1	Alternator
C3	Audio unit suppressor
B121	Barometric pressure (BARO) sensor
31	Battery -
30	Battery +
S13	Brake pedal position (BPP) switch
B132	Camshaft position (CMP) sensor
S258	Clutch pedal position (CPP) switch
CAN-H	Controller area network (data bus) high
CAN-L	Controller area network (data bus) low
B54	Crankshaft position (CKP) sensor
X1	Data link connector (DLC)
K46	Engine control (EC) relay
A35	Engine control module (ECM)
A95	Engine coolant blower motor control module
B24	Engine coolant temperature (ECT) sensor
Y104	Evaporative emission (EVAP) canister purge valve
Y151	Exhaust gas recirculation (EGR) valve actuator
M12	Fuel pump (FP)
K20	Fuel pump (FP) relay
F	Fuse
X28-II	Fuse box/relay plate, engine bay
X28-I	Fuse box/relay plate, fascia
B72-II	Heated oxygen sensor (HO2S) - after cat
B72-I	Heated oxygen sensor (HO2S) - before cat
Y99	Idle air control (IAC) valve
T1	Ignition coil
15	Ignition switch - ignition ON
Y3	Injector
B25	Intake air temperature (IAT) sensor
Y102-I	Intake manifold air control solenoid 1
Y102-II	Intake manifold air control solenoid 2
B69	Knock sensor (KS)
B83	Manifold absolute pressure (MAP) sensor
B30	Mass air flow (MAF) sensor
S259	Neutral position (NP) switch
K4	Starter motor relay
B147	Throttle position (TP) sensor
Y186	Transmission fluid pressure (TFP) solenoid
B133	Transmission fluid temperature (TFT) sensor
S253	Transmission mode selection switch
S249	Transmission range (TR) switch
S367-I	Transmission shift control switch 1 - upshift
S367-II	Transmission shift control switch 2 - downshift
Y97	Transmission shift solenoid (SS)
B181	Transmission turbine shaft speed (TSS) sensor
B33	Vehicle speed sensor (VSS)