



X88	AC connector
B132	Camshaft position (CMP) sensor
S57	Closed throttle position (CTP) switch
B54	Crankshaft position (CKP) sensor
X1	Data link connector (DLC)
A166	Distributor
A35	Engine control module (ECM)
K46	Engine control relay
B24	Engine coolant temperature (ECT) sensor
Y104	Evaporative emission (EVAP) canister purge valve
Y28	Exhaust gas recirculation (EGR) solenoid
M12	Fuel pump
K20	Fuel pump relay
B72	Heated oxygen sensor (HO2S)
Y56	Idle speed control (ISC) actuator
B151	Idle speed control (ISC) actuator position sensor
A52	Ignition amplifier
A162	Immobilizer control module
Y3	Injector
B25	Intake air temperature (IAT) sensor
Y102	Intake manifold air control solenoid
B69	Knock sensor (KS)
B30	Mass air flow (MAF) sensor
A177	Throttle control unit
B147	Throttle position (TP) sensor
A57	Transmission control module (TCM)
B33	Vehicle speed sensor (VSS)


crankshaft pos. sensor

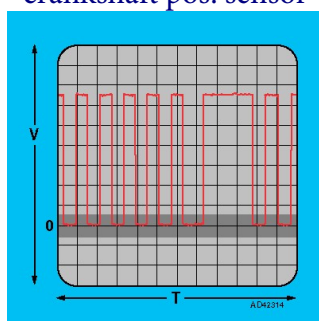

camshaft pos. sensor

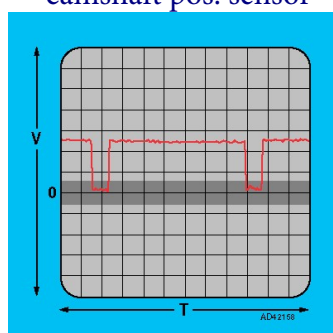

idle actuator

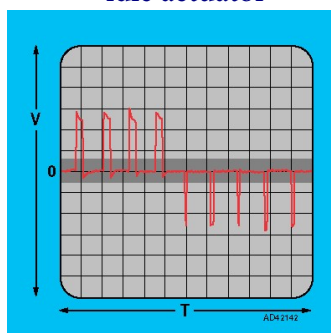

ignition amplifier

