


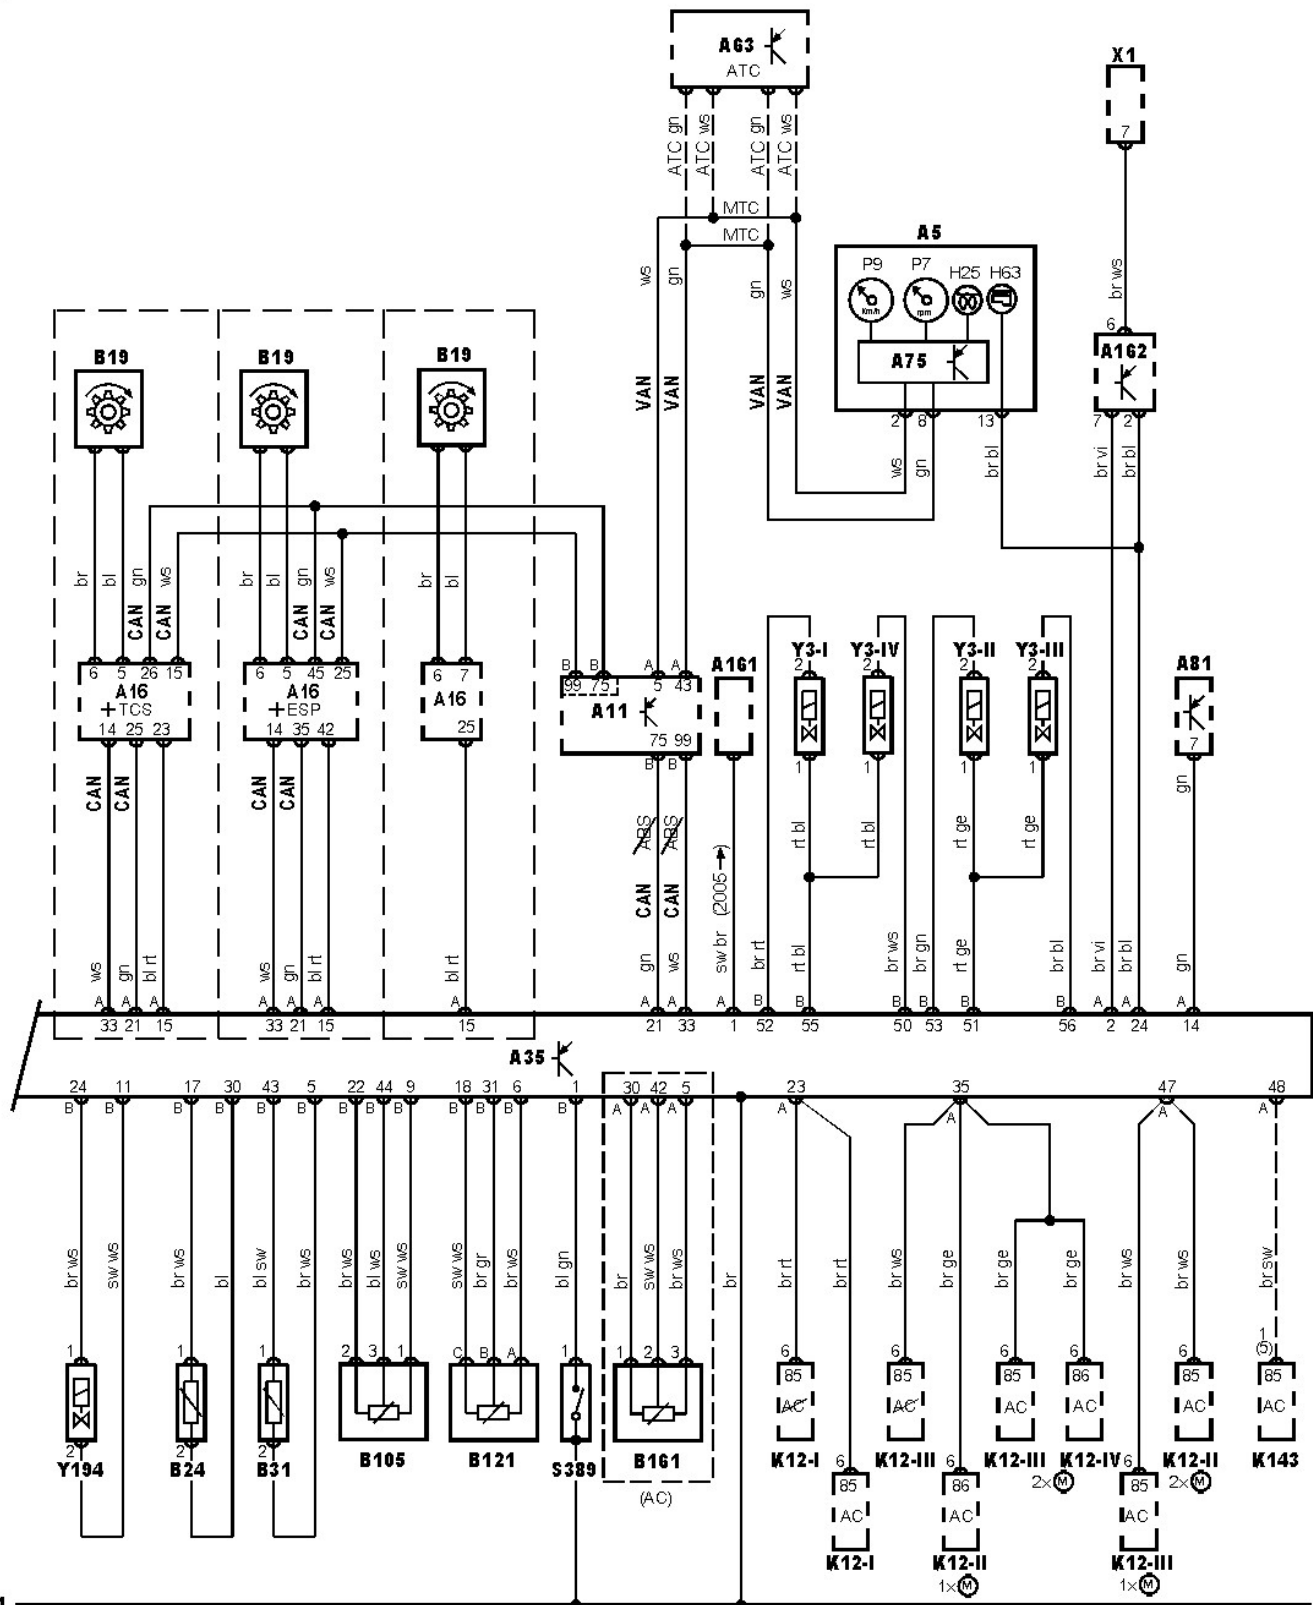

30

15

50



31

301904

A16	ABS control module
K143	AC compressor clutch relay
A63	AC control module
B161	AC refrigerant pressure sensor
B138	Accelerator pedal position (APP) sensor
B121	Barometric pressure (BARO) sensor
31	Battery -
30	Battery +
S13	Brake pedal position (BPP) switch
B132	Camshaft position (CMP) sensor
S258	Clutch pedal position (CPP) switch
CAN	Controller area network (data bus)
B54	Crankshaft position (CKP) sensor
X1	Data link connector (DLC)
A161	Digital multifunction display
K46	Engine control (EC) relay
A35	Engine control module (ECM)
K12	Engine coolant blower motor relay
K12-I	Engine coolant blower motor relay 1
K12-II	Engine coolant blower motor relay 2
K12-III	Engine coolant blower motor relay 3
K12-IV	Engine coolant blower motor relay 4
B24	Engine coolant temperature (ECT) sensor
H63	Engine malfunction indicator lamp (MIL)
B86	Engine oil level sensor
S389	Engine oil pressure switch
Y28	Exhaust gas recirculation (EGR) solenoid
B149	Exhaust gas recirculation (EGR) valve position sensor
Y194	Fuel flow control valve
B186	Fuel rail pressure (FRP) sensor
B31	Fuel temperature sensor
F	Fuse
X28	Fuse box/relay plate
A104	Glow plug control module
H25	Glow plug warning lamp
R5	Glow plugs
K79	Ignition main circuits relay
15	Ignition switch - ignition ON
50	Ignition switch - start signal
A162	Immobilizer control module
Y3	Injector
A5	Instrument panel

A75	Instrumentation control module
B25	Intake air temperature (IAT) sensor
Y179	Intake manifold air control actuator
B155	Intake manifold air control actuator position sensor
B30	Mass air flow (MAF) sensor
A11	Multifunction control module
A81	Power steering control module
P7	Tachometer
B105	Turbocharger (TC) boost pressure sensor
Y196	Turbocharger (TC) control solenoid
VAN	Vehicle area network (data bus)
A123	Vehicle speed sensor (VSS) signal amplifier
P9	Vehicle speedometer
B19	Wheel speed sensor, left front

