


- 19 □18 □17 □16 □15 □14 □13 □12 □11 □10 □9 □8 □7 □6 □5 □4 □3 □2 □1  
□37 □36 □35 □34 □33 □32 □31 □30 □29 □28 □27 □26 □25 □24 □23 □22 □21 □20  
□55 □54 □53 □52 □51 □50 □49 □48 □47 □46 □45 □44 □43 □42 □41 □40 □39 □38

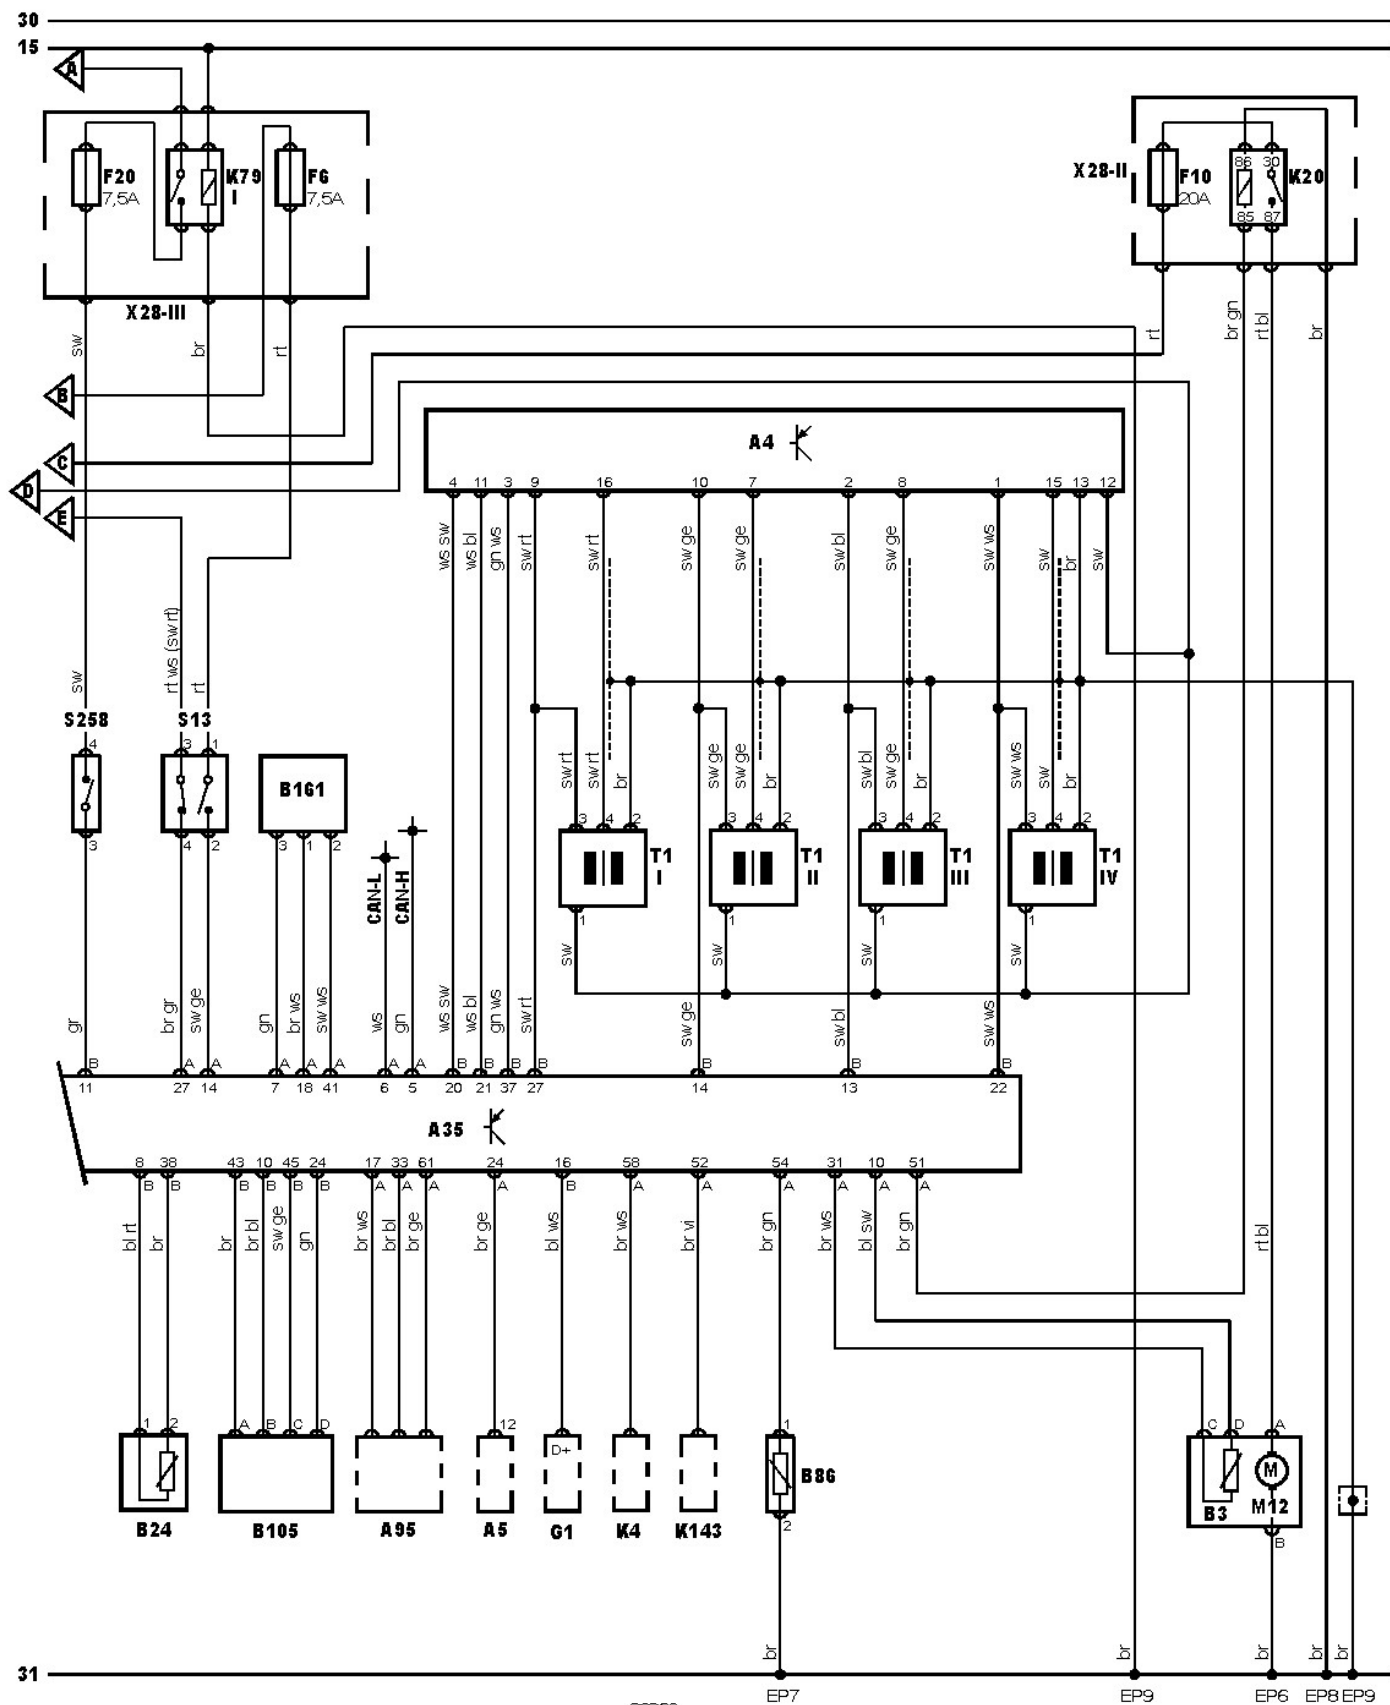

K143	AC compressor clutch relay	<b>Z20NET Vectra C (2006-)</b>
B161	AC refrigerant pressure sensor	
B138	Accelerator pedal position (APP) sensor	
G1	Alternator	
31	Battery -	
30	Battery +	
S13	Brake pedal position (BPP) switch	
S258	Clutch pedal position (CPP) switch	
CAN-H	Controller area network (data bus) high	
CAN-L	Controller area network (data bus) low	
B54	Crankshaft position (CKP) sensor	
X1	Data link connector (DLC)	
A35	Engine control module (ECM)	
K46	Engine control relay	
A95	Engine coolant blower motor control module	
B24	Engine coolant temperature (ECT) sensor	
B86	Engine oil level sensor	
S389	Engine oil pressure switch	
Y104	Evaporative emission (EVAP) canister purge valve	
B3	Fuel gauge tank sensor	
M12	Fuel pump	
K20	Fuel pump relay	
F	Fuse	
X28-I	Fuse box/relay plate - engine bay 1	
X28-III	Fuse box/relay plate - fascia	
X28-II	Fuse box/relay plate - load area	
B72	Heated oxygen sensor (HO2S)	
T1	Ignition coil	
A4	Ignition control module (ICM)	
K79	Ignition main circuits relay	
15	Ignition switch - ignition ON	
Y3	Injector	
A5	Instrument panel	
B83	Manifold absolute pressure (MAP) sensor	
B30	Mass air flow (MAF) sensor	
K4	Starter motor relay	
A236	Steering column function control module	
A177	Throttle control unit	
M89	Throttle position motor	
B105	Turbocharger (TC) boost pressure sensor	
Y153	Turbocharger (TC) bypass valve	
Y68	Turbocharger (TC) wastegate regulating valve	