


39	38	37	36	35	34	33	32	31	22	21	20	19	18	17	16	15	7	6	5	4	3	2	1	108	107	106	105	104	103	102	101
48	47	46	45	44	43	42	41	40	30	29	28	27	26	25	24	23	14	13	12	11	10	9	8	116	115	114	113	112	111	110	109

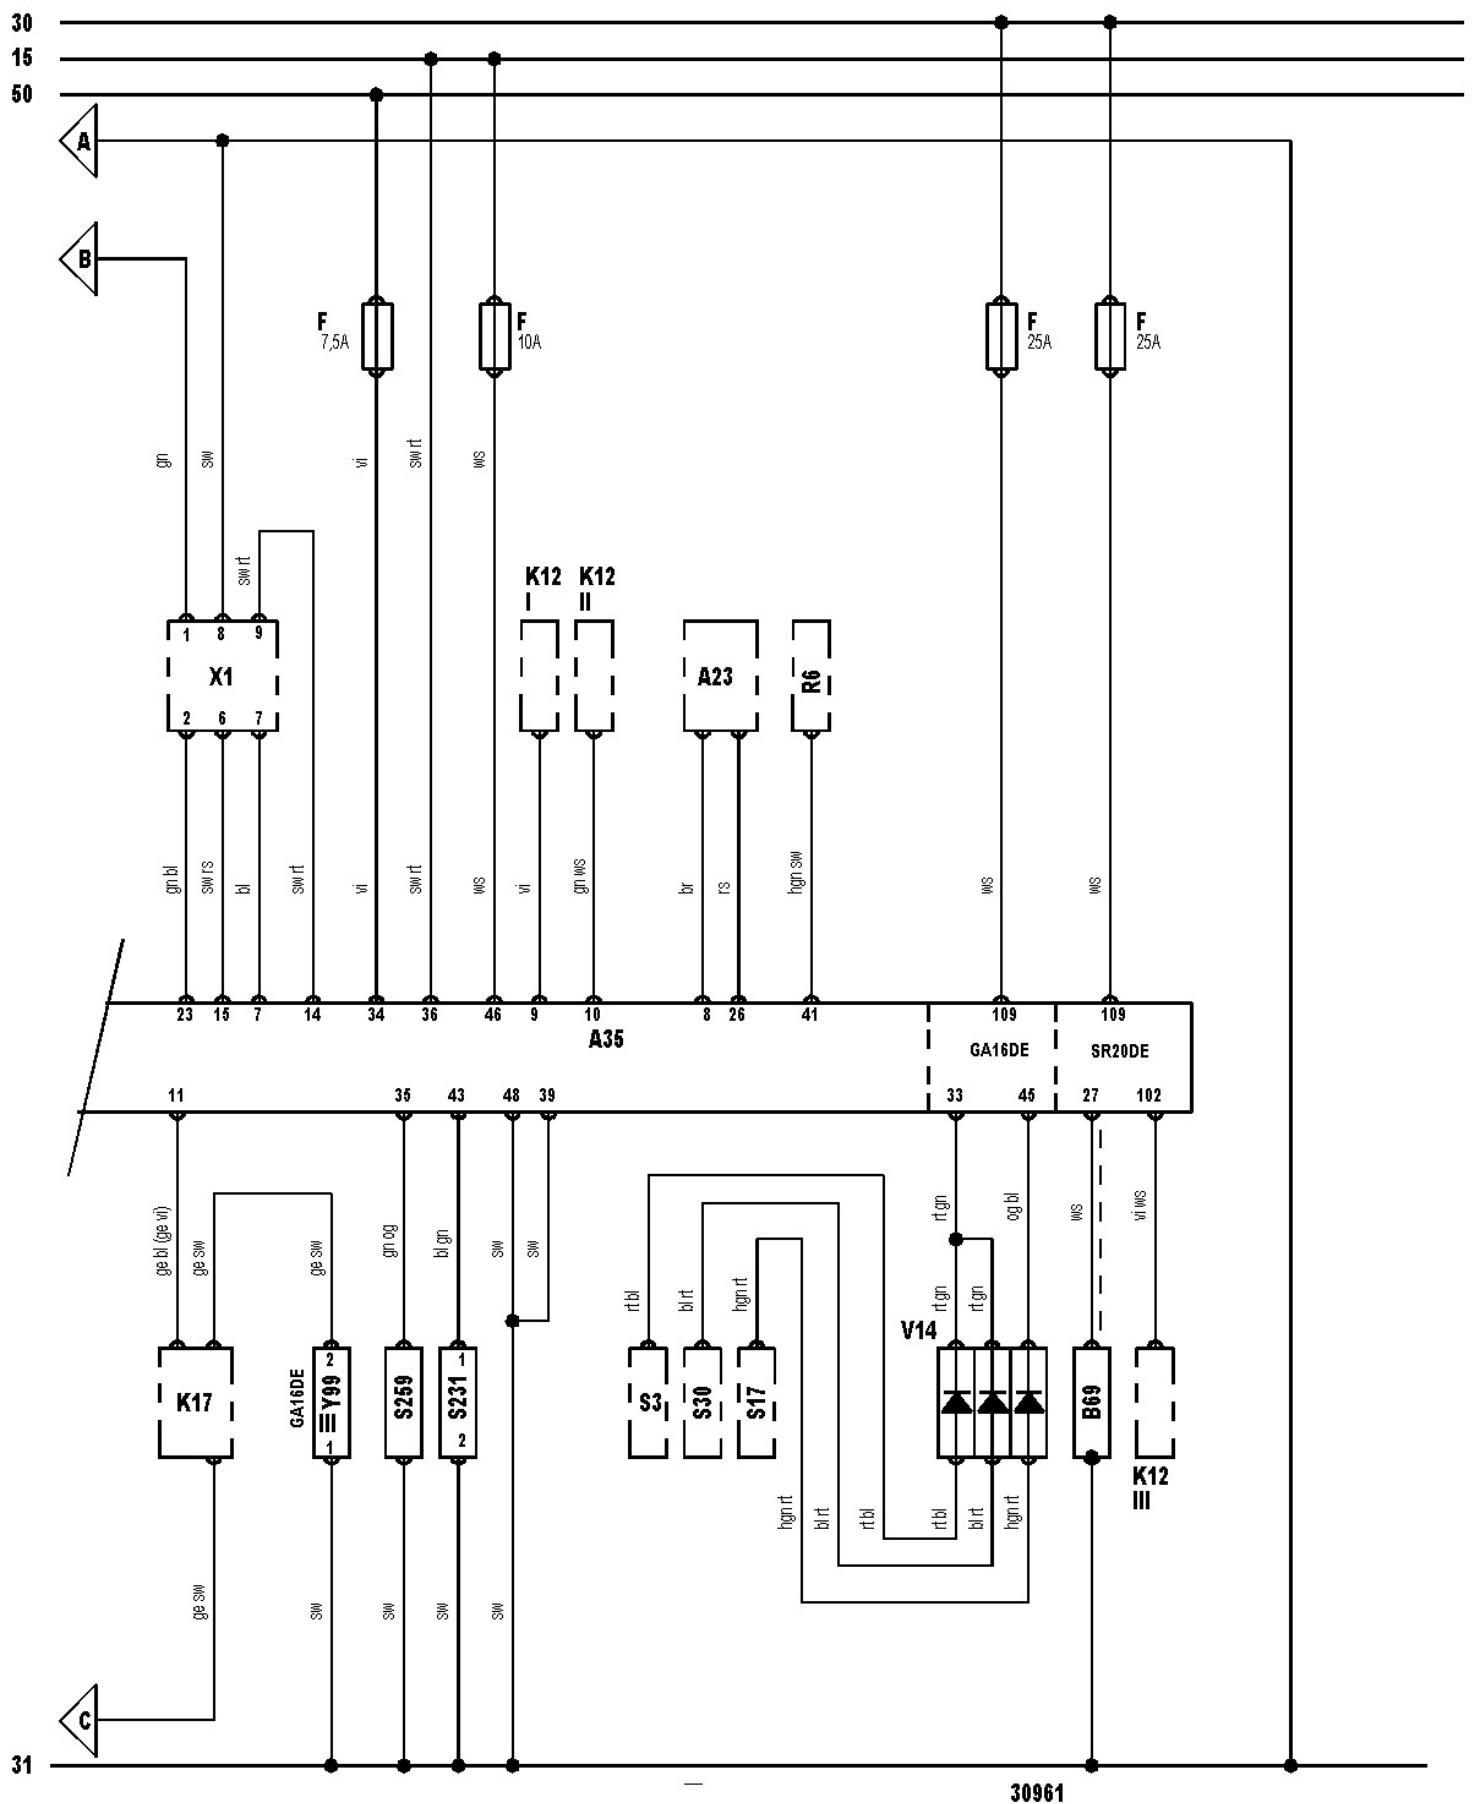

S51	AC evaporator temperature switch
K17	AC relay
Y99-III	Additional idle air control valve
A23	Alarm system control module
31	Battery -
30	Battery +
B132	Camshaft position (CMP) sensor
X1	Data link connector (DLC)
A35	Engine control module (ECM)
K46	Engine control relay
K12	Engine coolant blower motor relay
B24	Engine coolant temperature (ECT) sensor
H63	Engine malfunction indicator lamp (MIL)
Y104	Evaporative emission (EVAP) canister purge valve
Y28	Exhaust gas recirculation (EGR) solenoid
M12	Fuel pump
K20	Fuel pump relay
F	Fuse
S3	Headlamp switch
B72	Heated oxygen sensor (HO2S)
S30	Heated rear window switch
R6	Heater blower speed resistor
S17	Heater/AC motor switch
Y99-I	Idle air control (IAC) valve
Y99-II	Idle air control (IAC) valve, warm-up - 1,6
V14	Idle speed control (ISC) diode
A52	Ignition amplifier
T1	Ignition coil
R87	Ignition signal resistor
15	Ignition switch - ignition ON
50	Ignition switch - start signal
Y3	Injector
A5	Instrument panel
B69	Knock sensor (KS)
B30	Mass air flow (MAF) sensor
S259	Neutral position (NP) switch
S231	Power steering pressure (PSP) switch
P7	Tachometer
B147	Throttle position (TP) sensor
B33	Vehicle speed sensor (VSS)