


303483

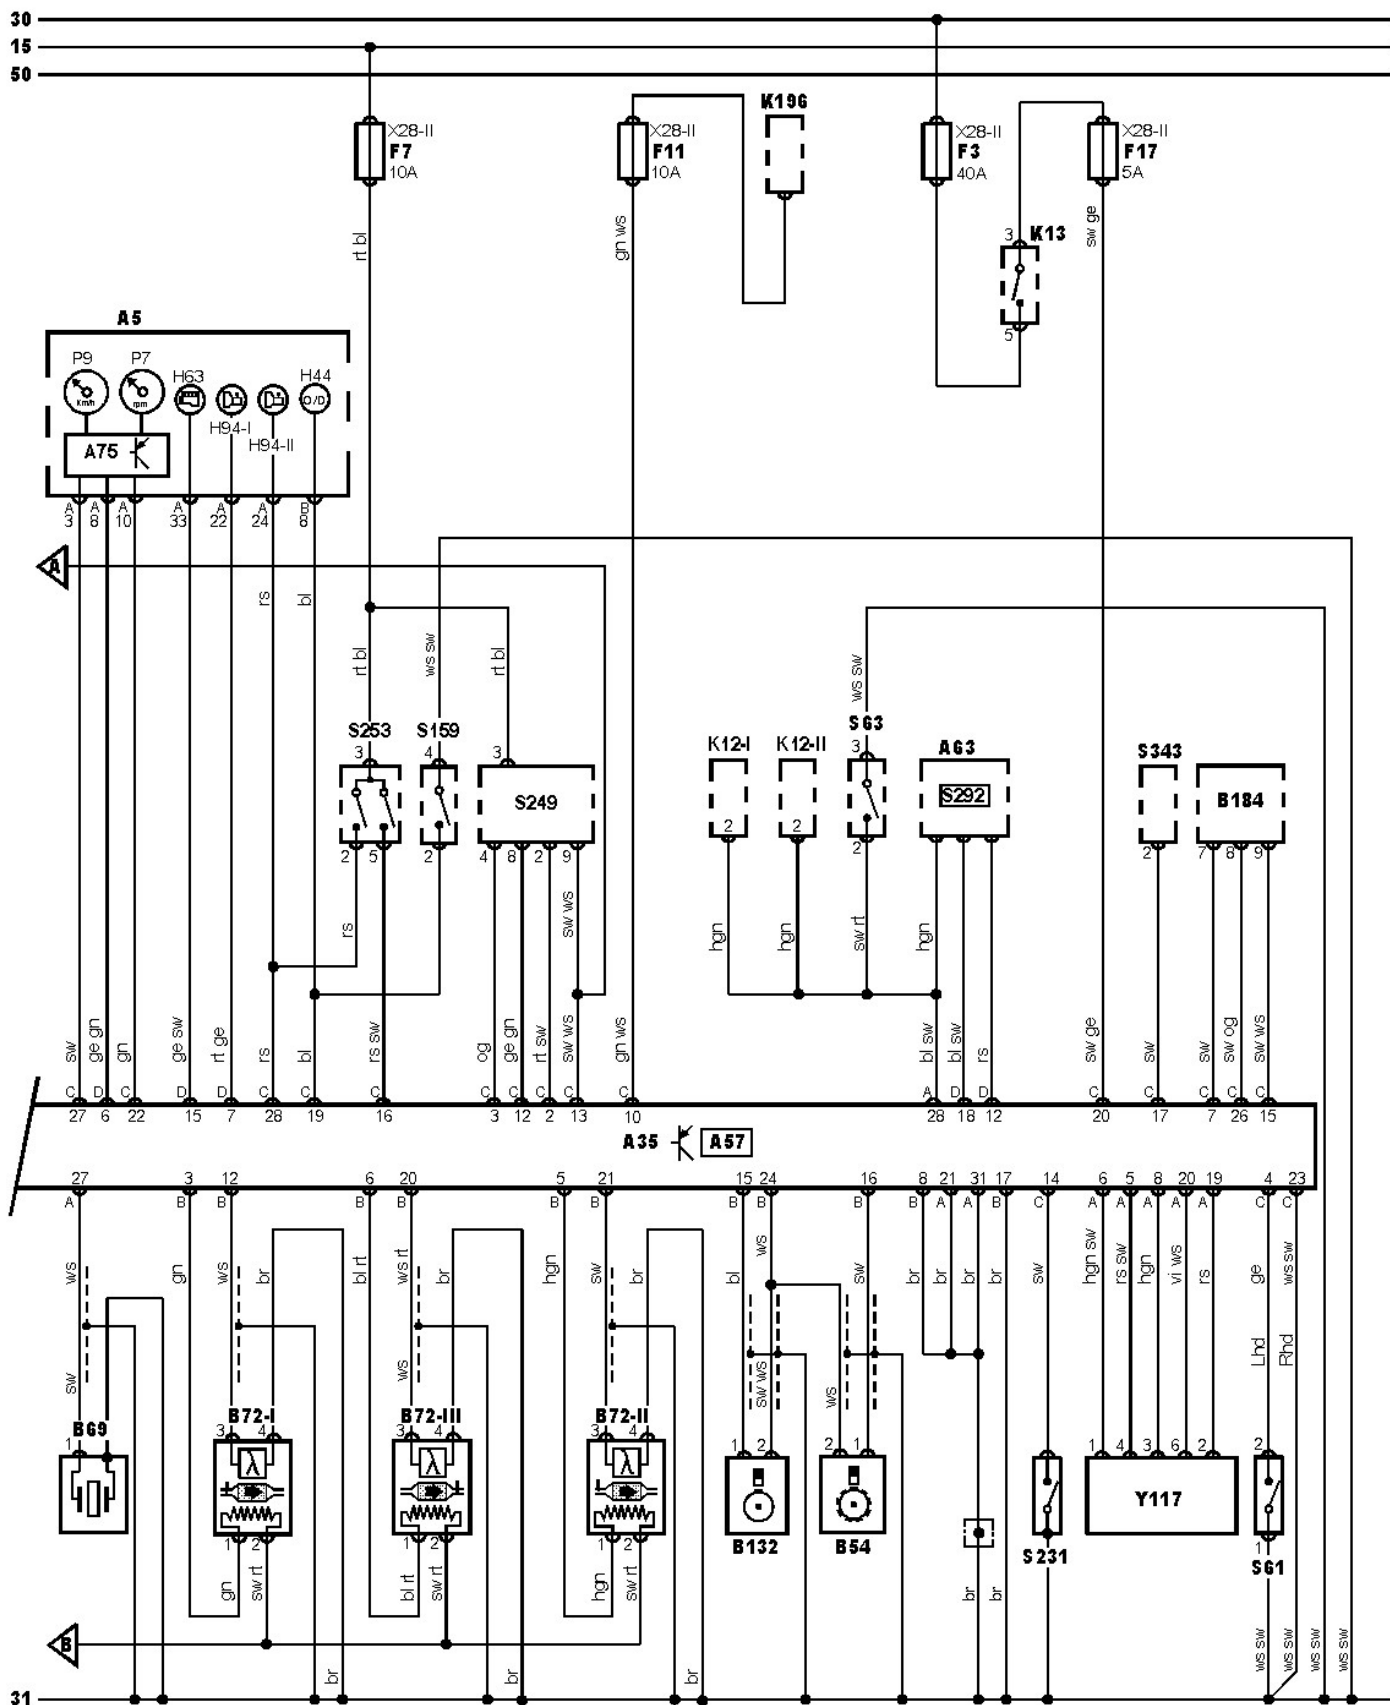



|         |   |
|---------|---|
| A63     | AC control module                                   |
| S63     | AC refrigerant pressure switch                      |
| S292    | AC/heater function control panel                    |
| 31      | Battery -   |
| 30      | Battery +   |
| S13     | Brake pedal position (BPP) switch                   |
| Y81     | Camshaft position (CMP) actuator                    |
| B132    | Camshaft position (CMP) sensor                      |
| B54     | Crankshaft position (CKP) sensor                    |
| X1      | Data link connector (DLC)                           |
| K46     | Engine control (EC) relay                           |
| A35     | Engine control module (ECM)                         |
| K12-I   | Engine coolant blower motor relay 1                 |
| K12-II  | Engine coolant blower motor relay 2                 |
| B24     | Engine coolant temperature (ECT) sensor             |
| H63     | Engine malfunction indicator lamp (MIL)             |
| Y104    | Evaporative emission (EVAP) canister purge valve    |
| M12     | Fuel pump (FP)                                      |
| K20     | Fuel pump (FP) relay                                |
| F       | Fuse  |
| X28-I   | Fuse box/relay plate, engine bay 1                  |
| X28-II  | Fuse box/relay plate, fascia 1                      |
| B72-I   | Heated oxygen sensor (HO2S) 1, bank 1               |
| B72-II  | Heated oxygen sensor (HO2S) 1, bank 2               |
| B72-III | Heated oxygen sensor (HO2S) 2                       |
| K13     | Heated rear window relay                            |
| Y99     | Idle air control (IAC) valve                        |
| A52     | Ignition amplifier                                  |
| T1      | Ignition coil                                       |
| S343    | Ignition key warning switch                         |
| 15      | Ignition switch - ignition ON                       |
| 50      | Ignition switch - start signal                      |
| B184    | Immobilizer read coil                               |
| Y3      | Injector  |
| A5      | Instrument panel                                    |
| A75     | Instrumentation control module                      |
| B25     | Intake air temperature (IAT) sensor                 |
| B69     | Knock sensor (KS)                                   |
| B30     | Mass air flow (MAF) sensor                          |
| H44     | Overdrive indicator lamp                            |
| S159    | Overdrive selection switch                          |
| S231    | Power steering pressure (PSP) switch                |
| K4      | Starter motor relay                                 |
| A198    | Supplementary restraint system (SRS) control module |
| P7      | Tachometer  |
| K196    | Tail lamps relay                                    |
| B147    | Throttle position (TP) sensor                       |
| A57     | Transmission control module (TCM)                   |
| S61     | Transmission kick-down switch                       |
| H94-I   | Transmission mode selection lamp 1                  |
| H94-II  | Transmission mode selection lamp 2                  |
| S253    | Transmission mode selection switch                  |
| S249    | Transmission range (TR) switch                      |
| Y117    | Transmission valve block                            |
| P9      | Vehicle speedometer                                 |