


- 0.055781

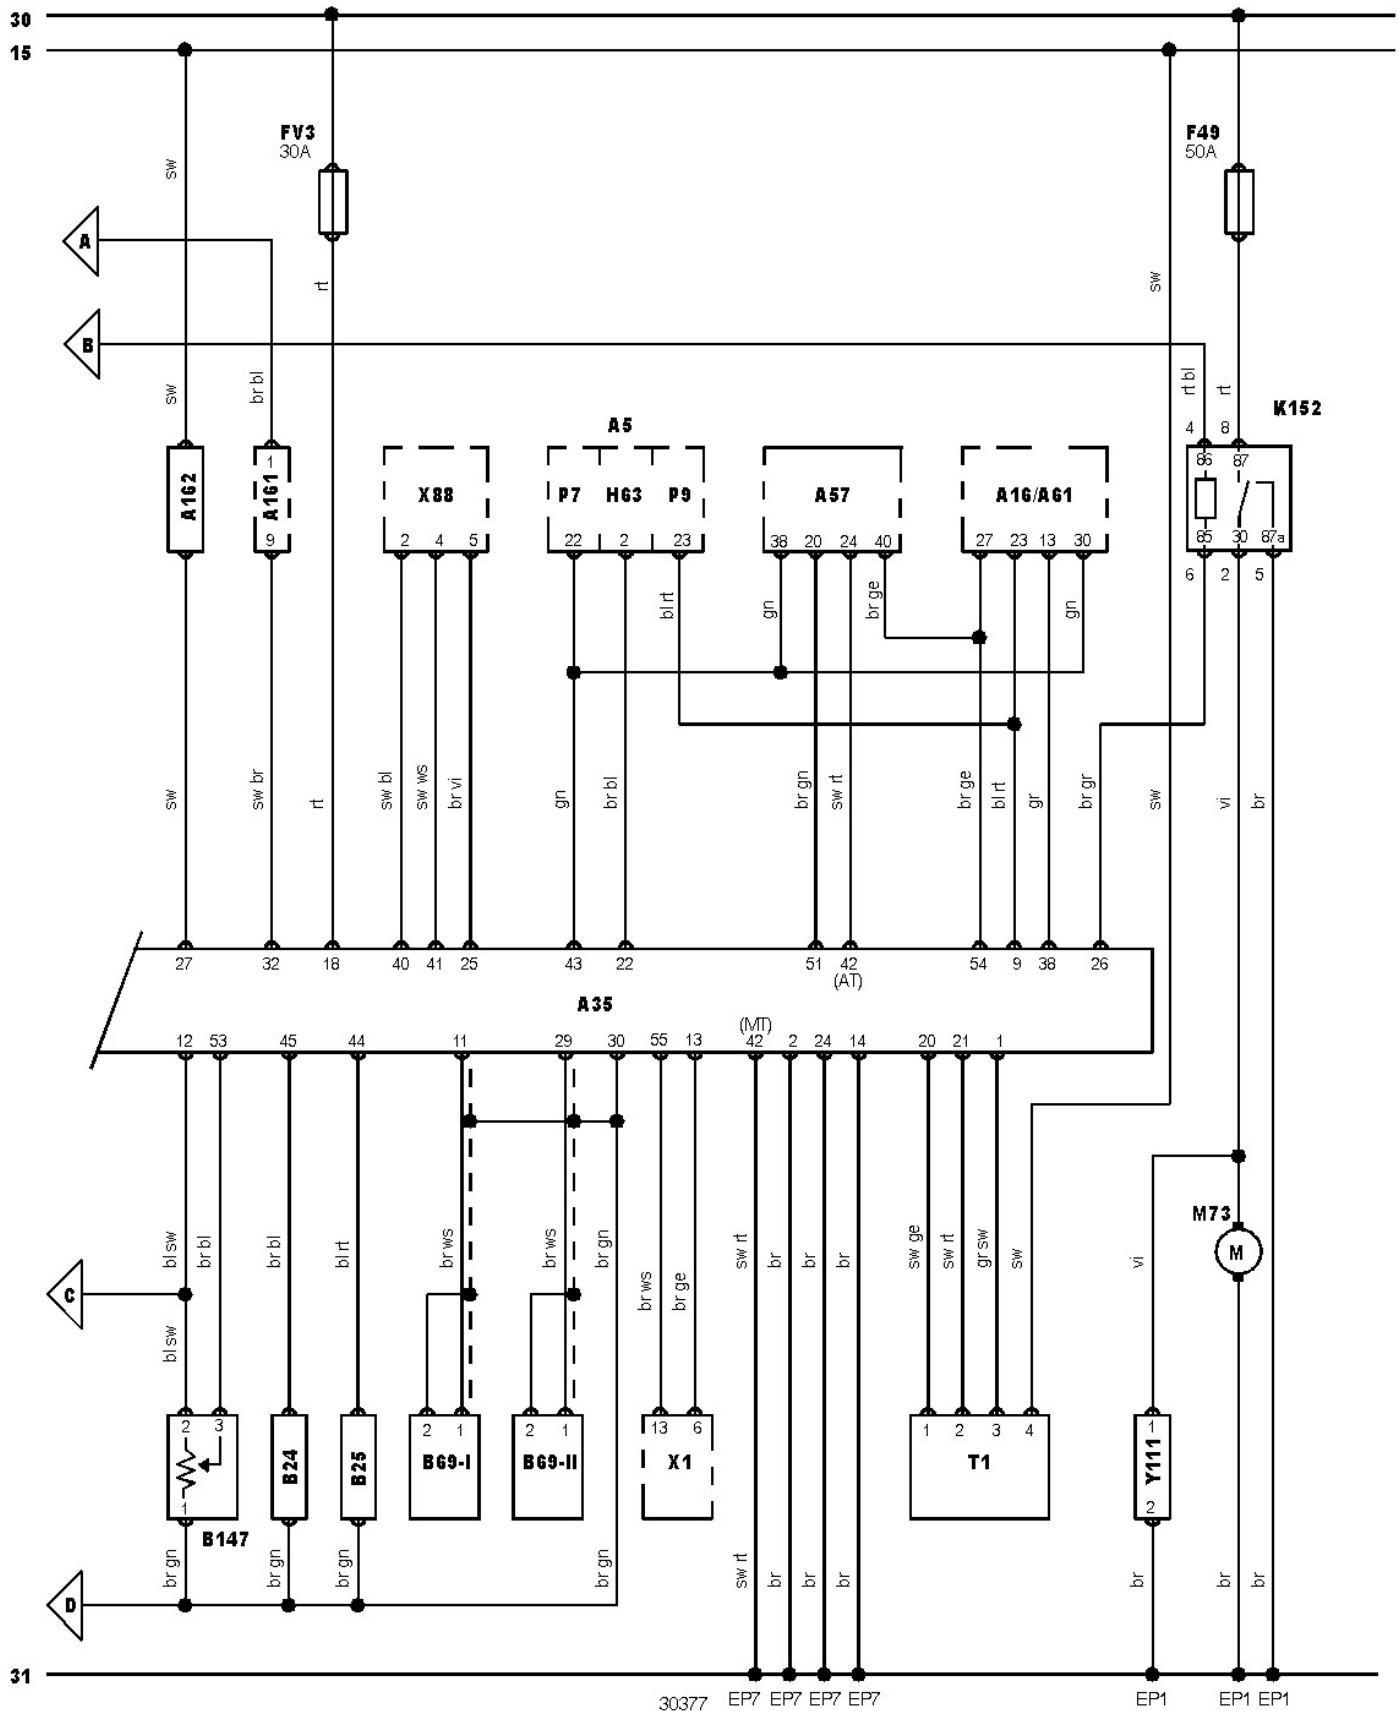

| | |
|------|---|
| X88 | AC connector |
| A16 | Anti-lock braking system (ABS) control module |
| 31 | Battery - |
| 30 | Battery + |
| B132 | Camshaft position (CMP) sensor |
| B54 | Crankshaft position (CKP) sensor |
| X1 | Data link connector (DLC) |
| A161 | Digital multifunction display |
| A35 | Engine control module (ECM) |
| K46 | Engine control relay |
| B24 | Engine coolant temperature (ECT) sensor |
| H63 | Engine malfunction indicator lamp (MIL) |
| Y104 | Evaporative emission (EVAP) canister purge valve |
| B149 | Exhaust gas recirculation (EGR) valve position sensor |
| M12 | Fuel pump |
| K20 | Fuel pump relay |
| F | Fuse |
| B72 | Heated oxygen sensor (HO2S) |
| Y99 | Idle air control (IAC) valve |
| T1 | Ignition coil |
| 15 | Ignition switch - ignition ON |
| A162 | Immobilizer control module |
| Y3 | Injector |
| A5 | Instrument panel - MIL light |
| B25 | Intake air temperature (IAT) sensor |
| Y102 | Intake manifold air control solenoid |
| B69 | Knock sensor (KS) |
| B30 | Mass air flow (MAF) sensor |
| M73 | Secondary air injection (AIR) pump |
| K152 | Secondary air injection (AIR) pump relay |
| Y111 | Secondary air injection (AIR) solenoid |
| P7 | Tachometer |
| B147 | Throttle position (TP) sensor |
| X79 | Transmission connector |