



302626

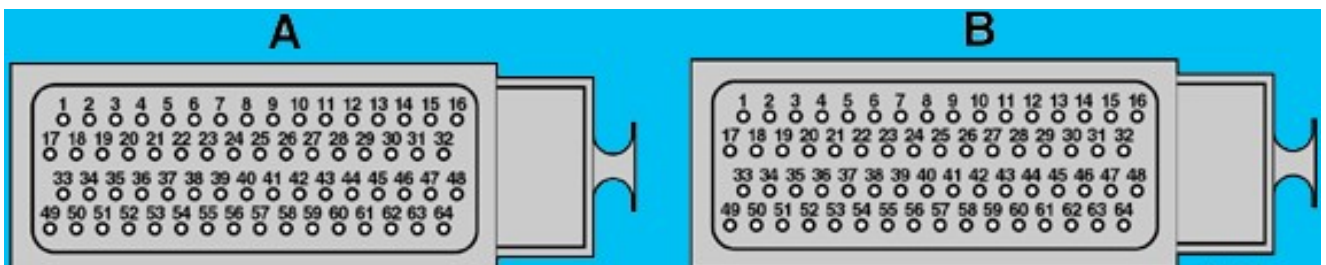

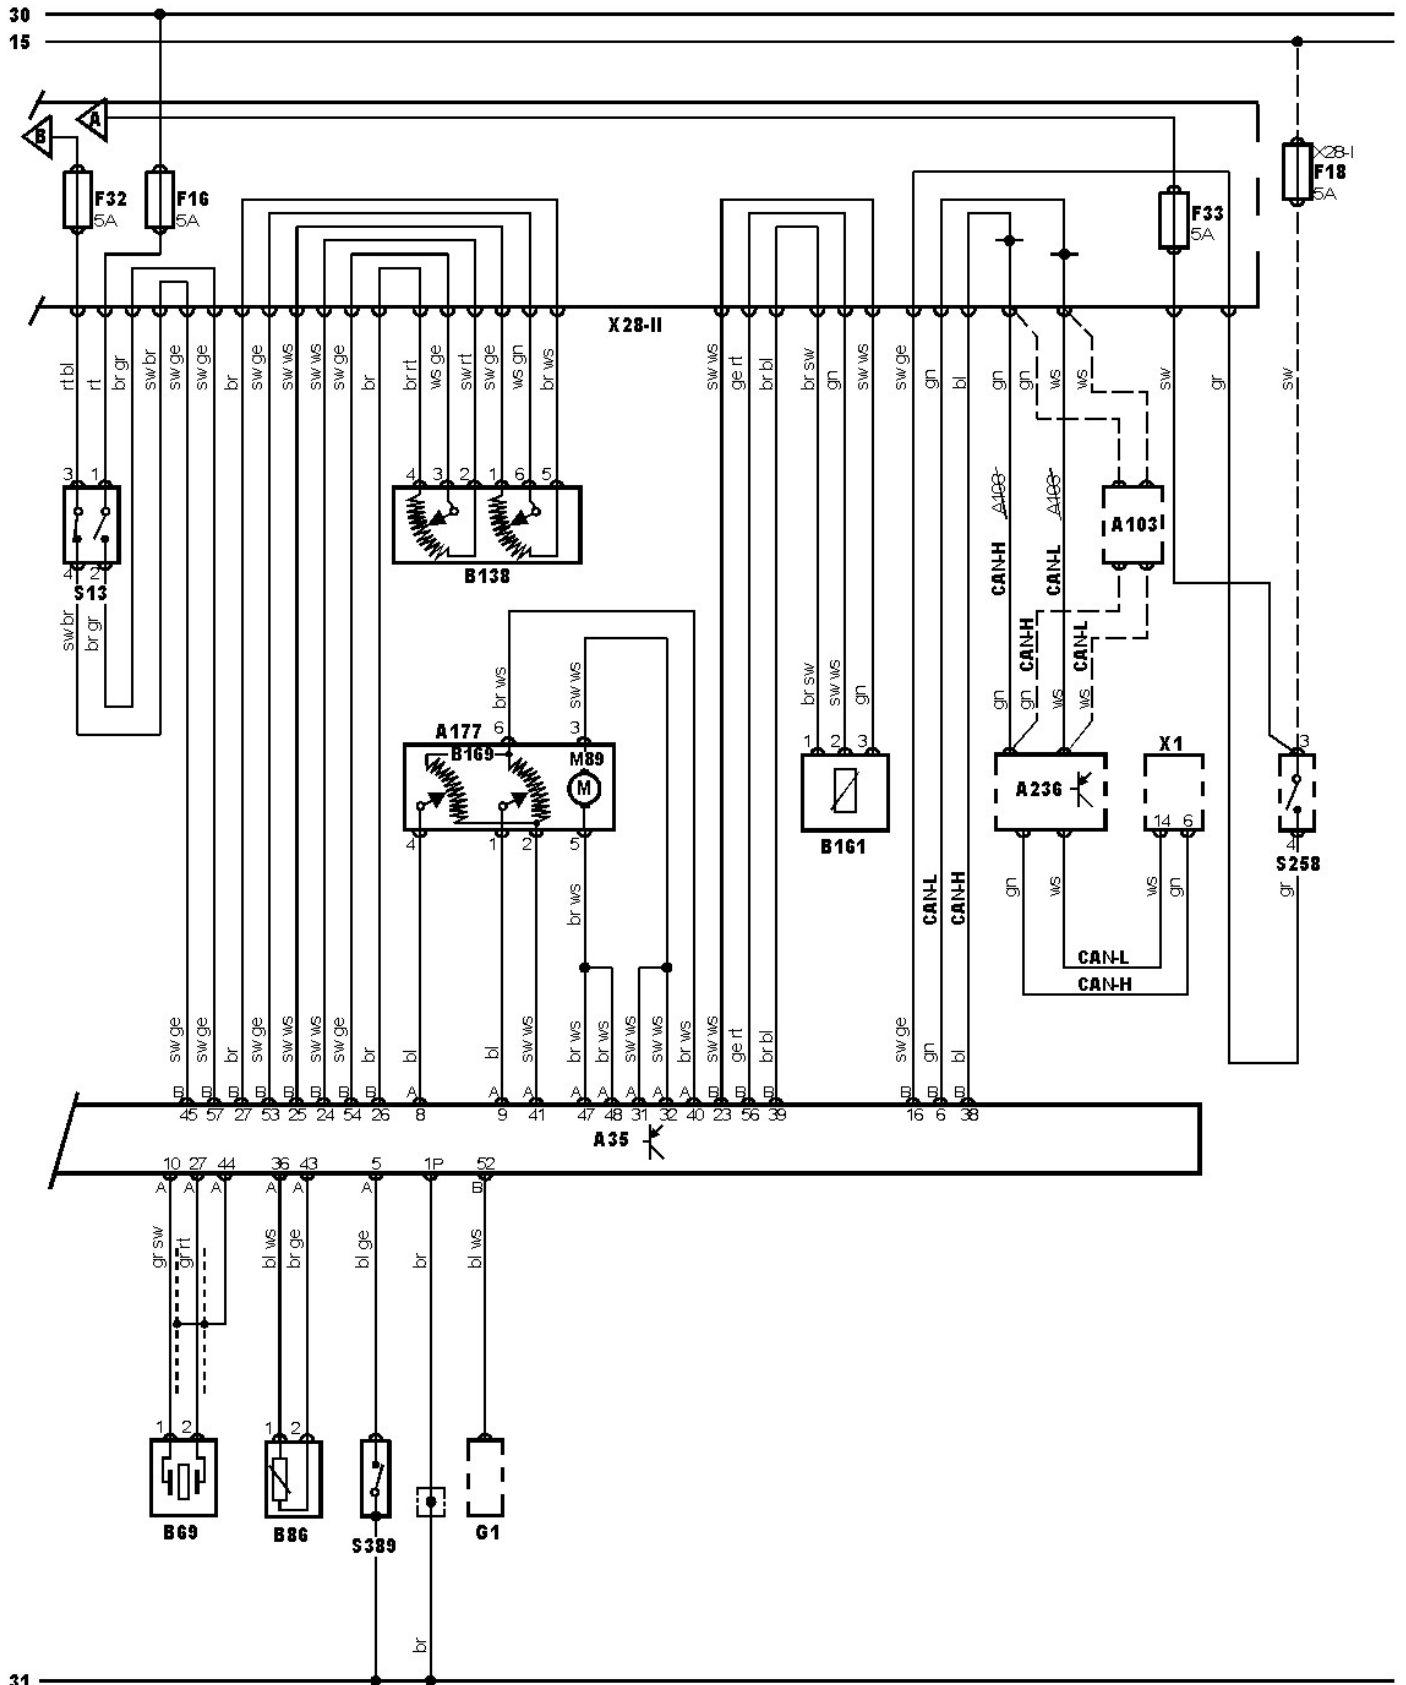

B161	AC refrigerant pressure sensor
B138	Accelerator pedal position (APP) sensor
G1	Alternator
31	Battery -
30	Battery +
S13	Brake pedal position (BPP) switch
Y183	Camshaft position (CMP) actuator, exhaust
Y182	Camshaft position (CMP) actuator, intake
B132-I	Camshaft position (CMP) sensor 1
B132-II	Camshaft position (CMP) sensor 2
S258	Clutch pedal position (CPP) switch
CAN-H	Controller area network (data bus) high
CAN-L	Controller area network (data bus) low
B54	Crankshaft position (CKP) sensor
X1	Data link connector (DLC)
K46	Engine control (EC) relay
A35	Engine control module (ECM)
K12-I	Engine coolant blower motor relay 1
K12-II	Engine coolant blower motor relay 2
B24-I	Engine coolant temperature (ECT) sensor 1
B24-II	Engine coolant temperature (ECT) sensor 2
R96	Engine coolant thermostat
B86	Engine oil level sensor
S389	Engine oil pressure switch
Y104	Evaporative emission (EVAP) canister purge valve
M12	Fuel pump (FP)
K20	Fuel pump (FP) relay
F	Fuse
X28-II	Fuse box/relay plate, engine bay 1
X28-I	Fuse box/relay plate, load area
B72-I	Heated oxygen sensor (HO2S) 1
B72-II	Heated oxygen sensor (HO2S) 2
T1	Ignition coil
K79	Ignition main circuits relay 1
15	Ignition switch - ignition ON
50	Ignition switch - start signal
Y3	Injector
B25	Intake air temperature (IAT) sensor
Y102	Intake manifold air control solenoid
B69	Knock sensor (KS)
B30	Mass air flow (MAF) sensor
A11-I	Multifunction control module 1
K4	Starter motor relay
A236	Steering column function control module
A103	Suspension control module
A177	Throttle control unit
M89	Throttle motor
B169	Throttle motor position sensor