



X20DTL Zafira (99-00)

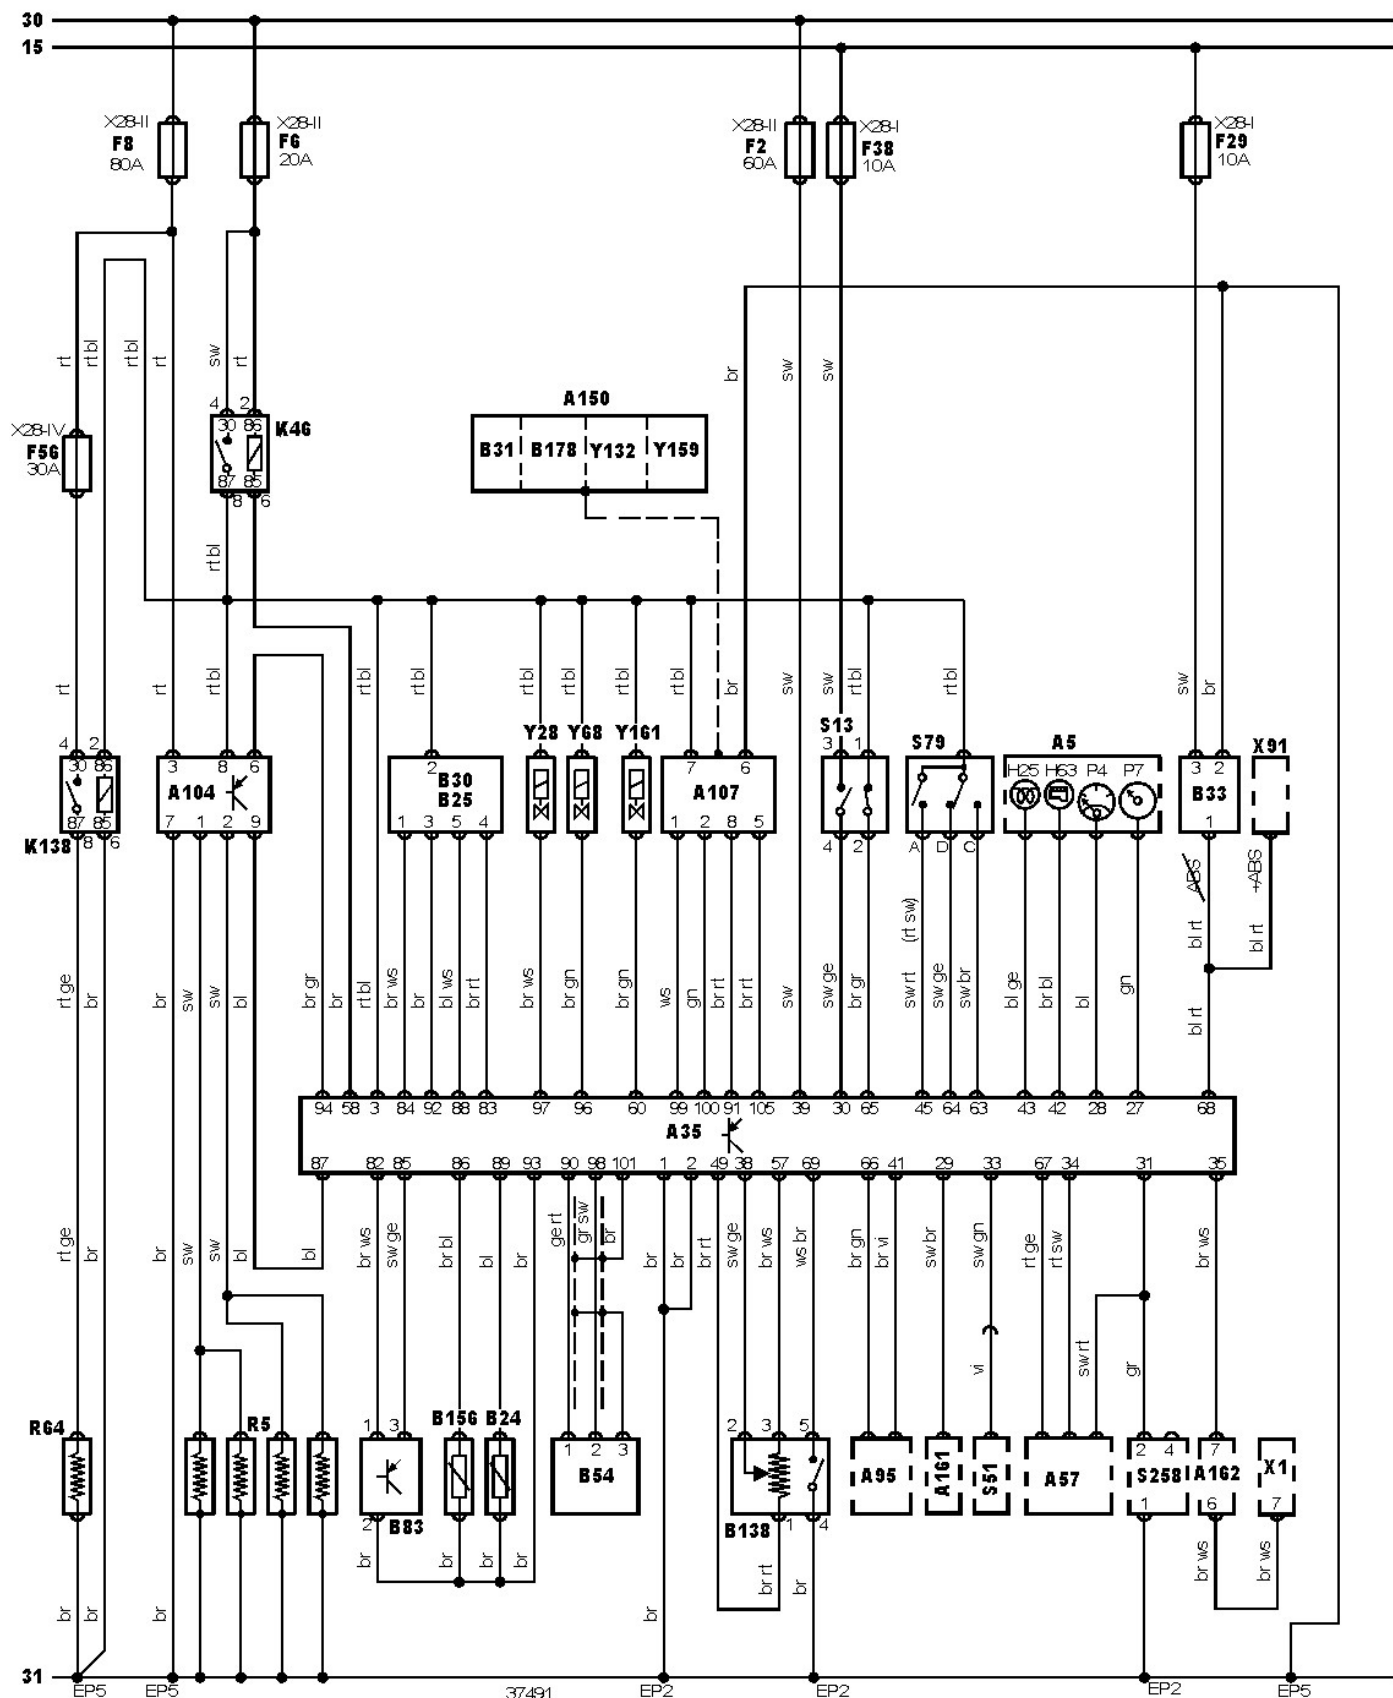

A(K)

B(M)

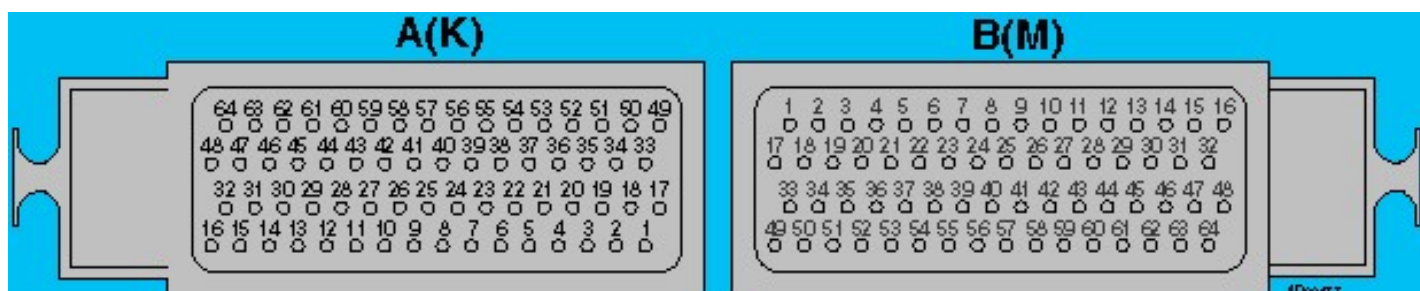

S51	AC evaporator temperature switch
B138	Accelerator pedal position (APP) sensor
31	Battery -
30	Battery +
S13	Brake pedal position (BPP) switch
S258	Clutch pedal position (CPP) switch
B54	Crankshaft position (CKP) sensor
S79	Cruise control master switch
X1	Data link connector (DLC)
A161	Digital multifunction display
A35	Engine control module (ECM)
K46	Engine control relay
A95	Engine coolant blower motor control module
B24	Engine coolant temperature (ECT) sensor
P4	Engine coolant temperature gauge
H63	Engine malfunction indicator lamp (MIL)
B156	Engine oil temperature sensor
Y28	Exhaust gas recirculation (EGR) solenoid
Y161	Exhaust gas recirculation (EGR) throttle control valve
R64	Fuel filter heater
K138	Fuel heater relay
Y132	Fuel injection timing solenoid
A107	Fuel pump control module
Y159	Fuel quantity adjuster
B31	Fuel temperature sensor
F	Fuse
A104	Glow plug control module
H25	Glow plug warning lamp
R5	Glow plugs
15	Ignition switch - ignition ON
A162	Immobilizer control module
A150	Injection pump assembly
B178	Injection pump position sensor
A5	Instrument panel
B25	Intake air temperature (IAT) sensor
B83	Manifold absolute pressure (MAP) sensor
B30	Mass air flow (MAF) sensor
P7	Tachometer
A57	Transmission control module (TCM)
Y68	Turbocharger (TC) wastegate regulating valve
B33	Vehicle speed sensor (VSS)
X91	Vehicle speed sensor (VSS) connector