


X88	AC connector
A23	Alarm system control module
31	Battery -
30	Battery +
B54	Crankshaft position (CKP) sensor
X1	Data link connector (DLC)
A161	Digital multifunction display
A35	Engine control module (ECM)
B24	Engine coolant temperature (ECT) sensor
H63	Engine malfunction indicator lamp (MIL)
M12	Fuel pump
K20	Fuel pump relay
F	Fuse
Y99	Idle air control (IAC) valve
A52	Ignition amplifier
T1	Ignition coil
15	Ignition switch - ignition ON
50	Ignition switch - start signal
Y3	Injector
A5	Instrument panel
B25	Intake air temperature (IAT) sensor
B83	Manifold absolute pressure (MAP) sensor
W21	Octane coding plug
B72	Oxygen sensor (O2S)
P7	Tachometer
B147	Throttle position (TP) sensor
A57	Transmission control module (TCM)
B33	Vehicle speed sensor (VSS)

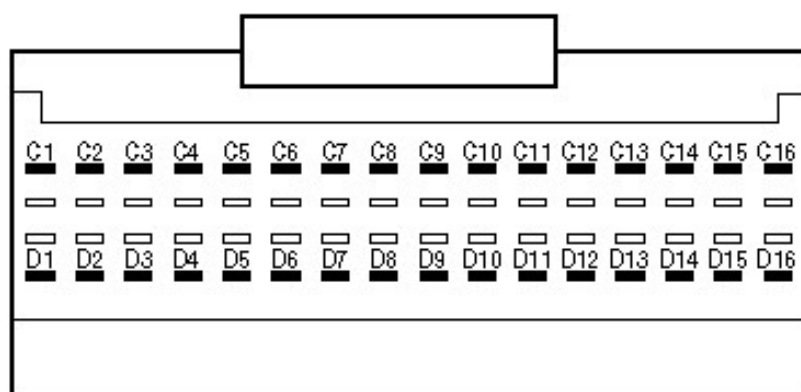

A074539

