


AC20 USER MANUAL

Sign Up and Login

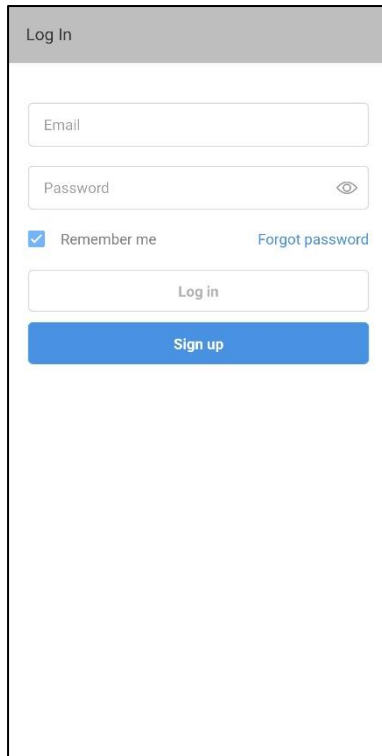

Log In

Email

Password


☒ Remember me [Forgot password](#)

Log in

Sign up

- Sign up/Login AC20 account.
- Set a password for the AC20 account.

Forgot Password

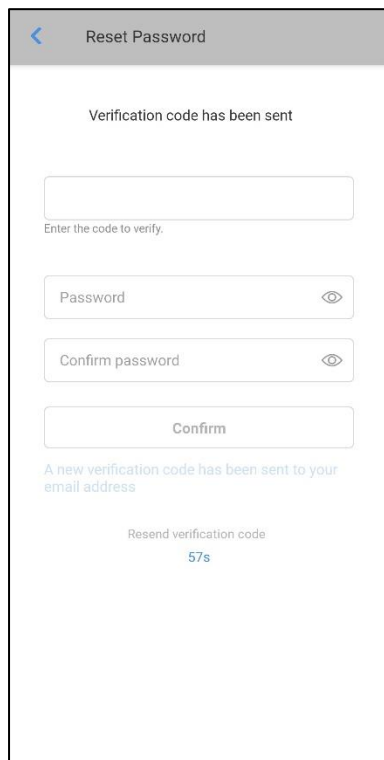

< Reset Password

Verification code has been sent

Enter the code to verify.

Password

Confirm password

Confirm


A new verification code has been sent to your email address


Resend verification code 57s


- Reset password

AC20 USER MANUAL

Add Device

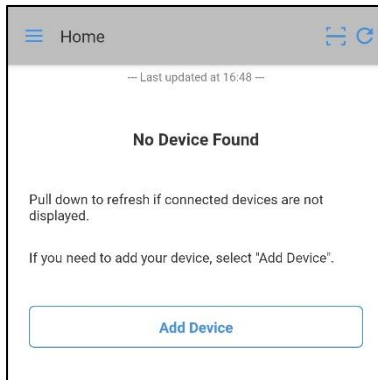


- At the Home Page of AC20 App screen, tap “” or add device to bind an AC20 unit.

- Select the “” to obtain the latest status of bound AC20 unit.




- Scan the provided QR code to bind the AC20 unit to your AC20 account.

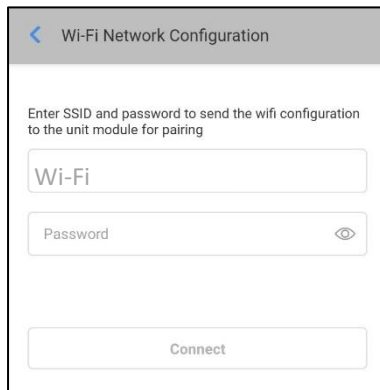


- Input Wi-Fi Name and Password for AC20 unit to connect to the internet.

Remarks: Wi-Fi that is used for the connection for Wi-Fi Module needs to be 2.4 GHz in band and the SSID for the Wi-Fi should less than 32 characters.

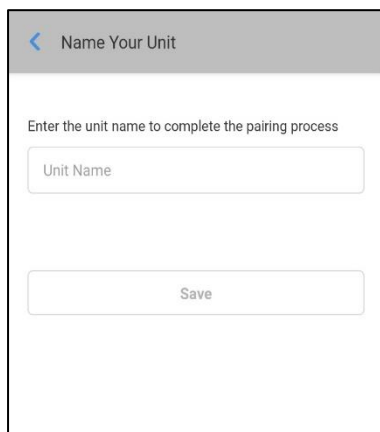

- Name the AC20 unit.

AC20 USER MANUAL

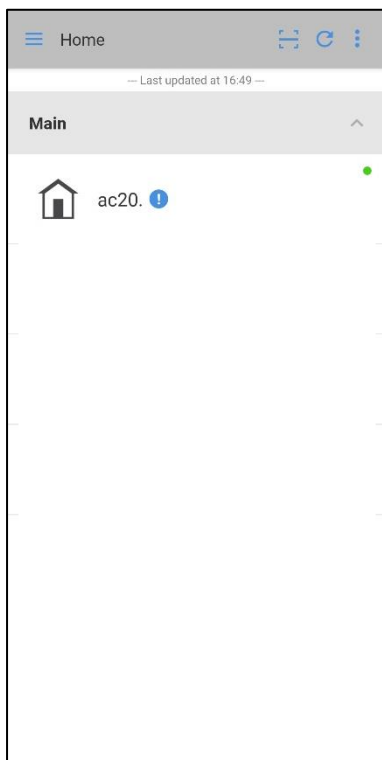


- Bound AC20 unit will be shown in the Home Page of AC20 App.

Remarks: User are advised not to bind more than 10 AC20 unit to ensure the system is functioning well.


AC20 USER MANUAL

Control Page (Set Temp)

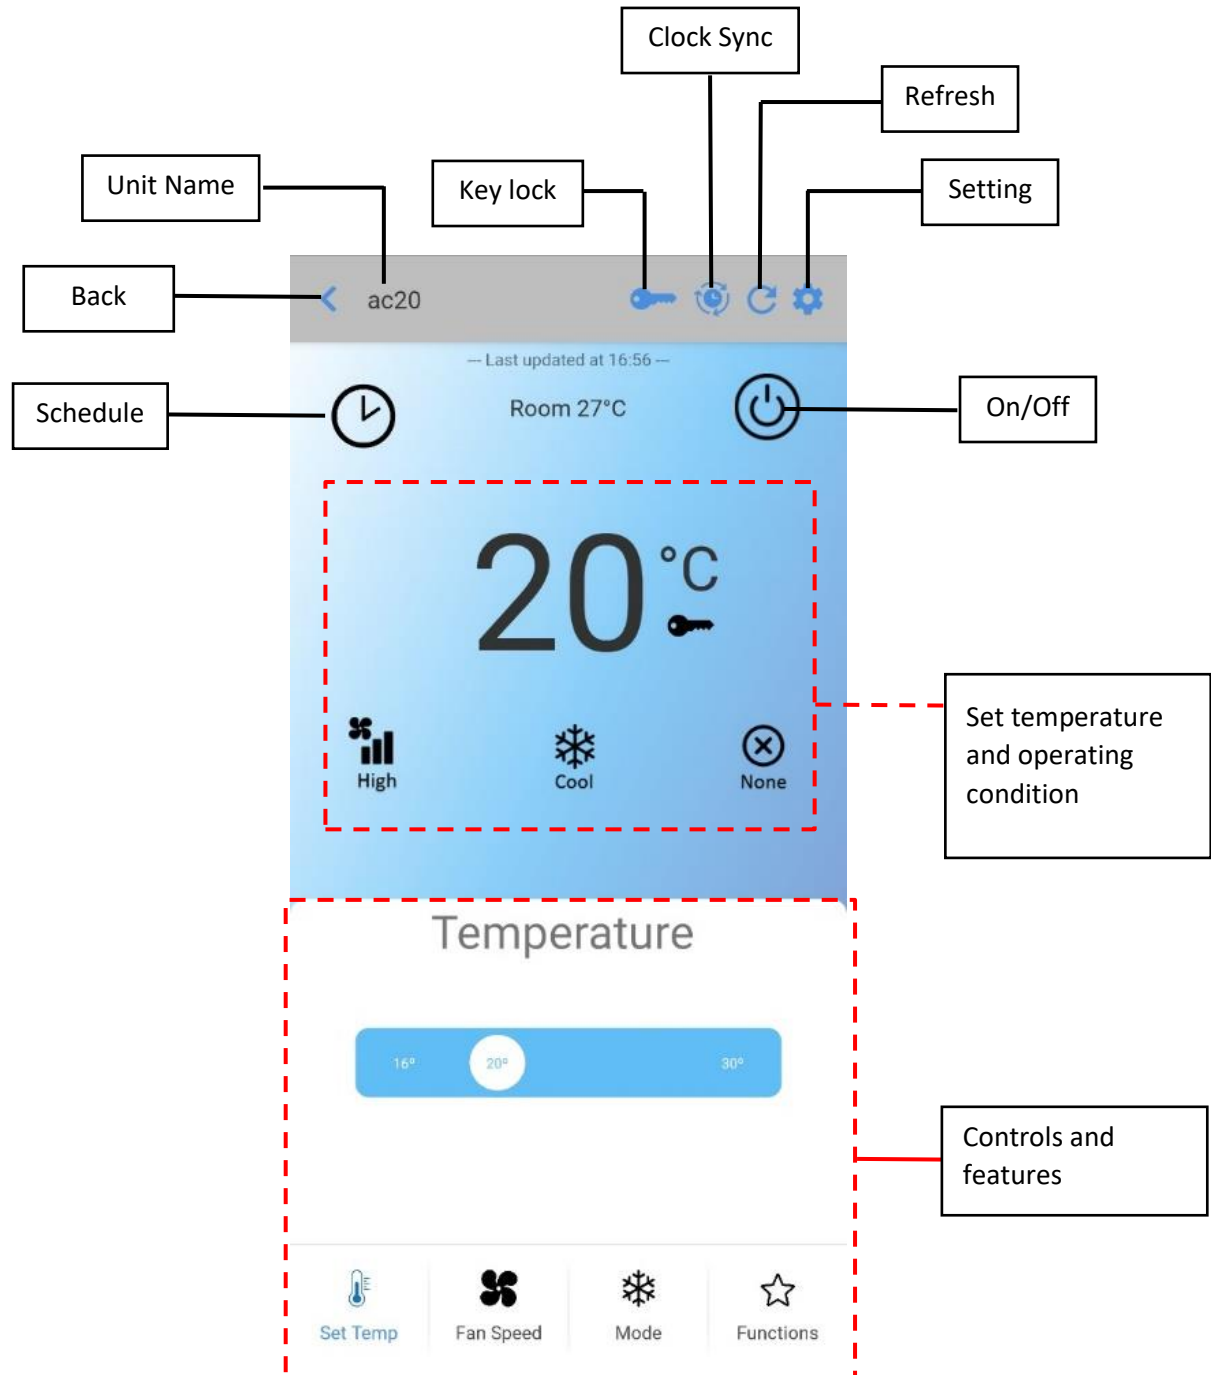


AC20 USER MANUAL

Key Lock Page

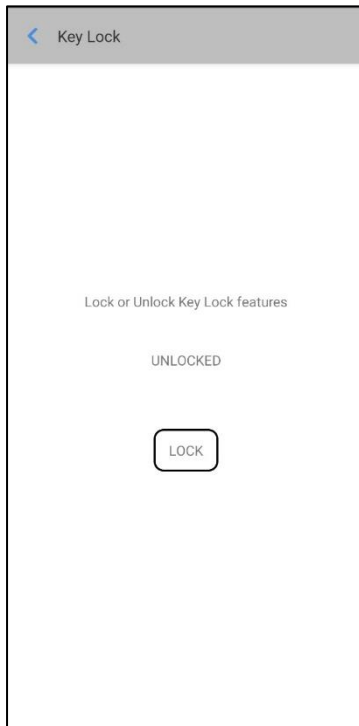

- Press the Lock/Unlock button to lock/Unlock the AC20 unit.

RTC Sync Page

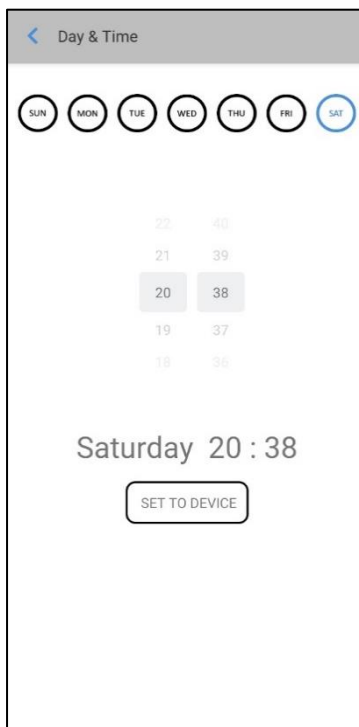

- Recalibrate the real time clock for the AC20 unit to server day and time.

Remarks: The real time clock are sync with server day and time.

AC20 USER MANUAL

Setting Page

The screenshot shows the 'Configuration' page of the AC20 unit. It has a back arrow and the title 'Configuration'. The settings are organized into sections: 'Device Name' with the value 'ac20' and an edit icon; 'Host User' with the value 'Username' and a delete icon; 'Guest User' with the value 'Username' and a delete icon; 'Settings' which includes 'Celcius / Fahrenheit' (radio buttons for 'Celcius' and 'Fahrenheit', with 'Celcius' selected), 'Set Temp range (Celcius)' (radio buttons for '16-30' and '20-30', with '16-30' selected), 'Temperature Sensor' (radio buttons for 'Indoor' and 'External', with 'Indoor' selected), and 'EEPROM' (radio buttons for 'Enable' and 'Disable', with 'Enable' selected). At the bottom are icons for 'Share' and 'Firmware Update'.


- Set the configuration for AC20 unit.

This screenshot is similar to the previous one, but the 'Device Name' field is active. The value 'ac20' is shown, and there are 'Edit' and 'Cancel' buttons next to it. The 'Host User' field shows 'Username' with a delete icon. The 'Settings' section is partially visible, showing 'Celcius / Fahrenheit' (with 'Celcius' selected), 'Set Temp range (Celcius)' (with '16-30' selected), and 'Temperature Sensor' (with 'Indoor' selected). A virtual keyboard is overlaid on the bottom half of the screen, showing the letters 'q w e r t y u i o p' on the first row, 'a s d f g h j k l' on the second row, and 'z x c v b n m' on the third row. The keyboard also includes a spacebar, a backspace key, and a checkmark key.

- Edit AC20 unit name

AC20 USER MANUAL

Factory Reset

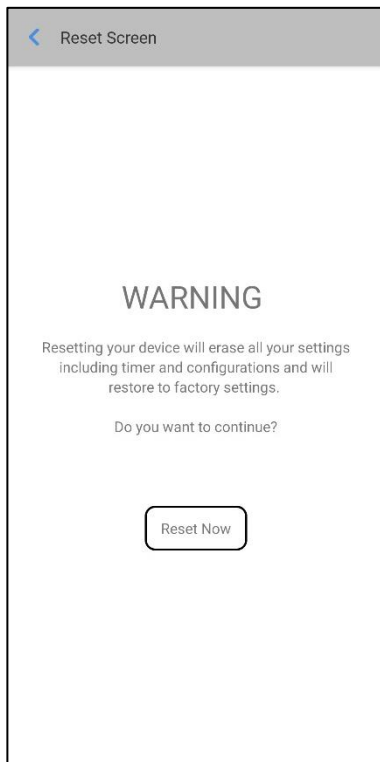


- Select the 'Reset Now' button to reset the AC20 back to its default setting.

Default setting configurations:

- a) Unit : Off
- b) Mode : Cool
- c) Set Temp : 25°C / 77 °F
- d) Fan Speed : High
- e) RTC : 00:00, SUNDAY
- f) Timers : Disable

Remarks: Factory setting will erase all setting including timer and configurations

Share device control authorities

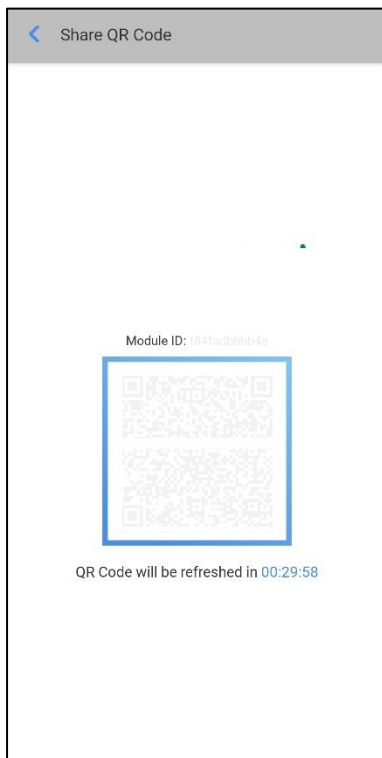


- Scan the generated QR code from AC20 App to be added as guest user to control the device.

Remarks: Master user can view all the account bound to the AC20 unit and having the authority to unbind Guest user and own Master account while Guest user can only view and unbind own Guest account.


AC20 USER MANUAL

Firmware Update

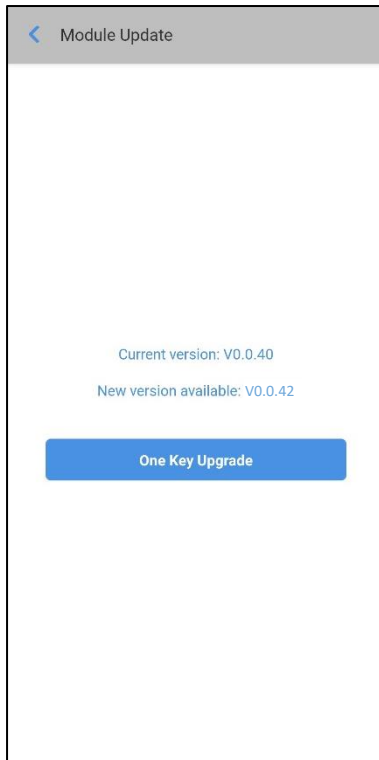

- Select the One key Upgrade button to update the firmware version to the latest version.


Set Schedule

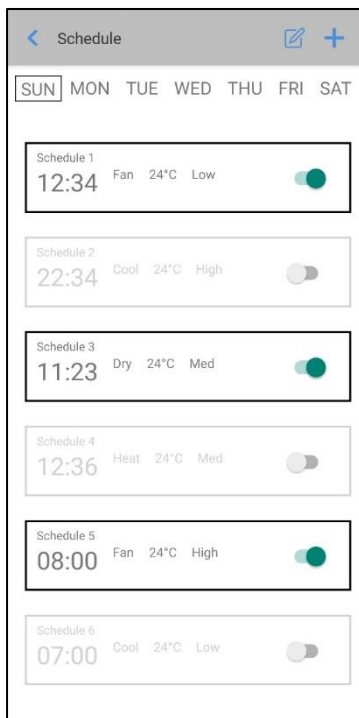


- Set maximum 6 schedules for each day for the AC20 unit.
- Select the switch button to Enable/Disable the schedule.

AC20 USER MANUAL

To set a schedule

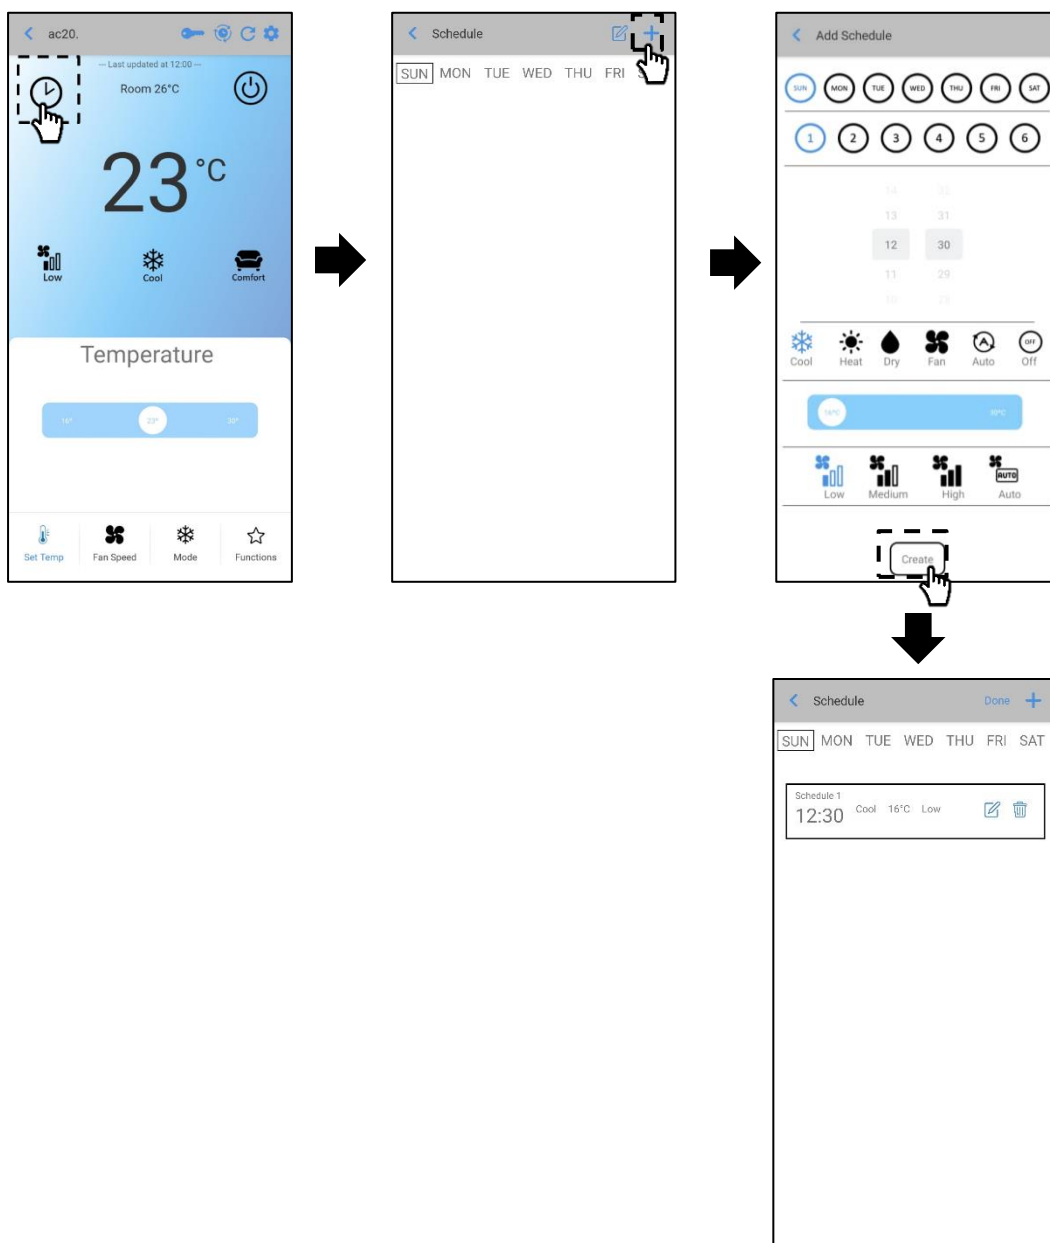

To delete a schedule

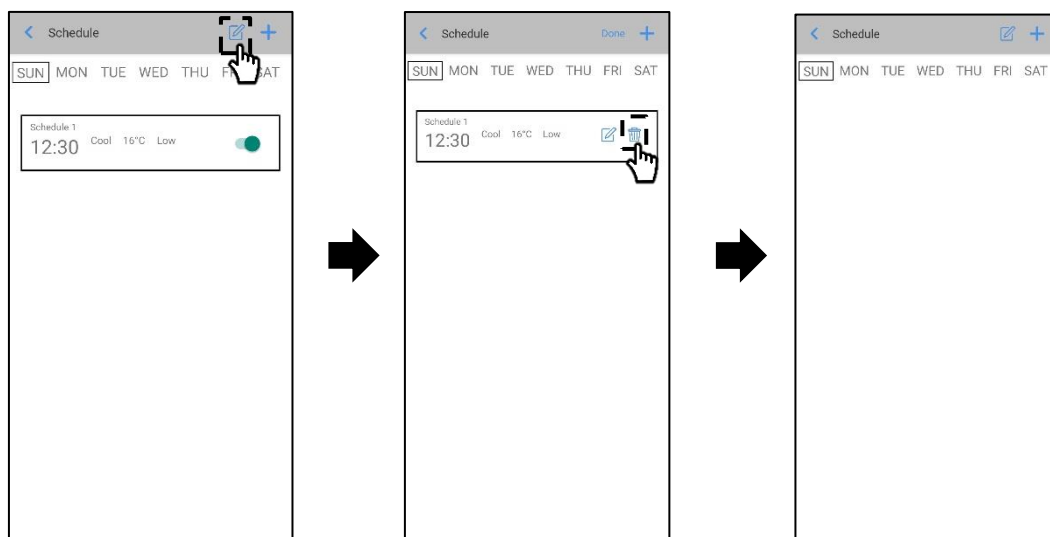

AC20 USER MANUAL

To edit a schedule

