


TRAKTOR PRO

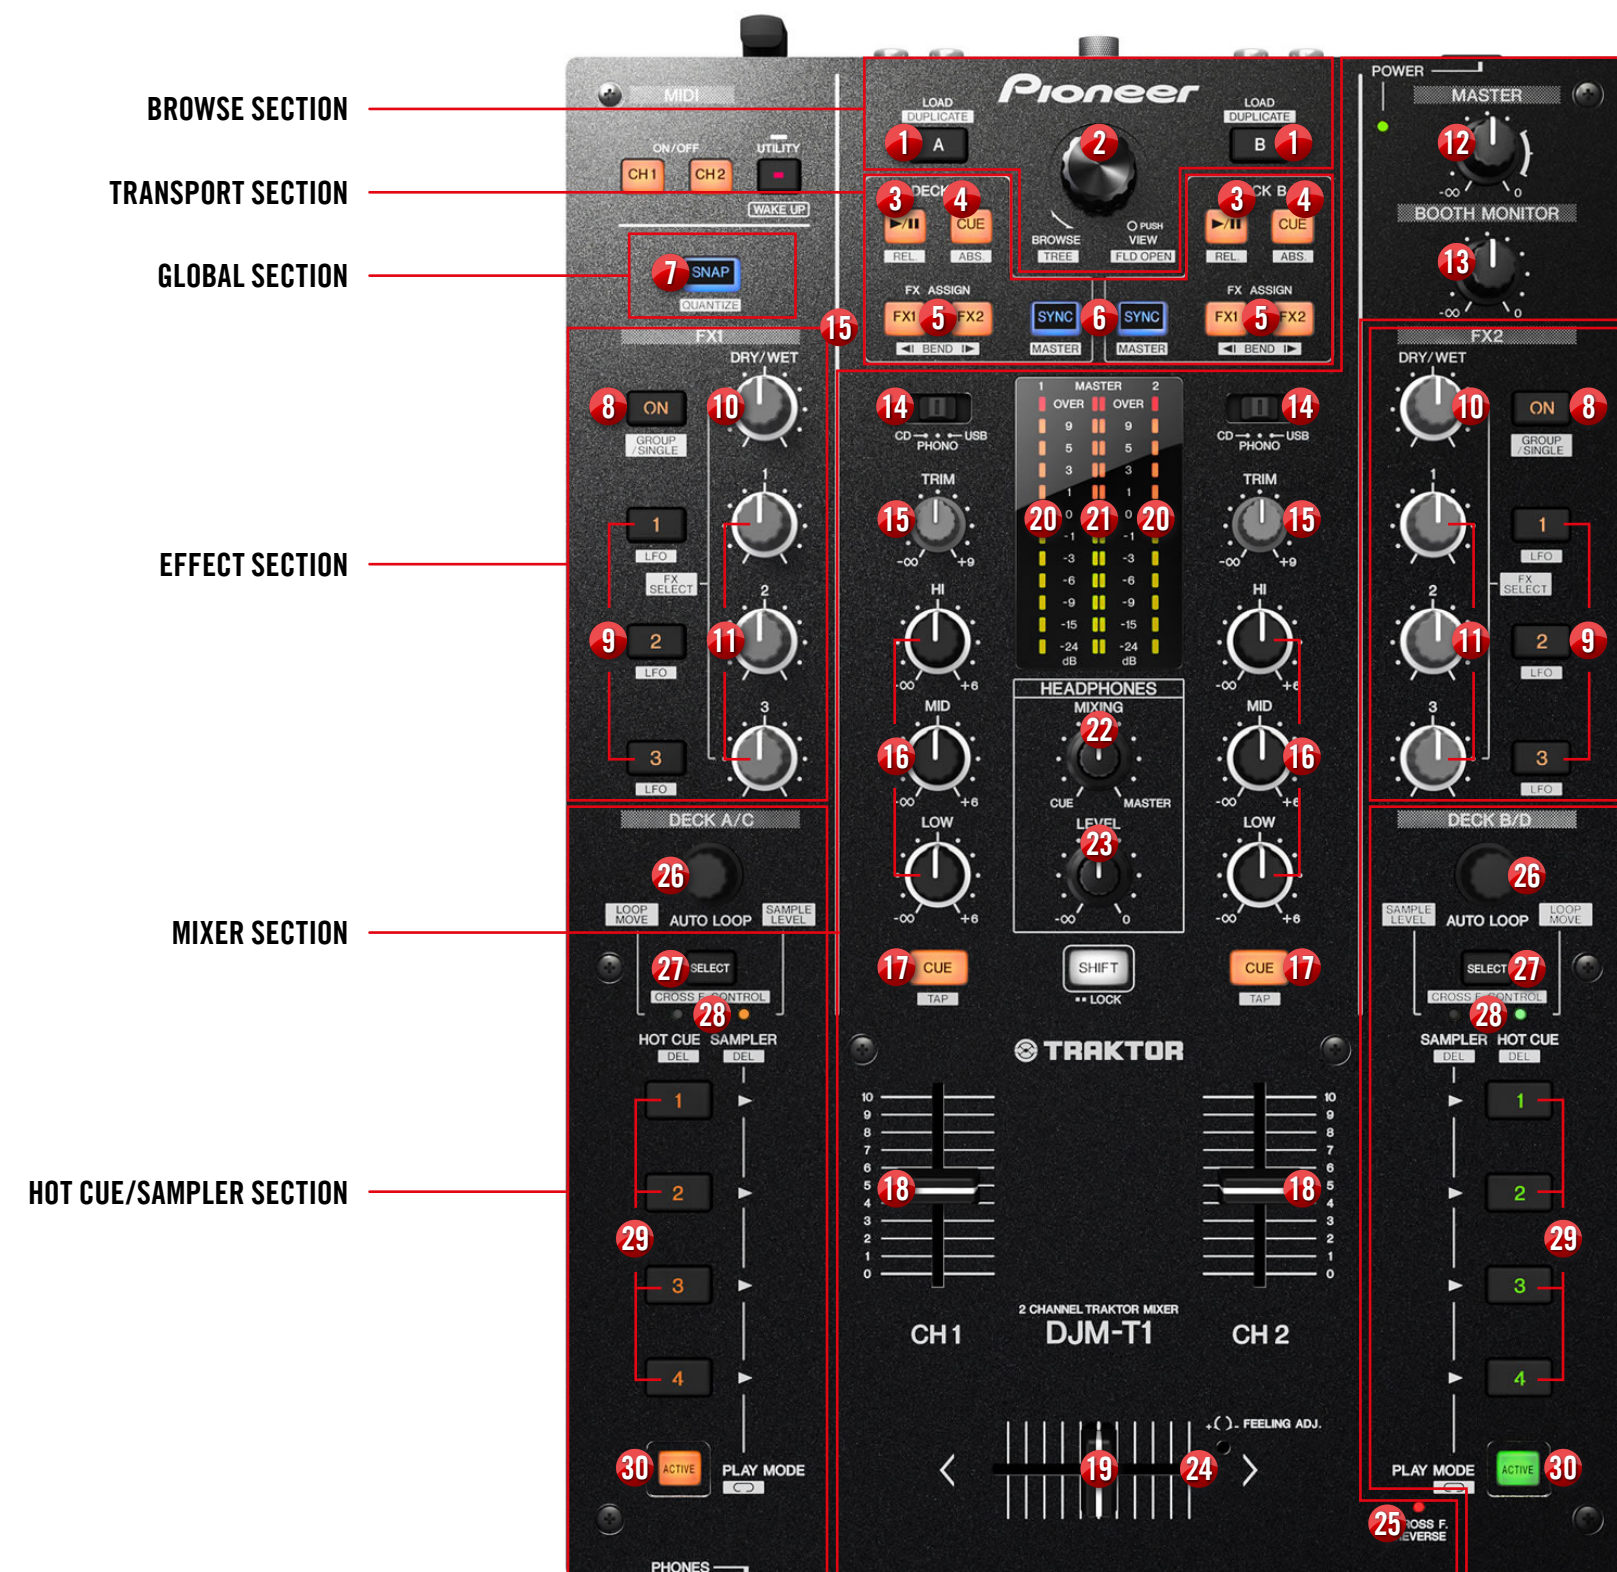

BROWSE SECTION

- 1 LOAD (DUPLICATE) button
- 2 ROTARY selector

TRANSPORT SECTION

- 3 ►/II (REL.) button
- 4 CUE (ABS.) button
- 5 FX ASSIGN (◀ BEND ▶) button
- 6 SYNC (MASTER) button

GLOBAL SECTION

- 7 SNAP (QUANTIZE) button

EFFECT SECTION

- 8 ON (GROUP/SINGLE) button
- 9 EFFECT control buttons
- 10 DRY/WET control
- 11 EFFECT control dials

MIXER SECTION

- 12 MASTER LEVEL control
- 13 BOOTH MONITOR control
- 14 CD, PHONO, USB input selector switch
- 15 TRIM control
- 16 EQ (HI, MID, LOW) controls
- 17 CUE (TAP) button
- 18 CHANNEL FADER
- 19 CROSSFADER
- 20 CHANNEL LEVEL indicator
- 21 MASTER LEVEL indicator
- 22 HEADPHONES MIXING control
- 23 HEADPHONES LEVEL control
- 24 FEELING ADJ. adjustment hole
- 25 CROSS F. REVERSE indicator

HOT CUE/SAMPLER SECTION

- 26 AUTO LOOP (LOOP MOVE/SAMPLE VOLUME) control
- 27 SELECT button
- 28 SELECT indicator
- 29 HOT CUE/SAMPLER button
- 30 ACTIVE button