

KM SERIES TRANSAXLES SHIFTS 1-3, THEN GOES TO FAILSAFE

COMPLAINT: The transaxle will display a shift from first gear to third gear, and after that occurs the transaxle goes into failsafe. Turn the ignition off and start the vehicle again, and the cycle will repeat itself.

CAUSE: The cause may be, that the kickdown servo sleeve has been installed into the servo bore with the servo sleeve lug covering the band apply hole, preventing the band from coming on.

CORRECTION: Rotate the servo sleeve so that the band apply hole is fully open (See Figure 1).

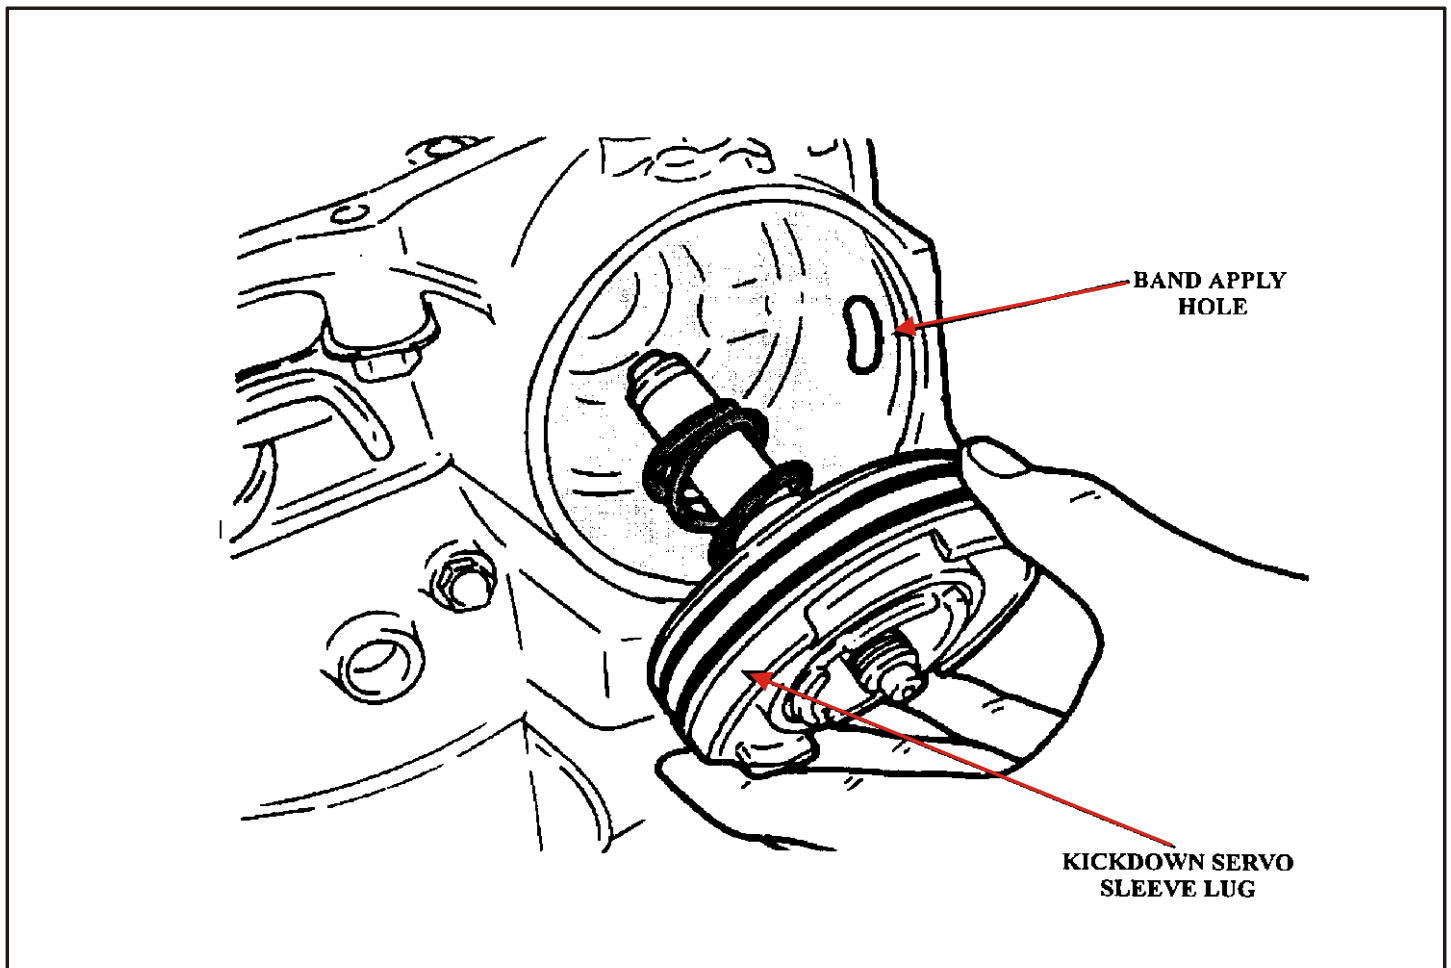


Figure 1