



## THM 4L60-E SPACER PLATE IDENTIFICATION

*Refer to Figure 2 for 1993 4L60-E spacer plate identification.  
Refer to Figure 3 for 1994 4L60-E spacer plate identification.  
Refer to Figure 4 for 1995 4L60-E spacer plate identification.  
Refer to Figure 5 for 1996 4L60-E spacer plate identification.*

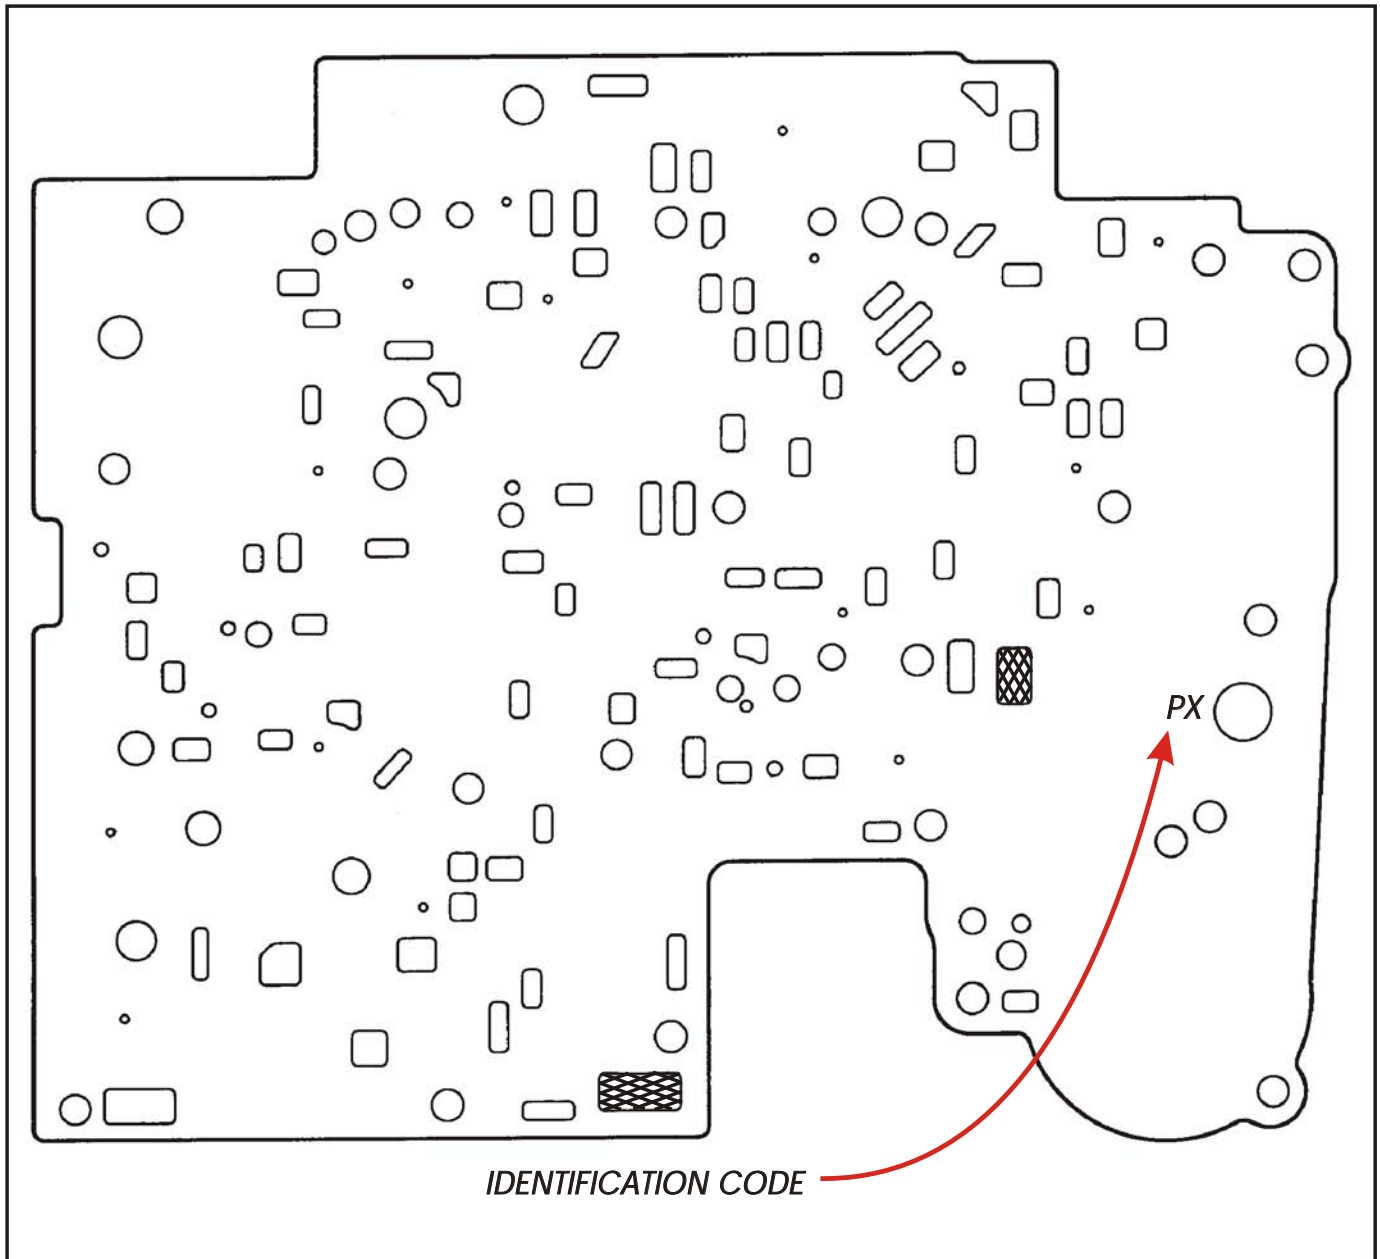


Figure 1



# Technical Service Information

1993 THM 4L60-E SPACER PLATE CHART						
<b>PART NO.</b>	<b>8684122</b>	<b>8684123</b>	<b>8684124</b>	<b>8684125</b>	<b>8684126</b>	
<b>I.D. CODE</b>	<b>JV</b>	<b>JW</b>	<b>JX</b>	<b>JY</b>	<b>JZ</b>	
<b>FITS THESE MODELS</b>	<b>MJD MND MSD TAD TBD MDD</b>	<b>SHD TLD CAD CBD KAD TWD</b>	<b>CCD CFD KBD</b>	<b>CJD CHD KCD</b>	<b>CKD CLD KDD</b>	

Figure 2

1994 THM 4L60-E SPACER PLATE CHART						
<b>PART NO.</b>	<b>8686011</b>	<b>8686012</b>	<b>8686013</b>	<b>8686037</b>	<b>8686038</b>	<b>8686039</b>
<b>I.D. CODE</b>	<b>KO</b>	<b>KP</b>	<b>KS</b>	<b>KT</b>	<b>KU</b>	<b>KV</b>
<b>FITS THESE MODELS</b>	<b>BBD</b>	<b>BWD</b>	<b>FDD SFD</b>	<b>FFD YDD</b>	<b>HBD</b>	<b>HDD</b>
<b>PART NO.</b>	<b>8686040</b>	<b>8686041</b>	<b>8686042</b>	<b>8686043</b>	<b>8686044</b>	<b>8686045</b>
<b>I.D. CODE</b>	<b>KW</b>	<b>KX</b>	<b>KY</b>	<b>KZ</b>	<b>LA</b>	<b>LB</b>
<b>FITS THESE MODELS</b>	<b>SHD TLD MJD CAD CBD KAD MND TWD</b>	<b>MSD TAD TBD MDD</b>	<b>SAD</b>	<b>CCD CFD KBD</b>	<b>CHD CJD KCD CPD</b>	<b>CMD CUD KPD</b>
<b>PART NO.</b>	<b>24200361</b>	<b>24200608</b>	<b>24200609</b>			
<b>I.D. CODE</b>	<b>LC</b>	<b>LD</b>	<b>LE</b>			
<b>FITS THESE MODELS</b>	<b>BFD</b>	<b>AHD</b>	<b>BCD</b>			

Figure 3



## Technical Service Information

<b>1995 THM 4L60-E SPACER PLATE CHART</b>						
<b>PART NO.</b>	<b>24201484</b>	<b>24201485</b>	<b>24201486</b>	<b>24201487</b>	<b>24201488</b>	<b>24201489</b>
<b>I.D. CODE</b>	<b>MP</b>	<b>MS</b>	<b>MT</b>	<b>MU</b>	<b>MV</b>	<b>MW</b>
<b>FITS THESE MODELS</b>	<b>STD</b>	<b>SHD TLD CAD CBD KHD CRD CSD</b>	<b>TAD TBD TYD TZD</b>	<b>CCD CDD CHD CJD CLD CND CWD KTD KWD LHD</b>	<b>CKD CMD KMD LUD</b>	<b>MSD MDD</b>
<b>PART NO.</b>	<b>24201490</b>	<b>24201491</b>	<b>24201492</b>	<b>24201493</b>	<b>24201494</b>	<b>24202313</b>
<b>I.D. CODE</b>	<b>MX</b>	<b>MY</b>	<b>MZ</b>	<b>NA</b>	<b>NB</b>	<b>NC</b>
<b>FITS THESE MODELS</b>	<b>BBD BCD</b>	<b>BWD</b>	<b>AHD</b>	<b>BFD</b>	<b>FFD YDD</b>	<b>HBD</b>
<b>PART NO.</b>	<b>24202314</b>	<b>24202813</b>	<b>24203084</b>	<b>24203918</b>		
<b>I.D. CODE</b>	<b>ND</b>	<b>NE</b>	<b>NG</b>	<b>NH</b>		
<b>FITS THESE MODELS</b>	<b>HDD HCD</b>	<b>FCD</b>	<b>HSD</b>	<b>FDD</b>		

Figure 4



## Technical Service Information

1996 THM 4L60-E SPACER PLATE CHART						
<b>PART NO.</b>	<b>24203222</b>	<b>24204438</b>	<b>24203283</b>	<b>24203947</b>	<b>24203948</b>	<b>24203949</b>
<b>I.D. CODE</b>	<b>PA</b>	<b>PC</b>	<b>PG</b>	<b>PL</b>	<b>PM</b>	<b>PN</b>
<b>FITS THESE MODELS</b>	<b>SAD</b>	<b>CCD CFD KBD WBD</b>	<b>HDD HCD</b>	<b>BBD</b>	<b>BCD</b>	<b>BWD</b>
<b>PART NO.</b>	<b>24203950</b>	<b>24203951</b>	<b>24203952</b>	<b>24203953</b>	<b>24203946</b>	<b>24204435</b>
<b>I.D. CODE</b>	<b>PP</b>	<b>PS</b>	<b>PT</b>	<b>PU</b>	<b>PW</b>	<b>PX</b>
<b>FITS THESE MODELS</b>	<b>AHD</b>	<b>FBD FCD</b>	<b>BFD BKD</b>	<b>FFD YDD</b>	<b>CPD</b>	<b>SHD TLD MSD TAD TBD MDD</b>
<b>PART NO.</b>	<b>24204438</b>	<b>24207492</b>	<b>24205978</b>	<b>24205979</b>		
<b>I.D. CODE</b>	<b>PY</b>	<b>PZ</b>	<b>SC</b>	<b>SD</b>		
<b>FITS THESE MODELS</b>	<b>CAD CBD KAD</b>	<b>CHD CJD KCD WHD</b>	<b>HBD</b>	<b>HSD</b>		

Figure 5