



Flight Controller

Connectors


Buzzer




I2C

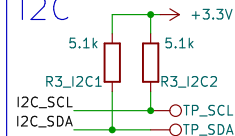

LED




VTX




Camera




Currents




Power

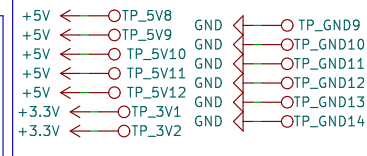


UARTS

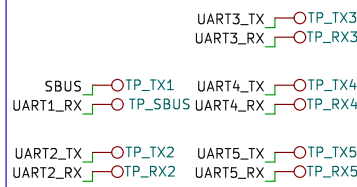


Mounting Holes

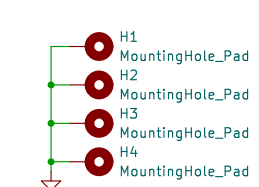


SBUS Inverter

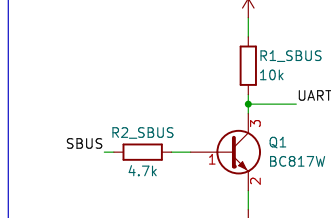

USB C

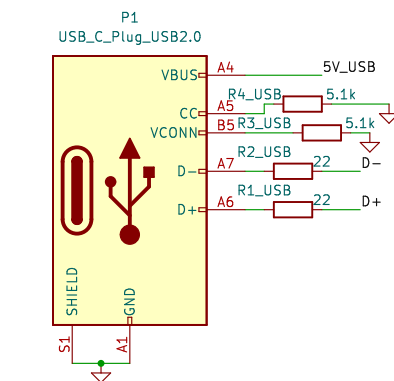


Signal

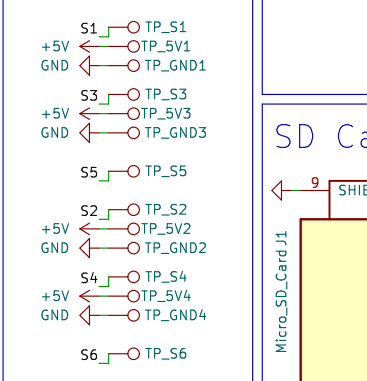

LED Stat




SD Card

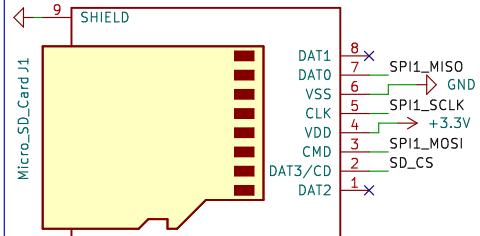


Power Supply


Decoupling Cap

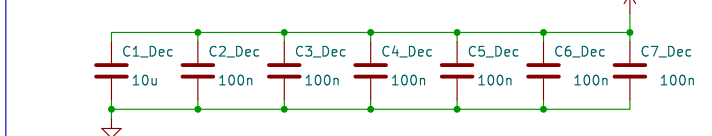

5V Switching reg

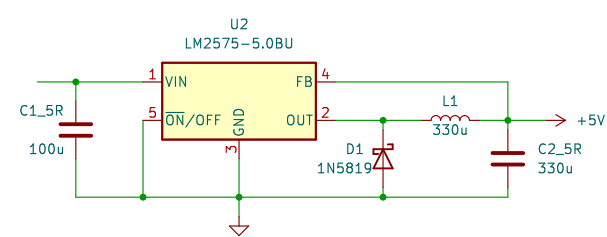


3.3V reg

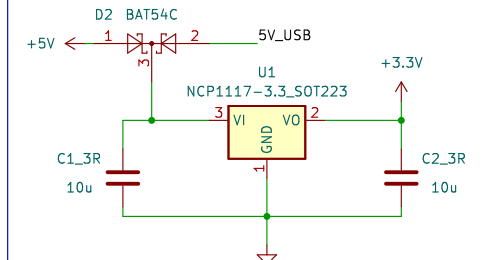


Sensors



Baro

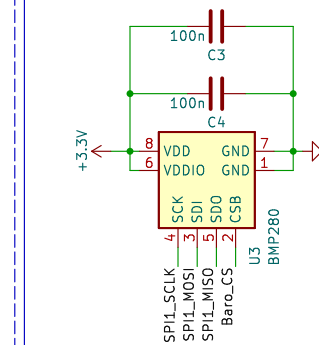

Gyro

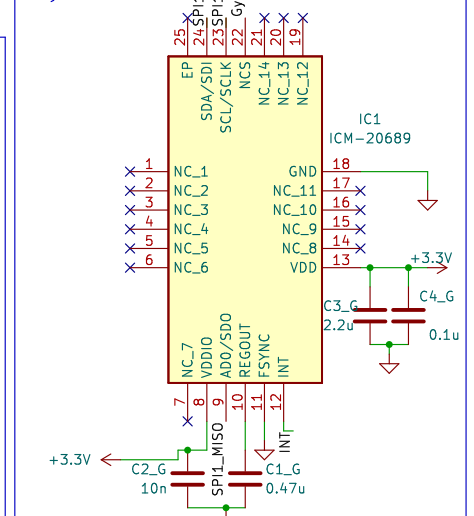

OSD

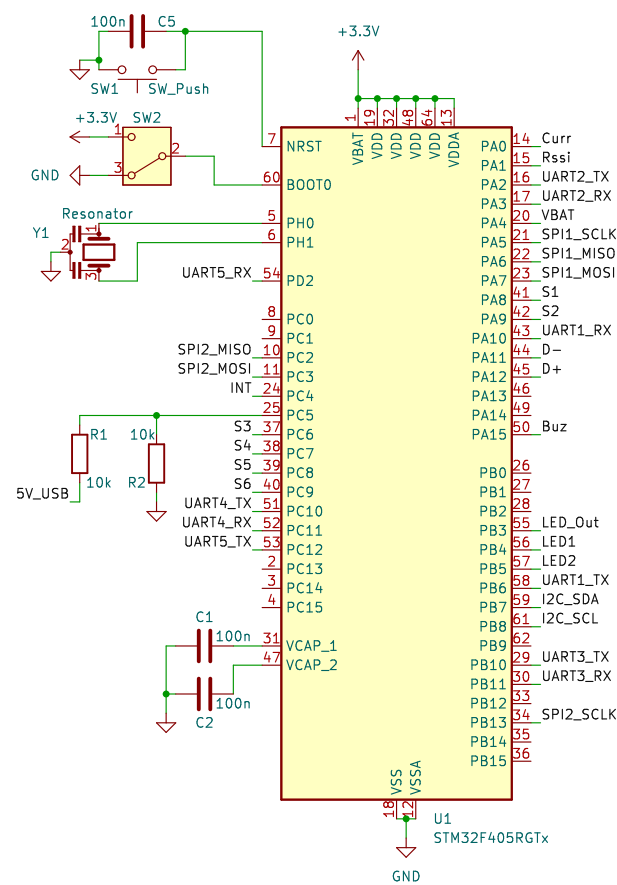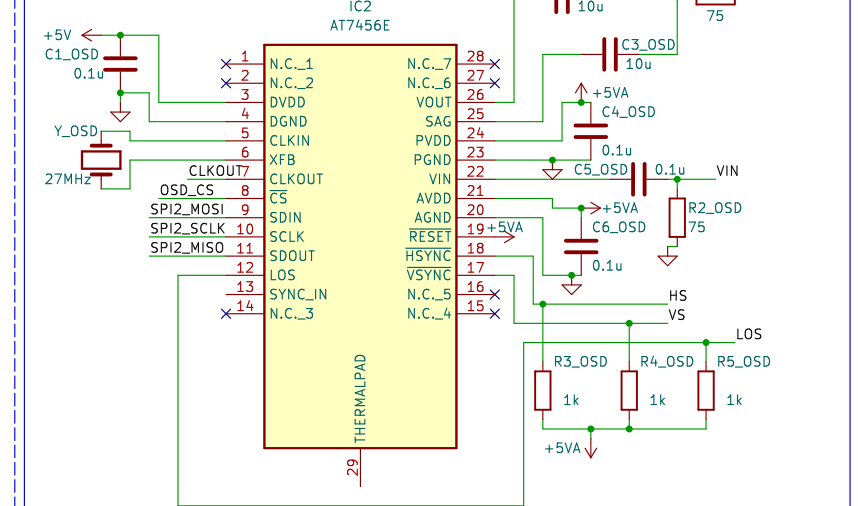

Sheet: /
File: Flight Controller.kicad_sch

Title:

Size: A3
KiCad E.D.A. kicad 7.0.10

Date:

Rev:
Id: 1/1