



POR-318 Pico

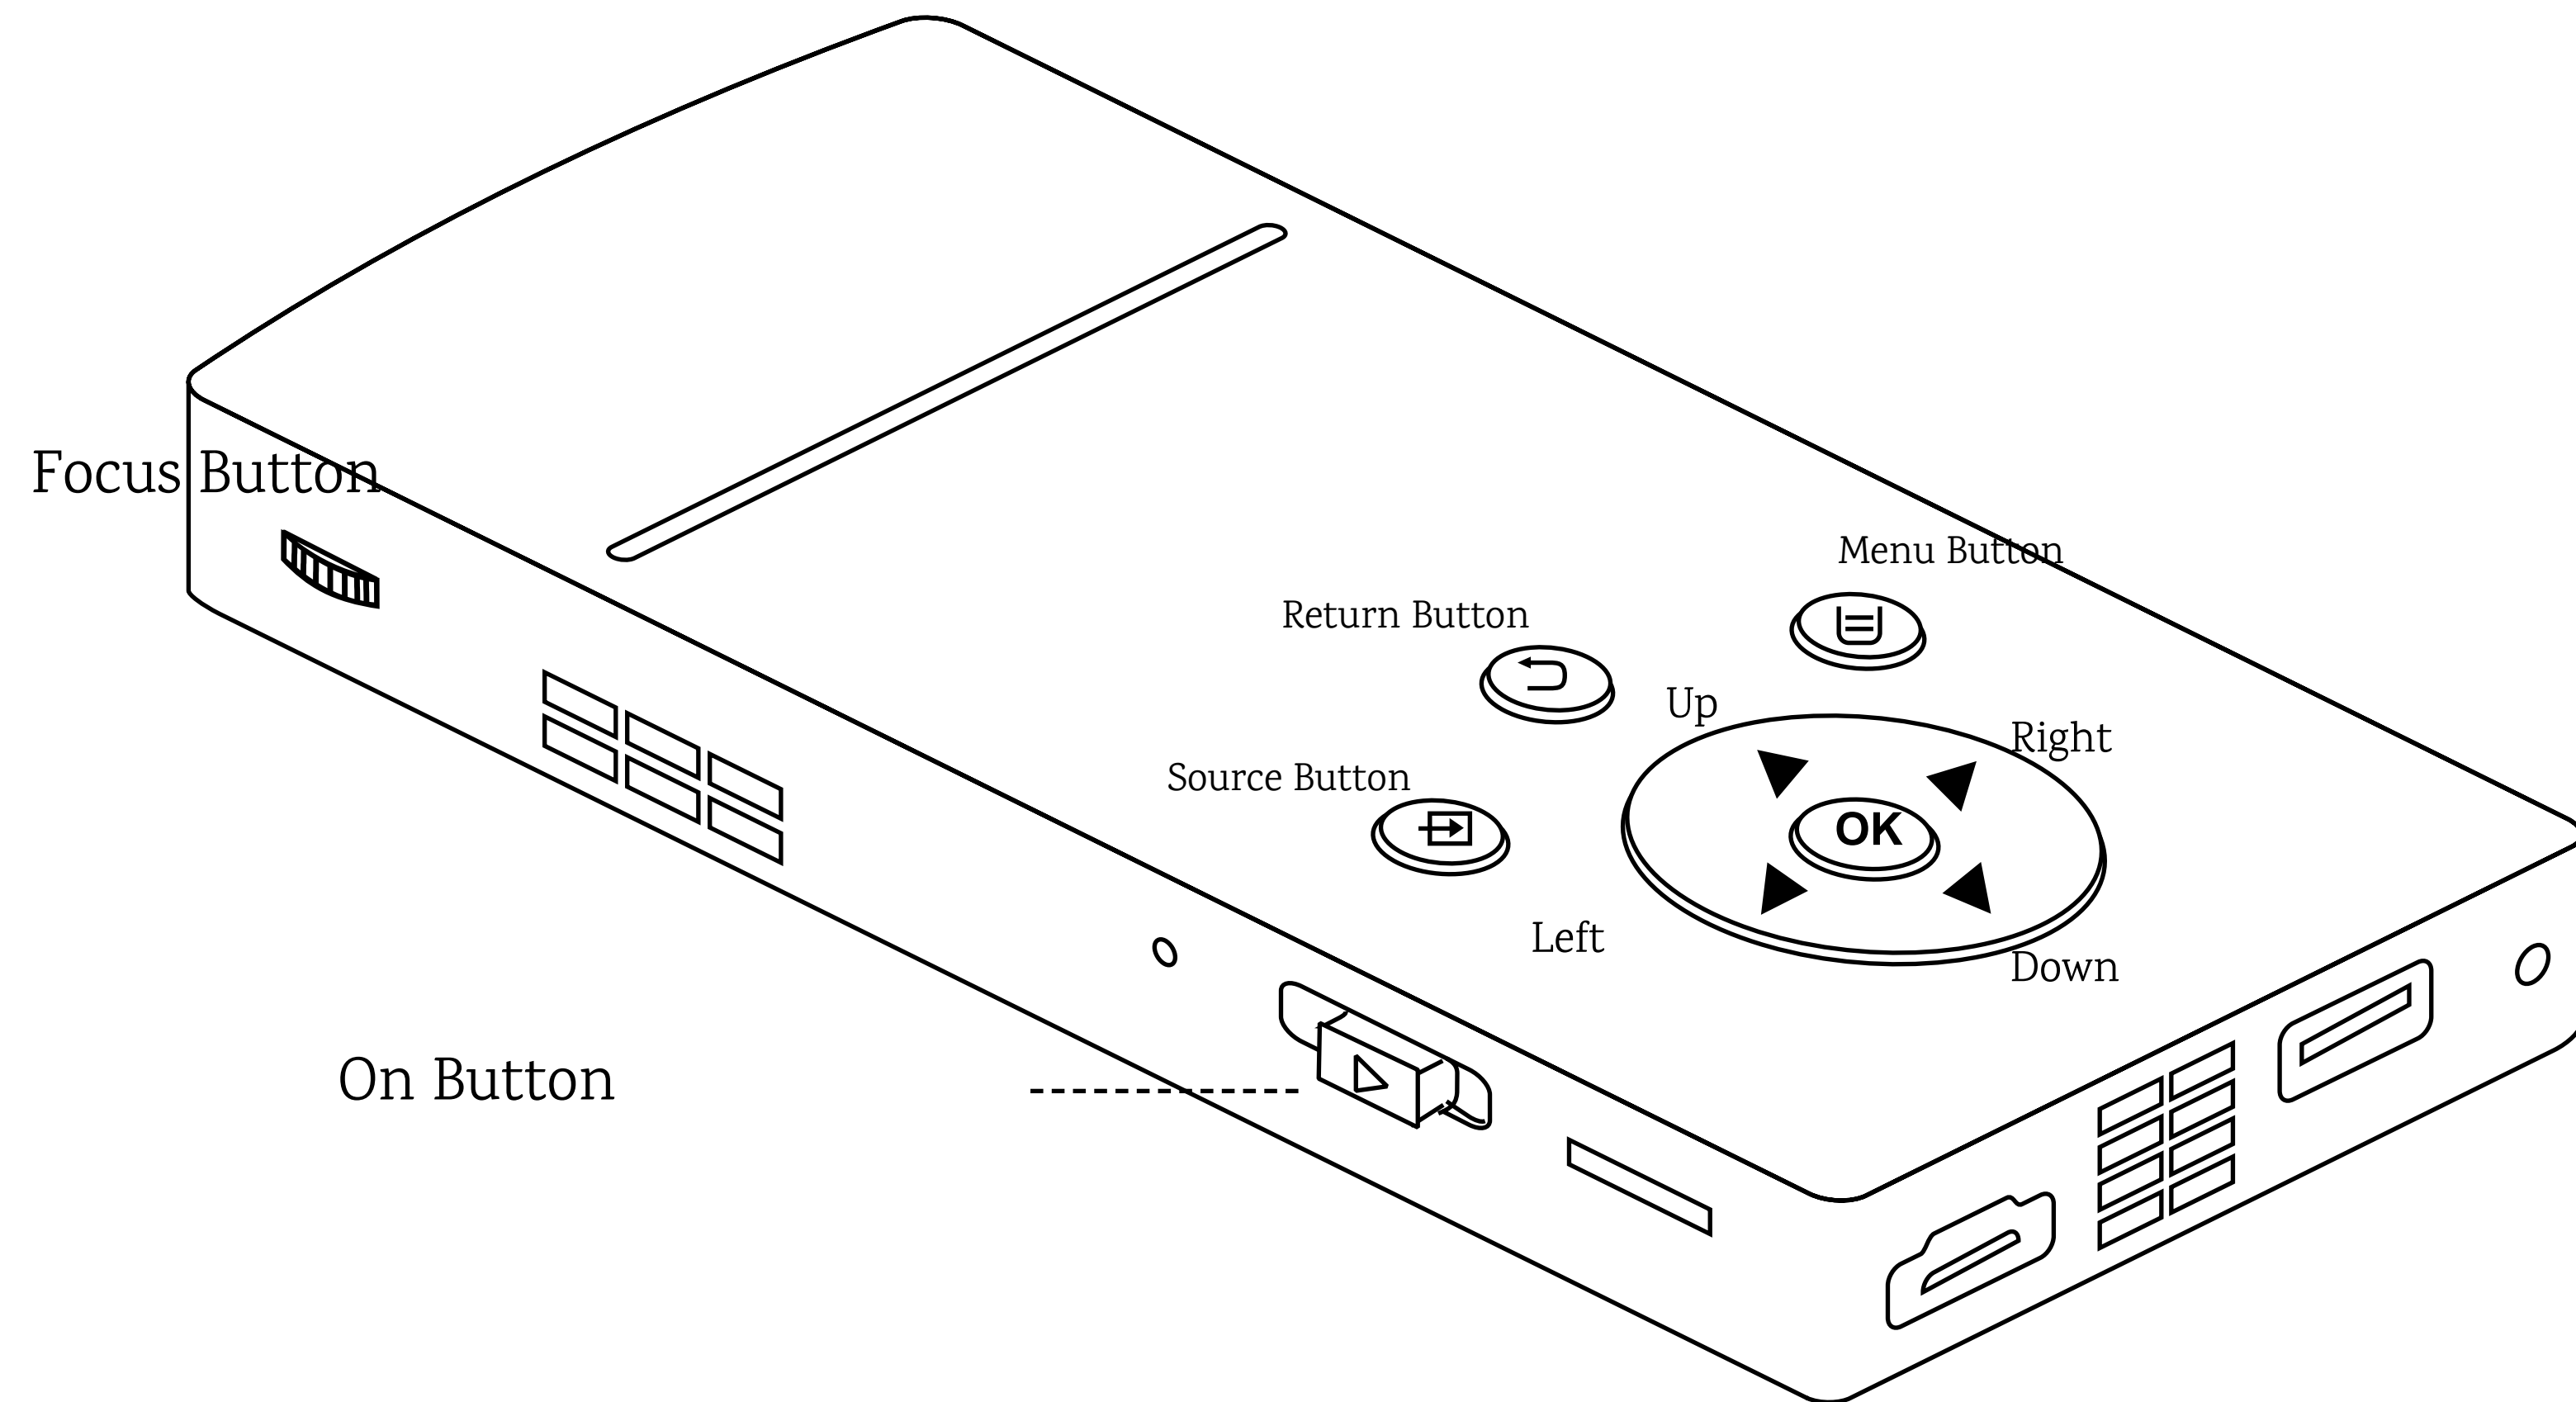


1 Turn the Pico on

Press the On button for 5 secs. If the pico does not come on, then attach the charger and charge the pico


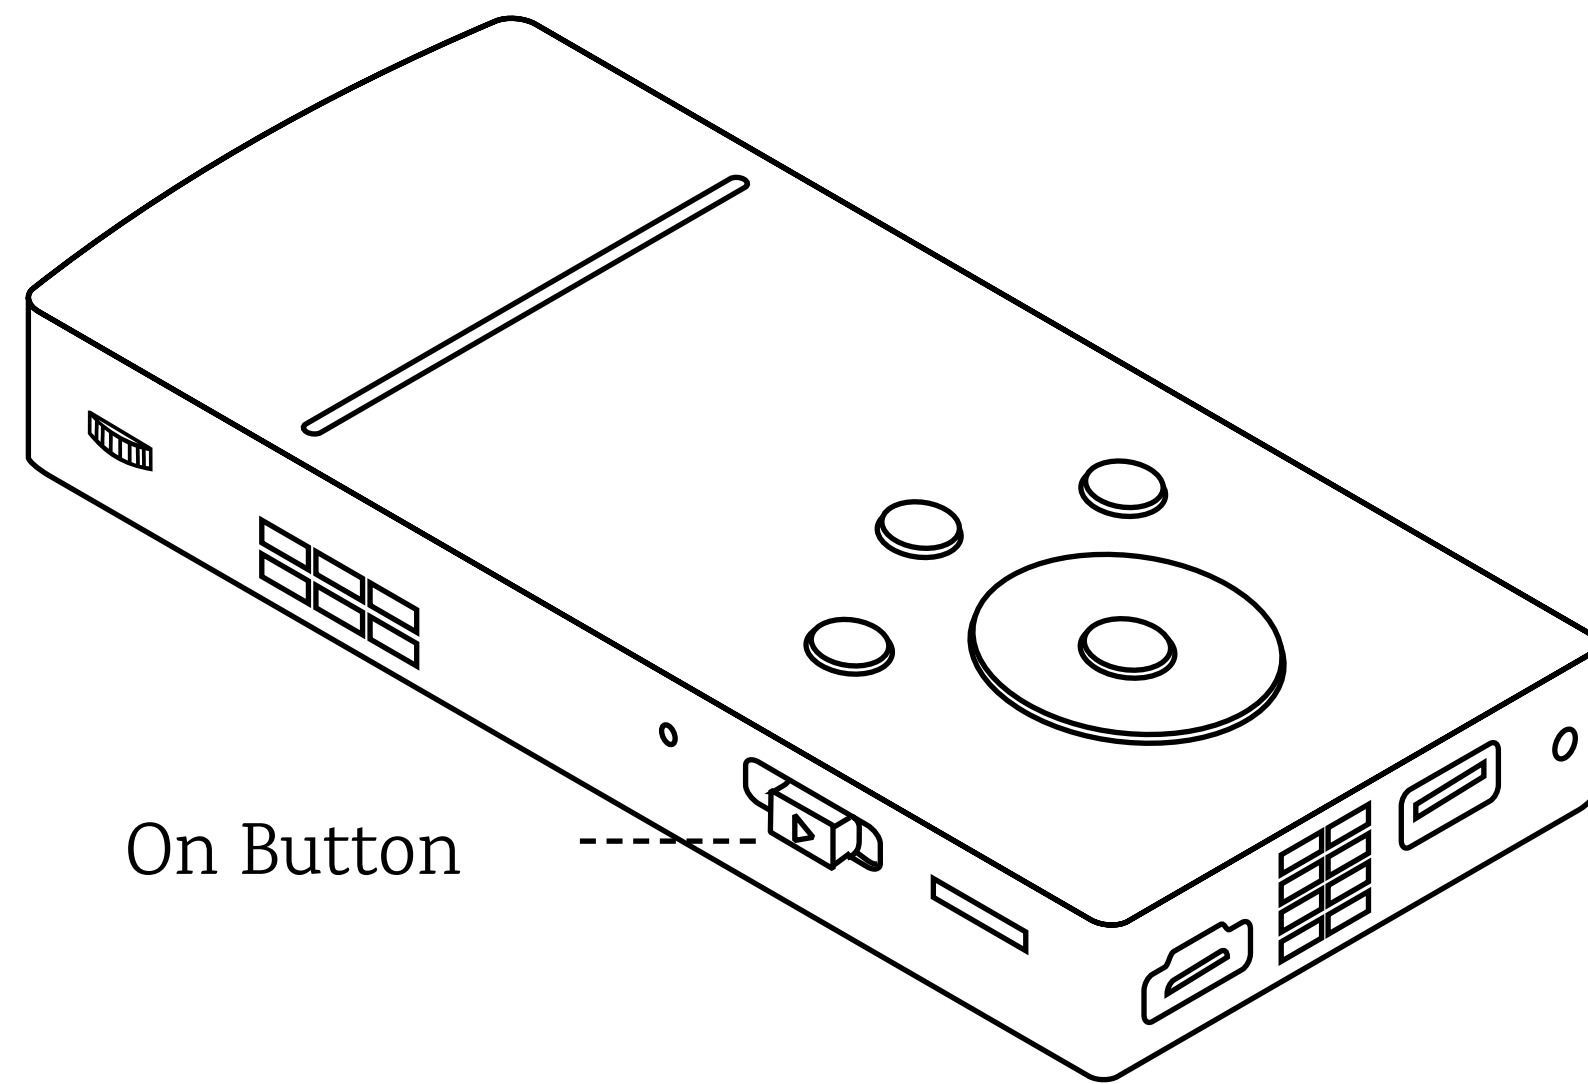


On/Off Symbol


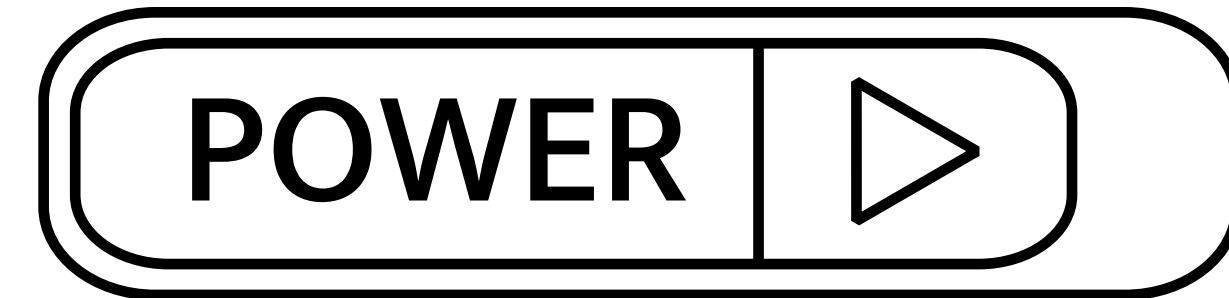


- When the pico is charging, the On button becomes red
- When the pico is fully charged then the On button becomes white or green


2 Take the Pico behind to make a bigger picture

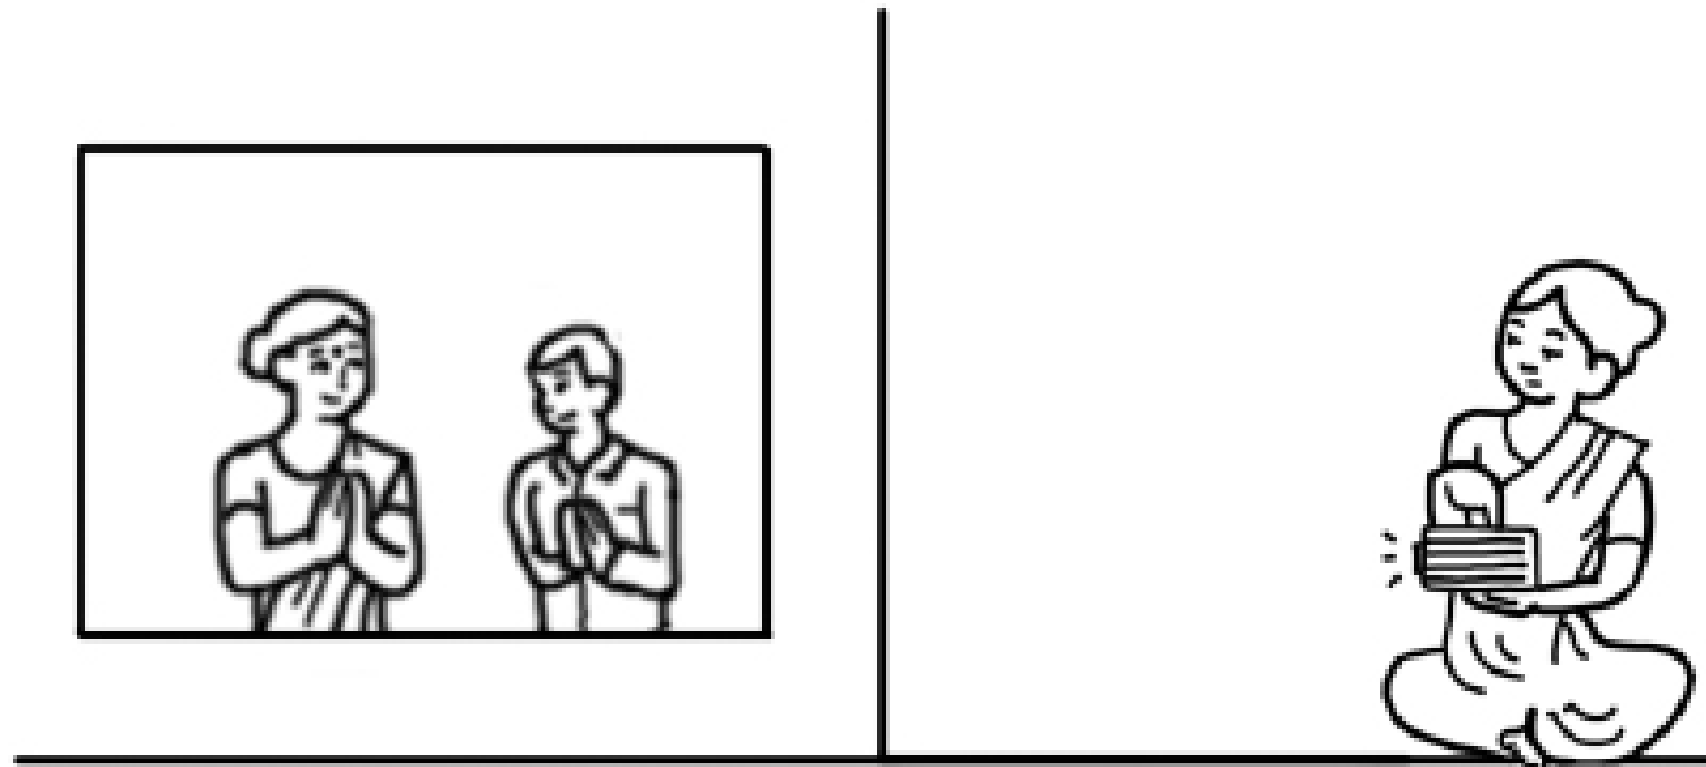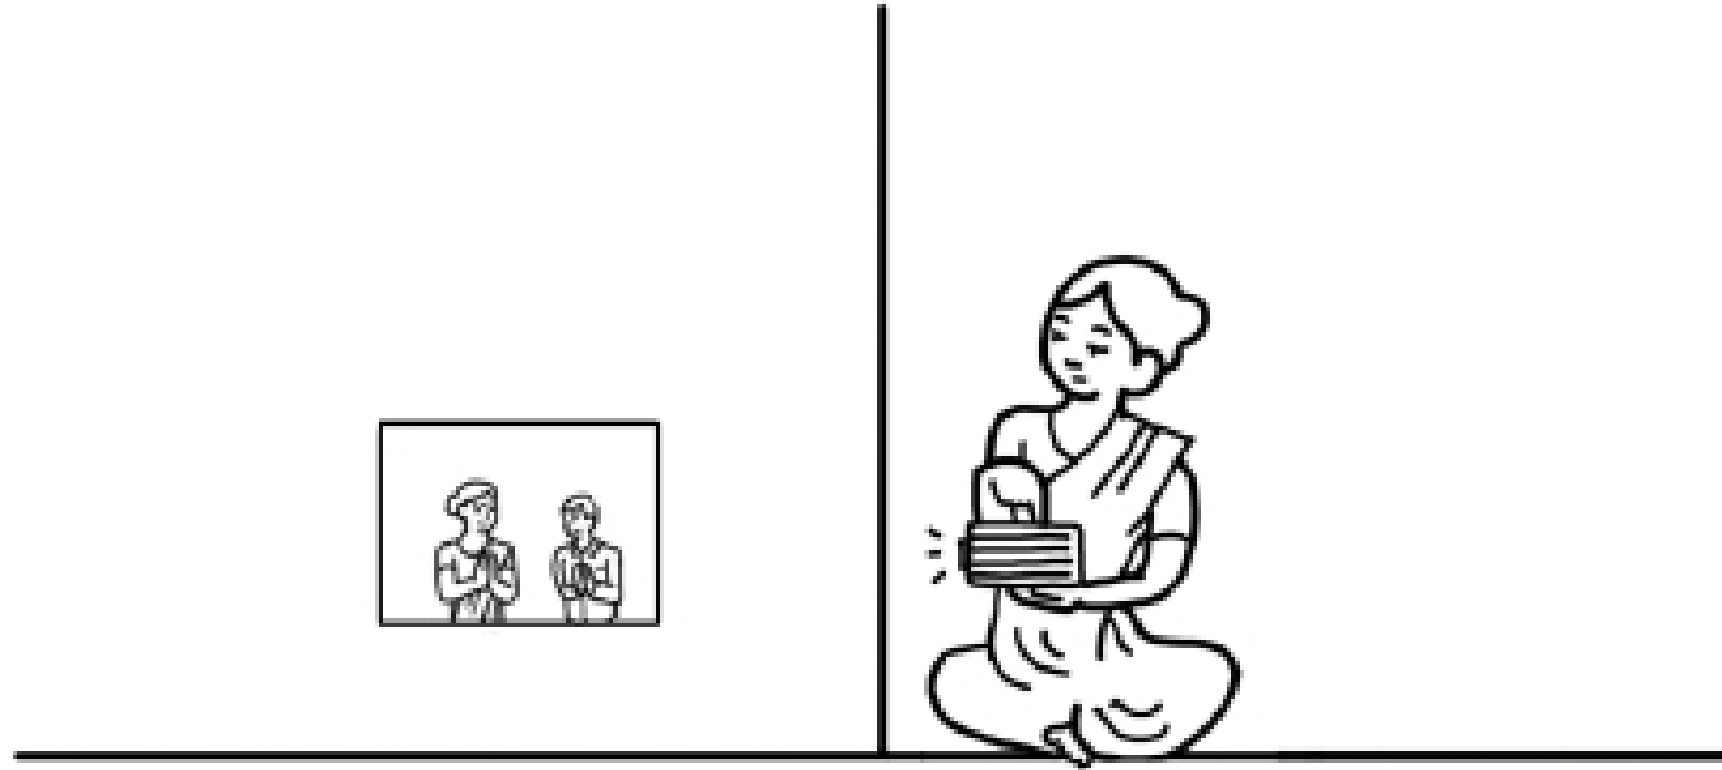

3 Make the picture at a height and keep it straight

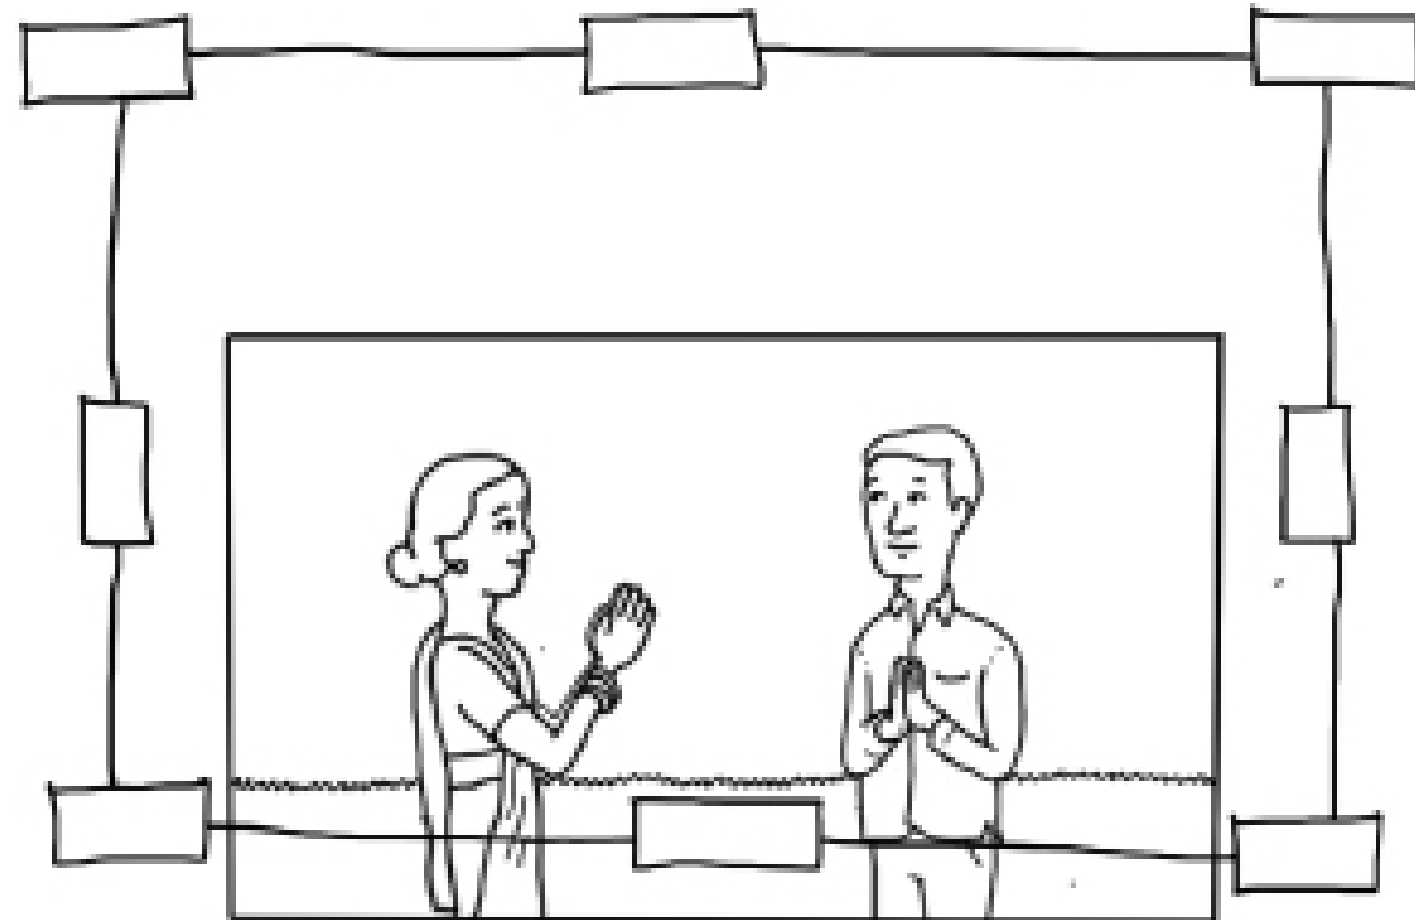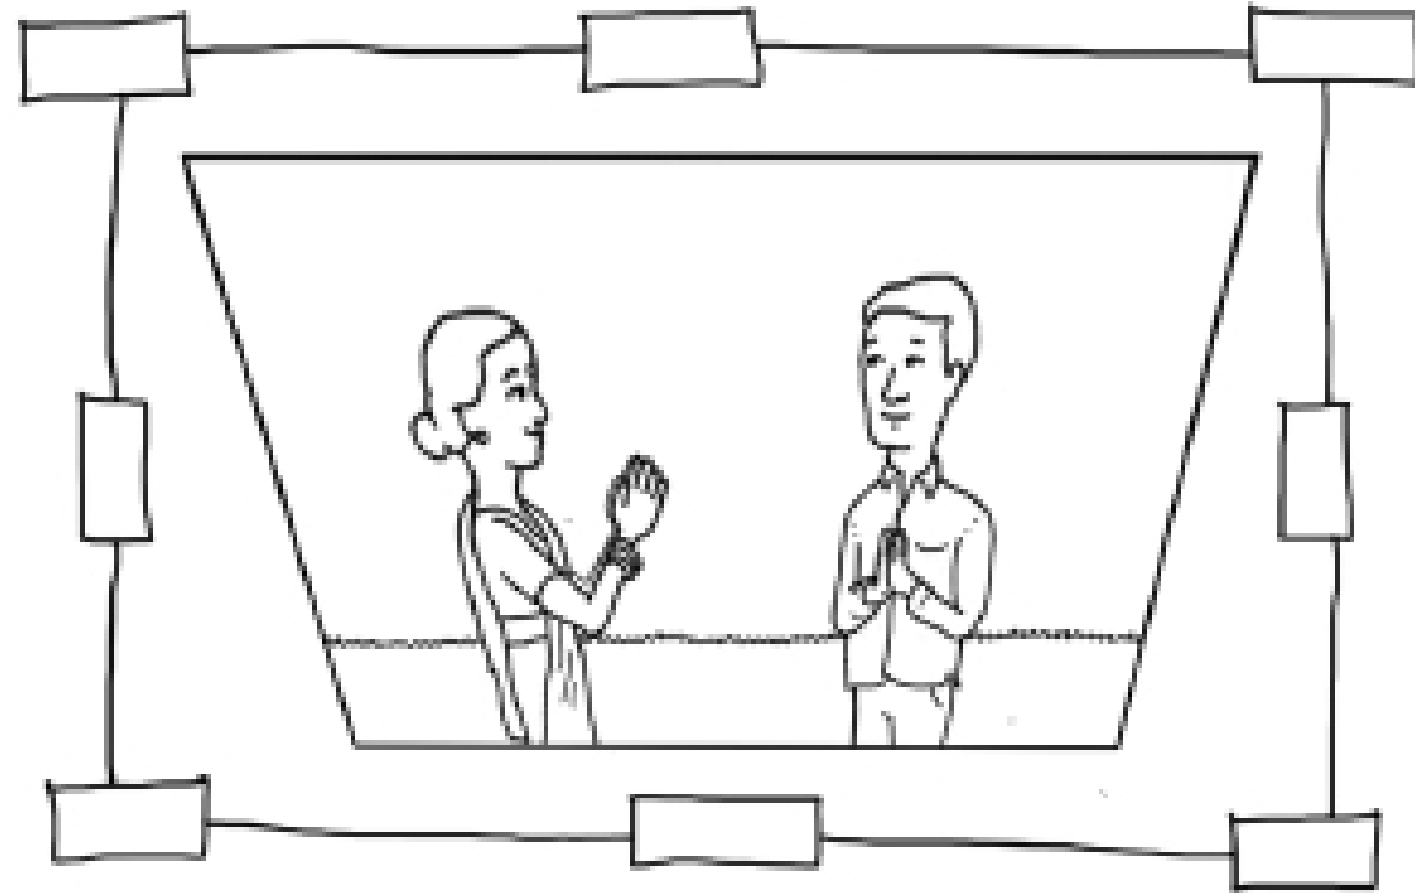


Always keep the pico at a height

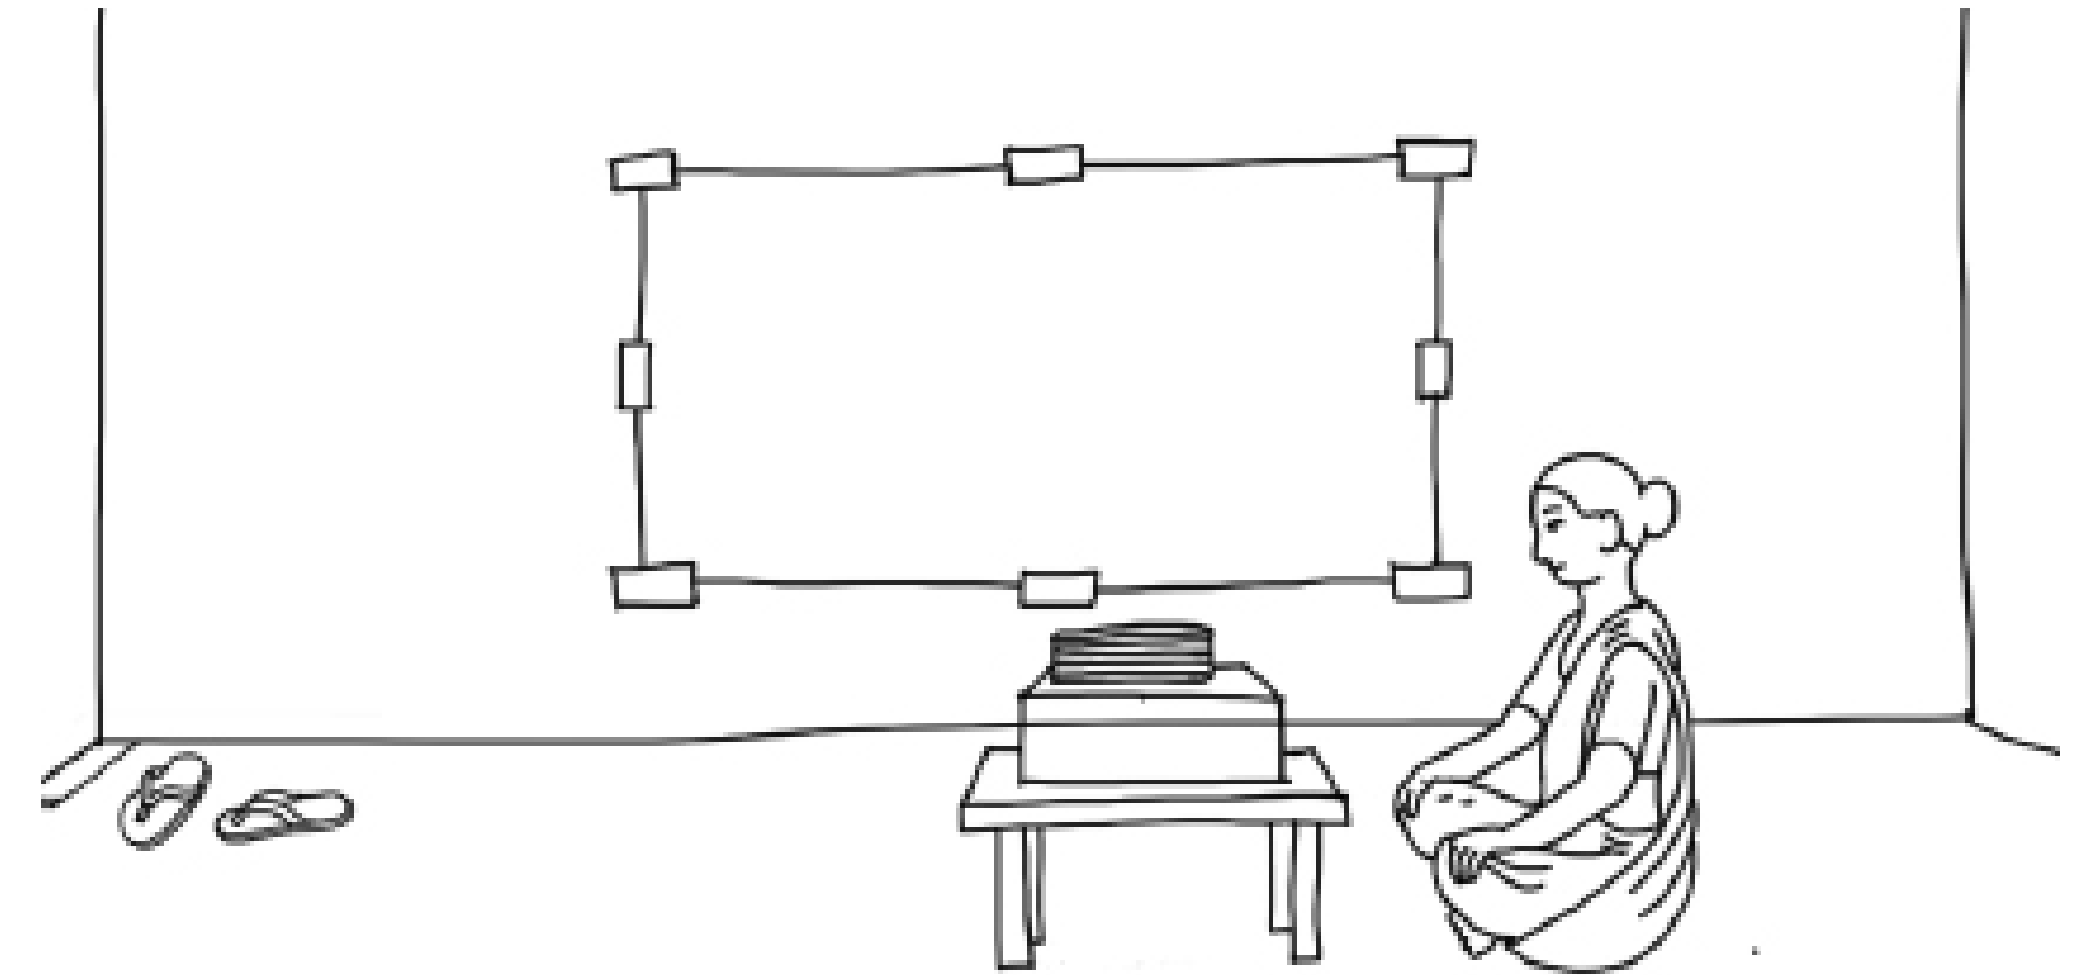


4 Make the picture clear

Move the Focus button

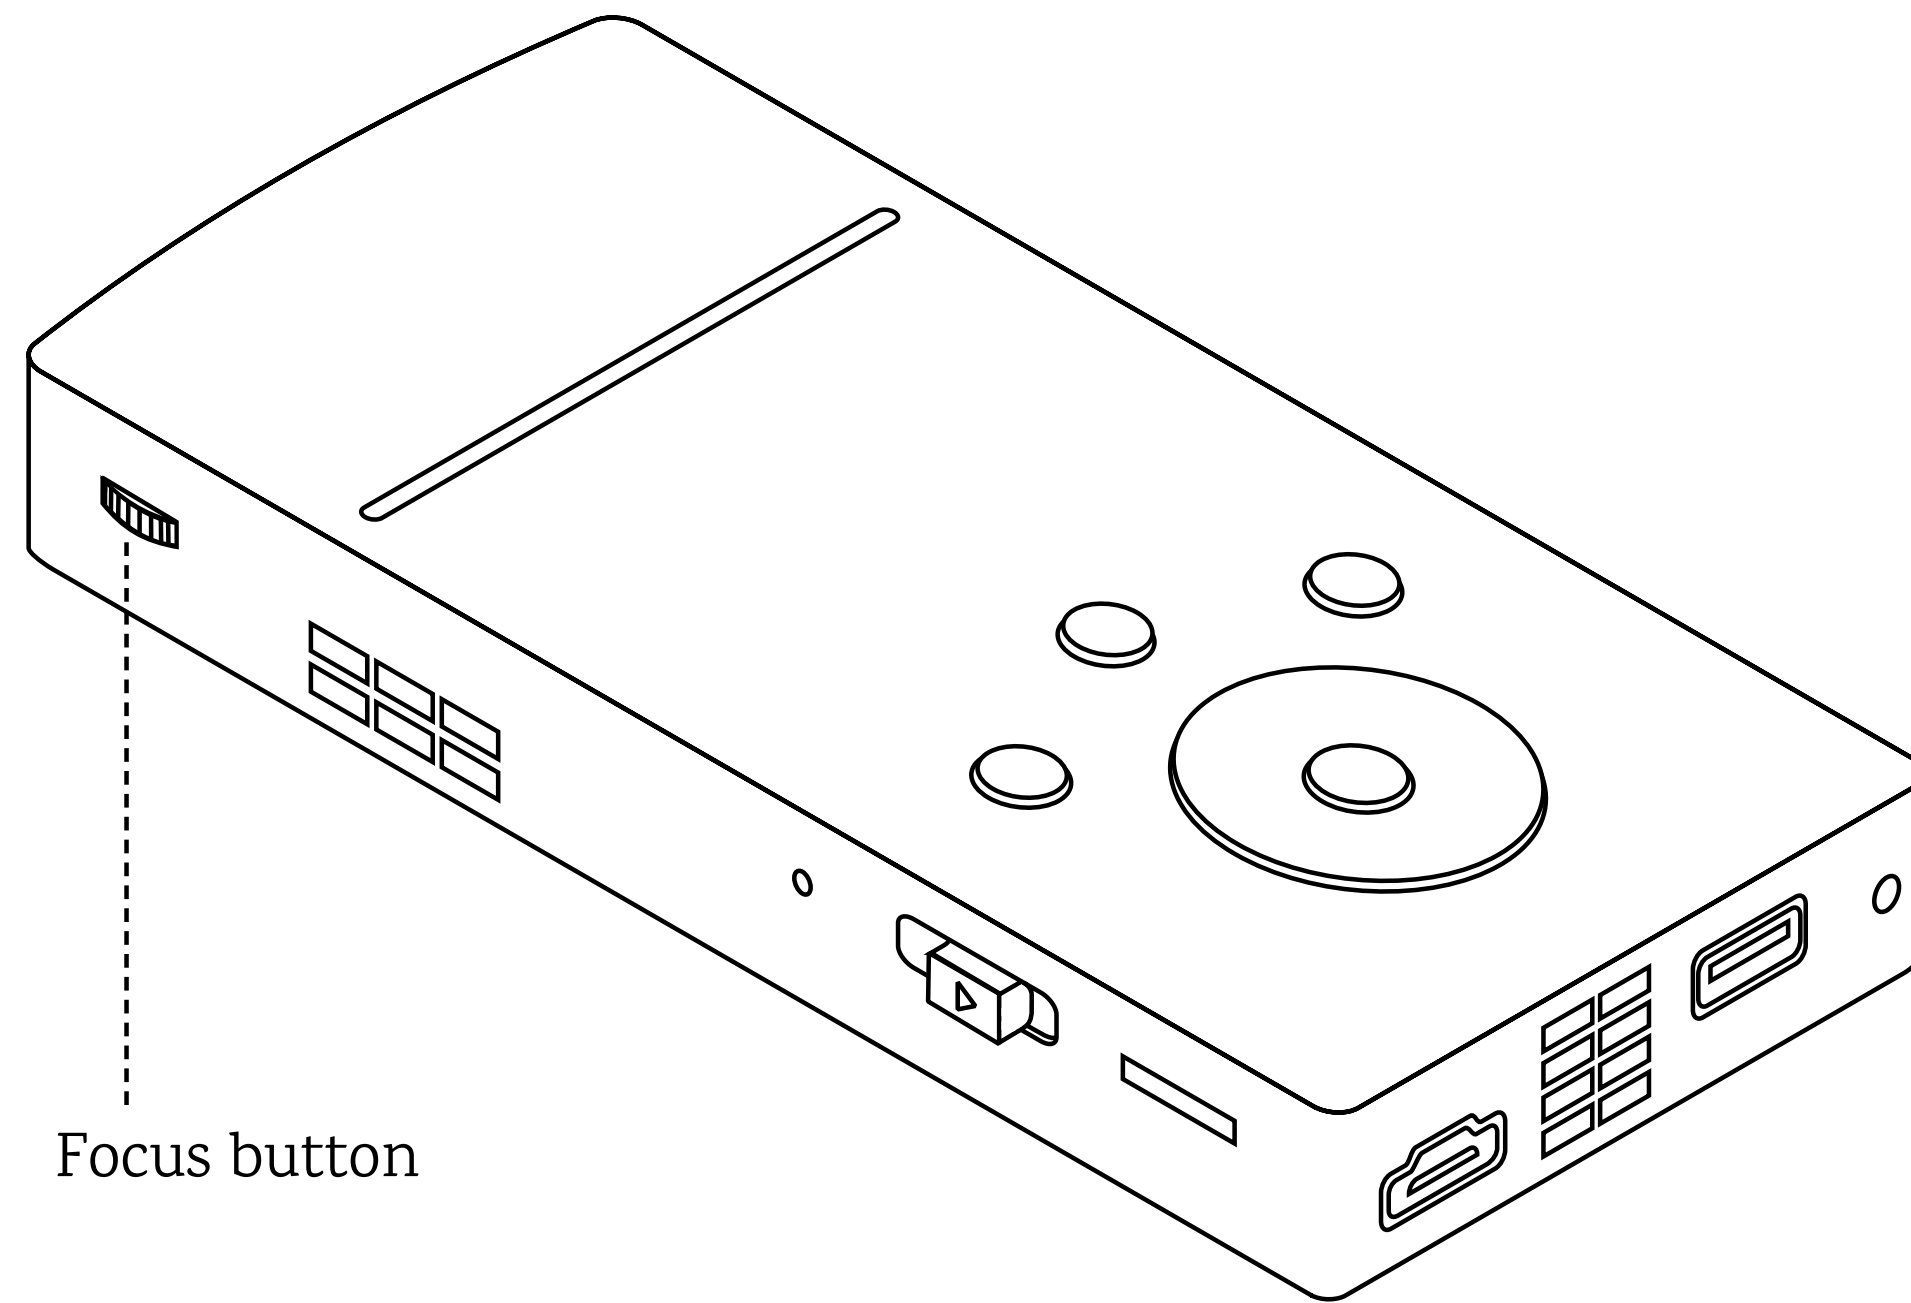


Focus button

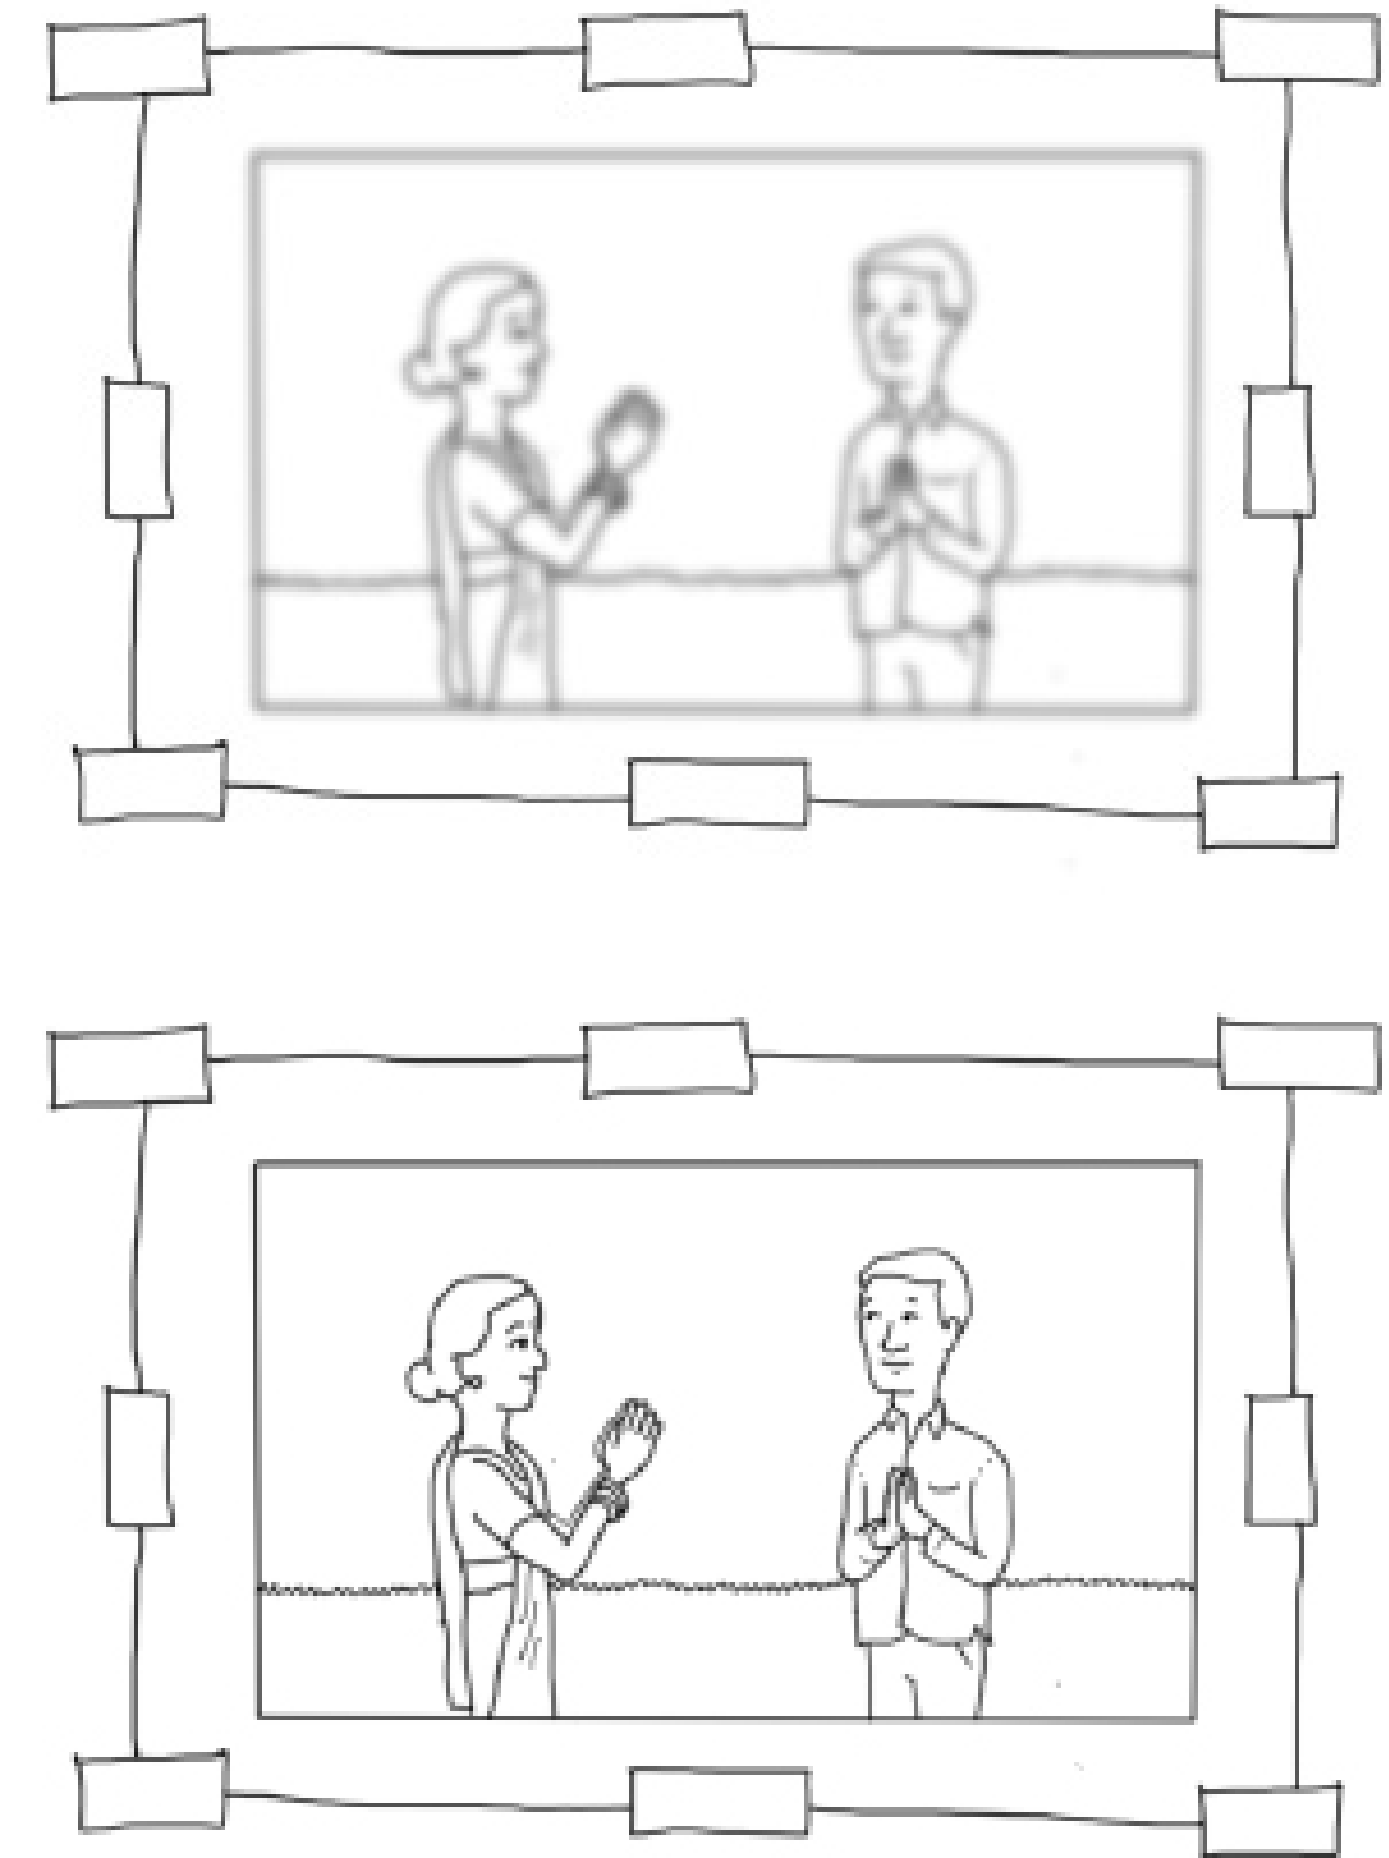


- Move the Focus button slowly to make the picture clear. If you can read the written words clearly, then the picture is clear.


5 Put the SD card in

The golden part should be upwards and towards the pico while putting the SD card in



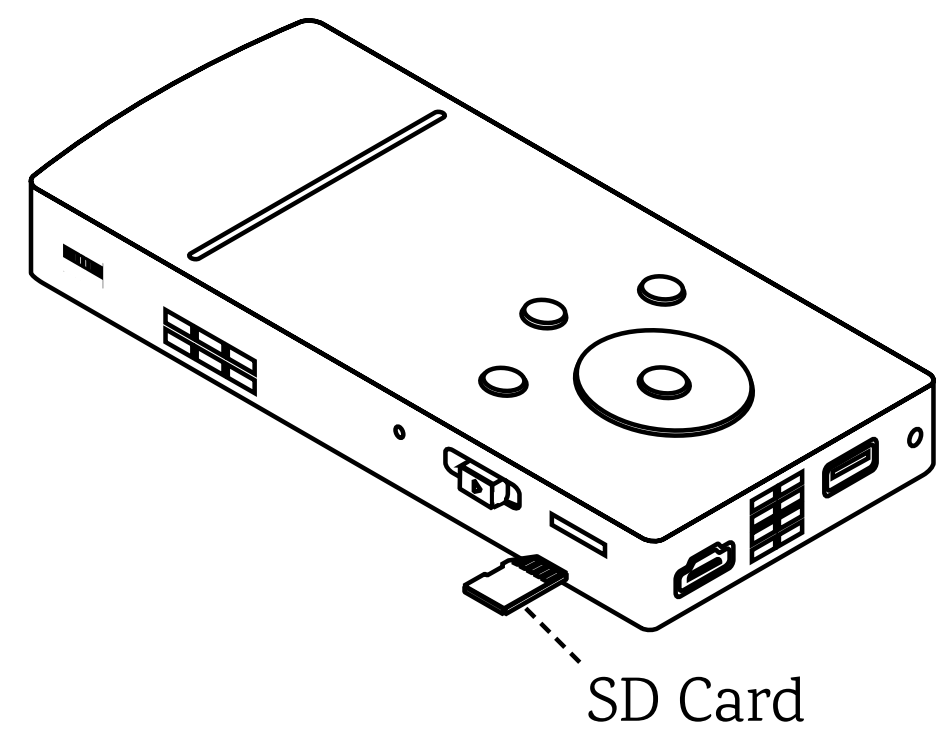


When the SD card has gone inside fully there would be a click sound and the SD card would stay inside

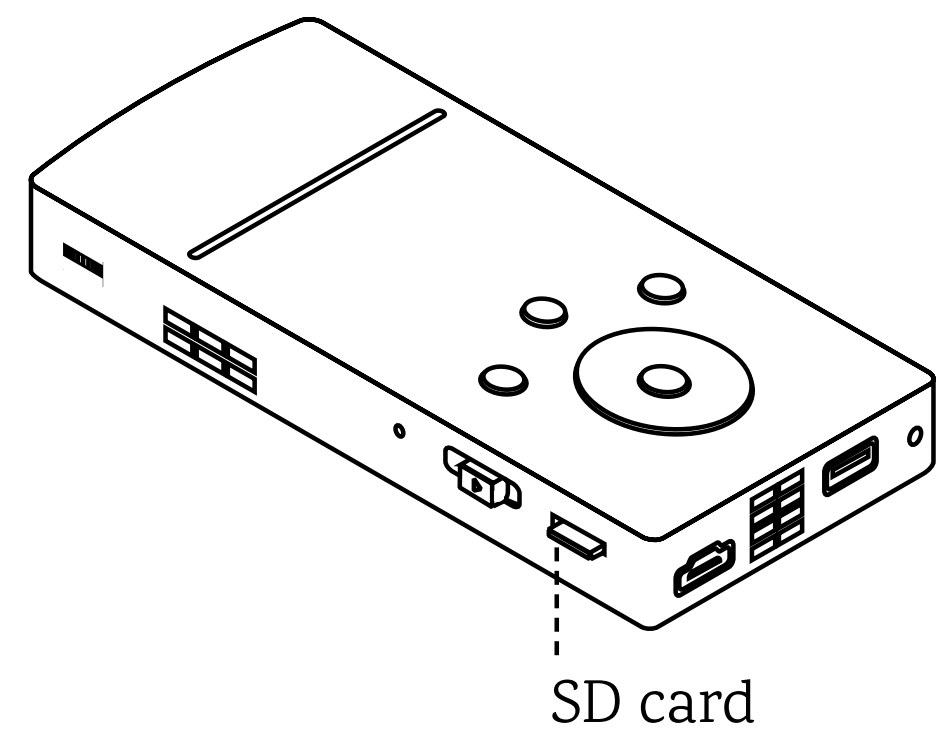

Press the button with this symbol  Select 'SD / TF' and then press OK


Source Button

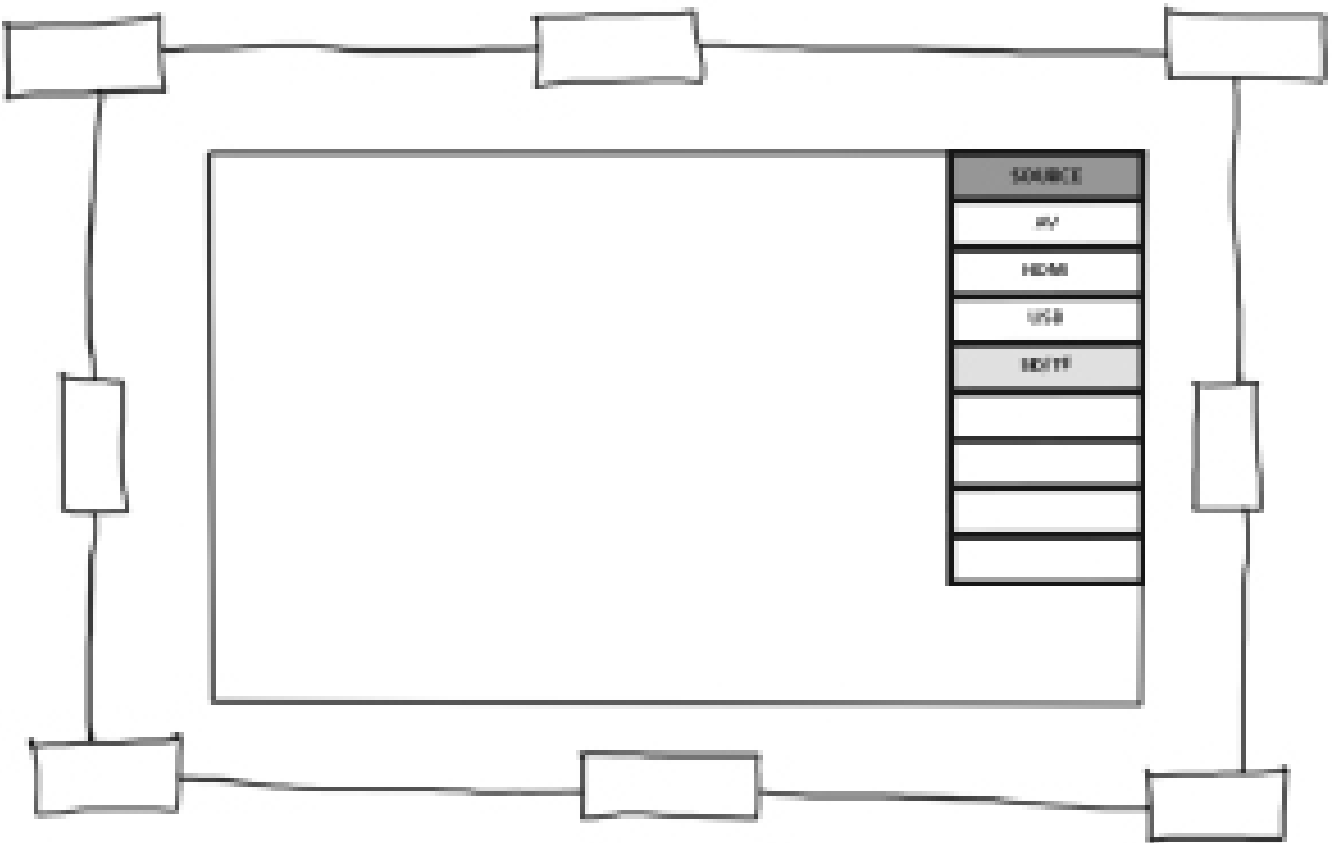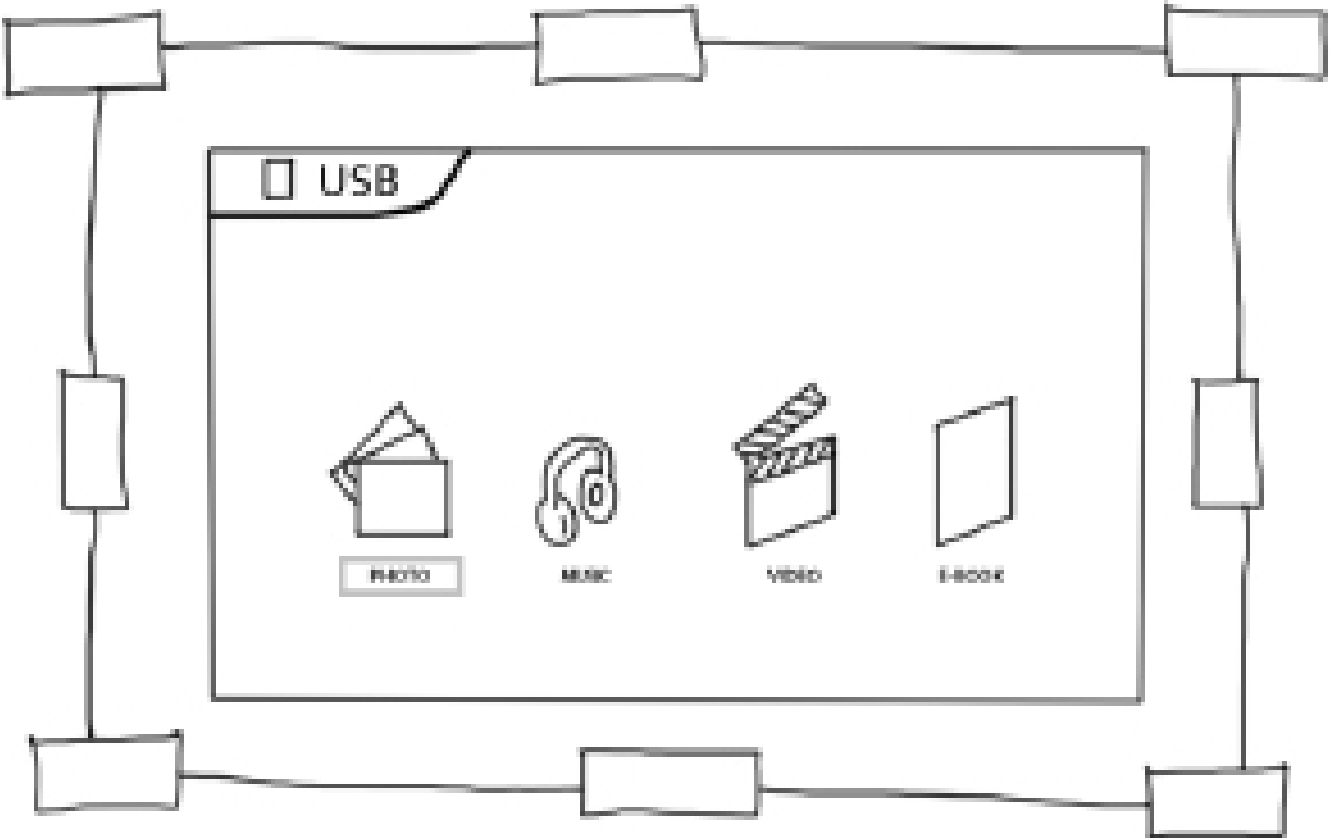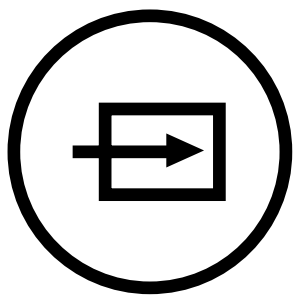


■ Use the remote from behind the pico

6 Go to the video list


Use the left -right buttons to go to the symbol of 'video'

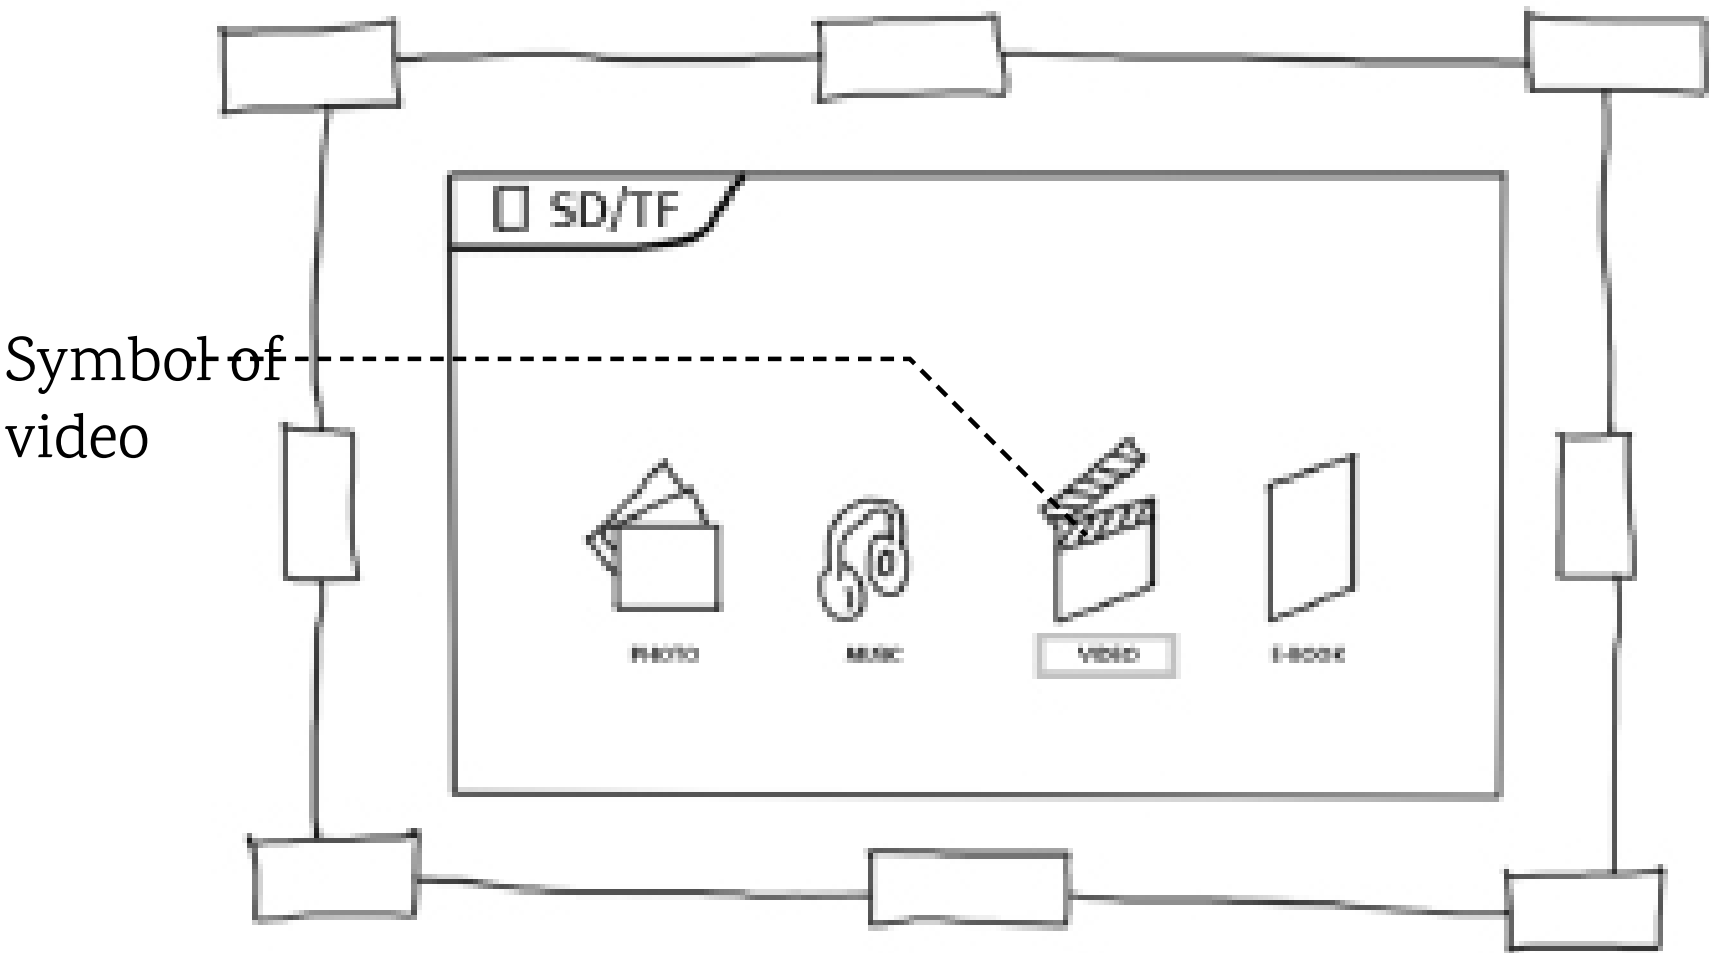

Go to ' C ' and Press 'OK' button


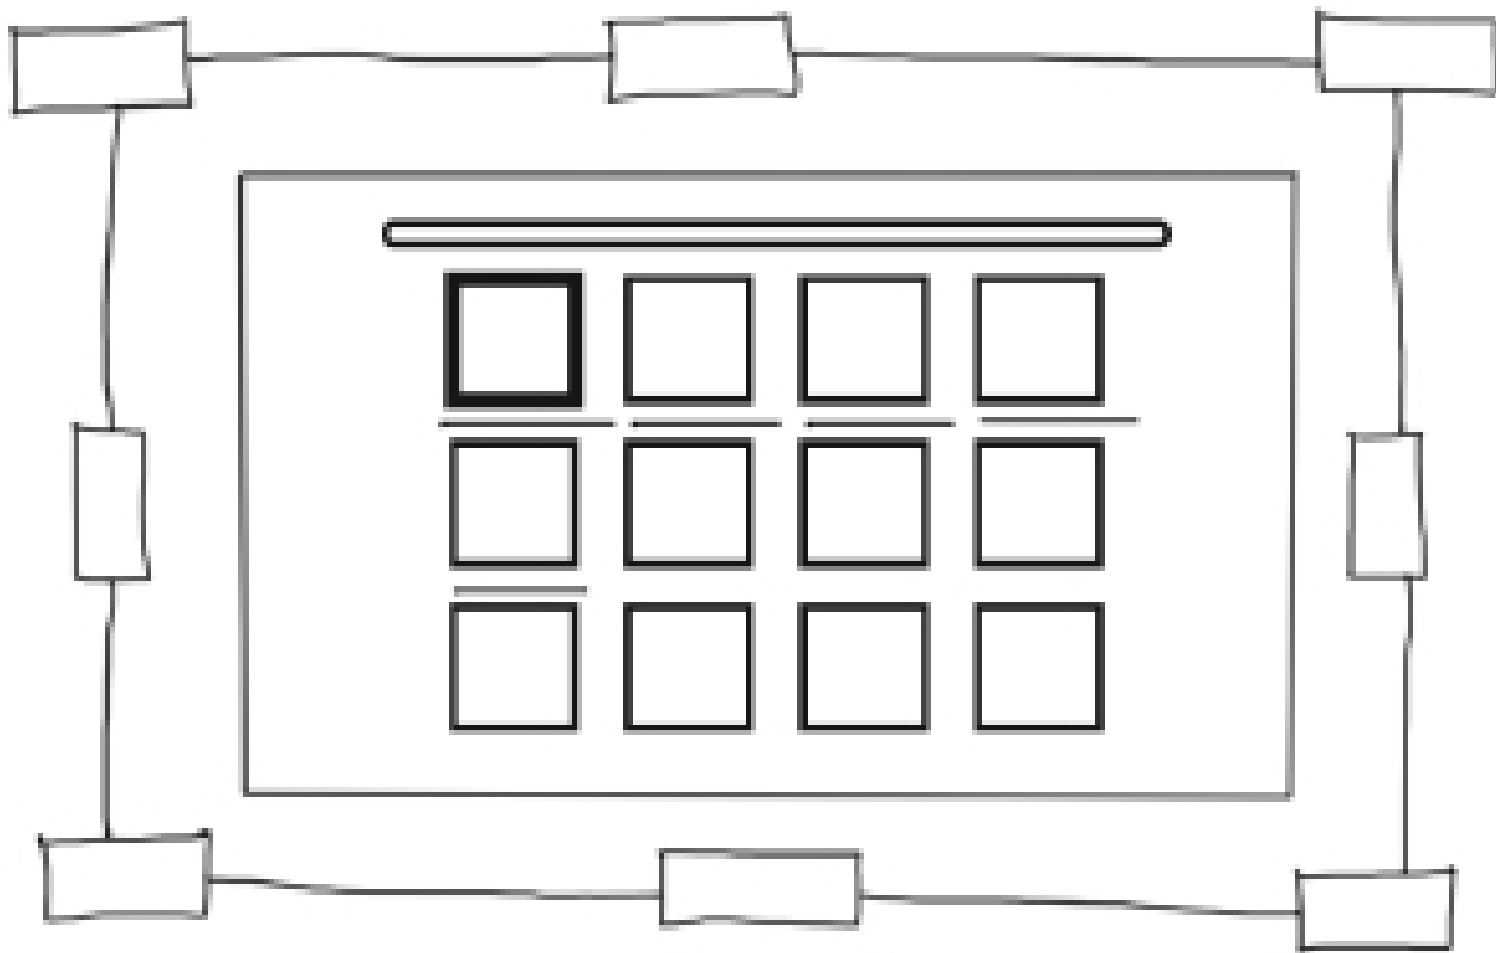


Click 'OK' button

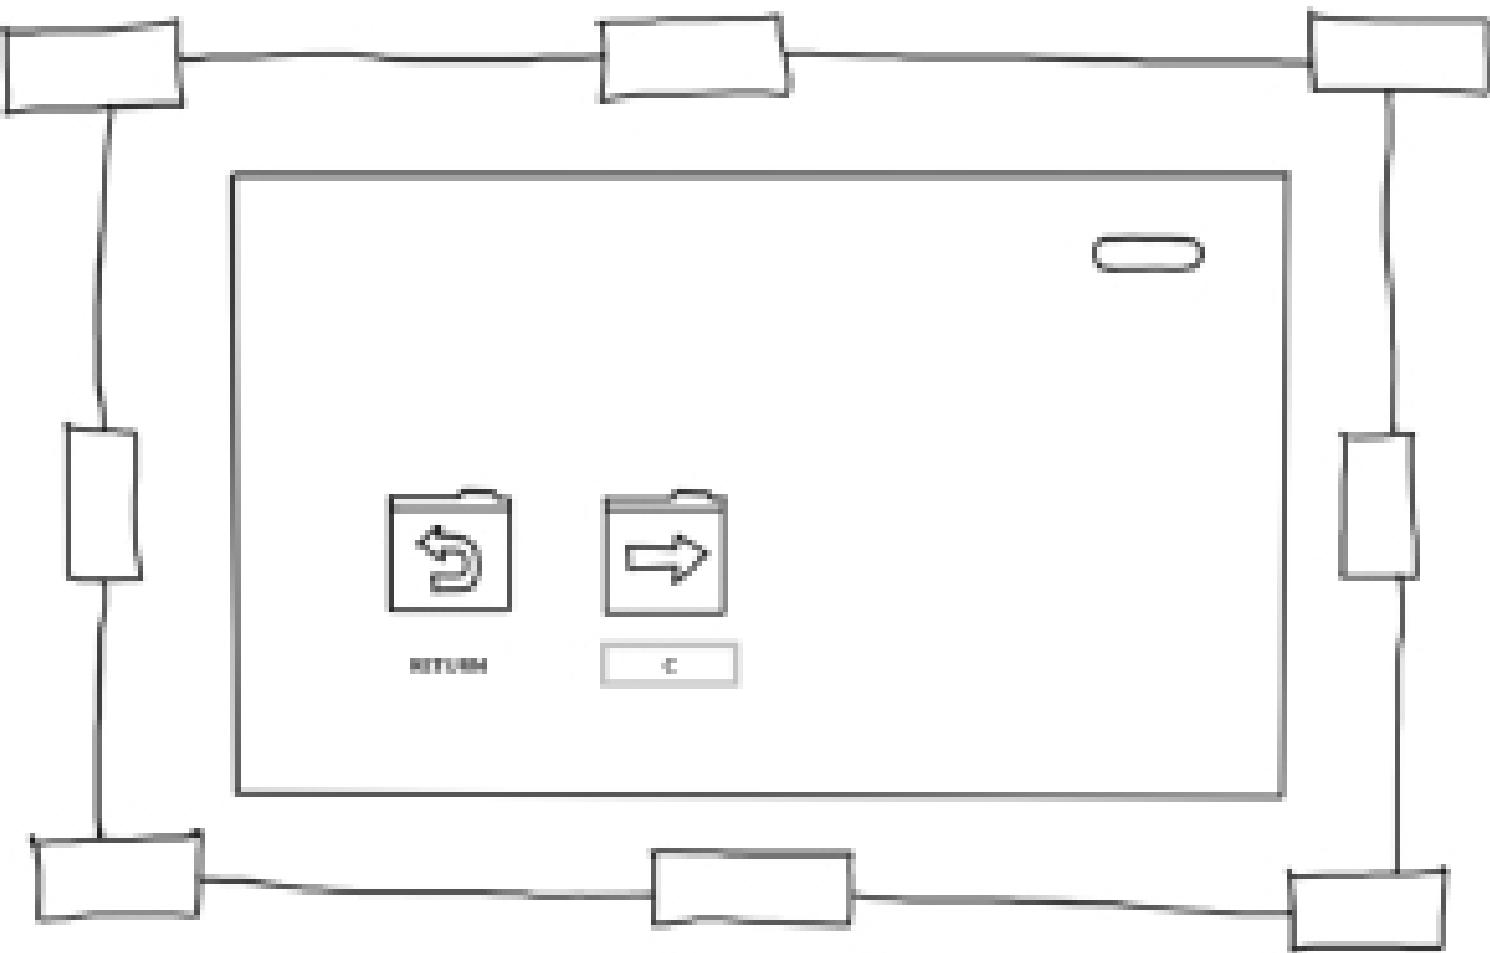


7 Select video

Use left, right, up and down buttons to select the video you want to play

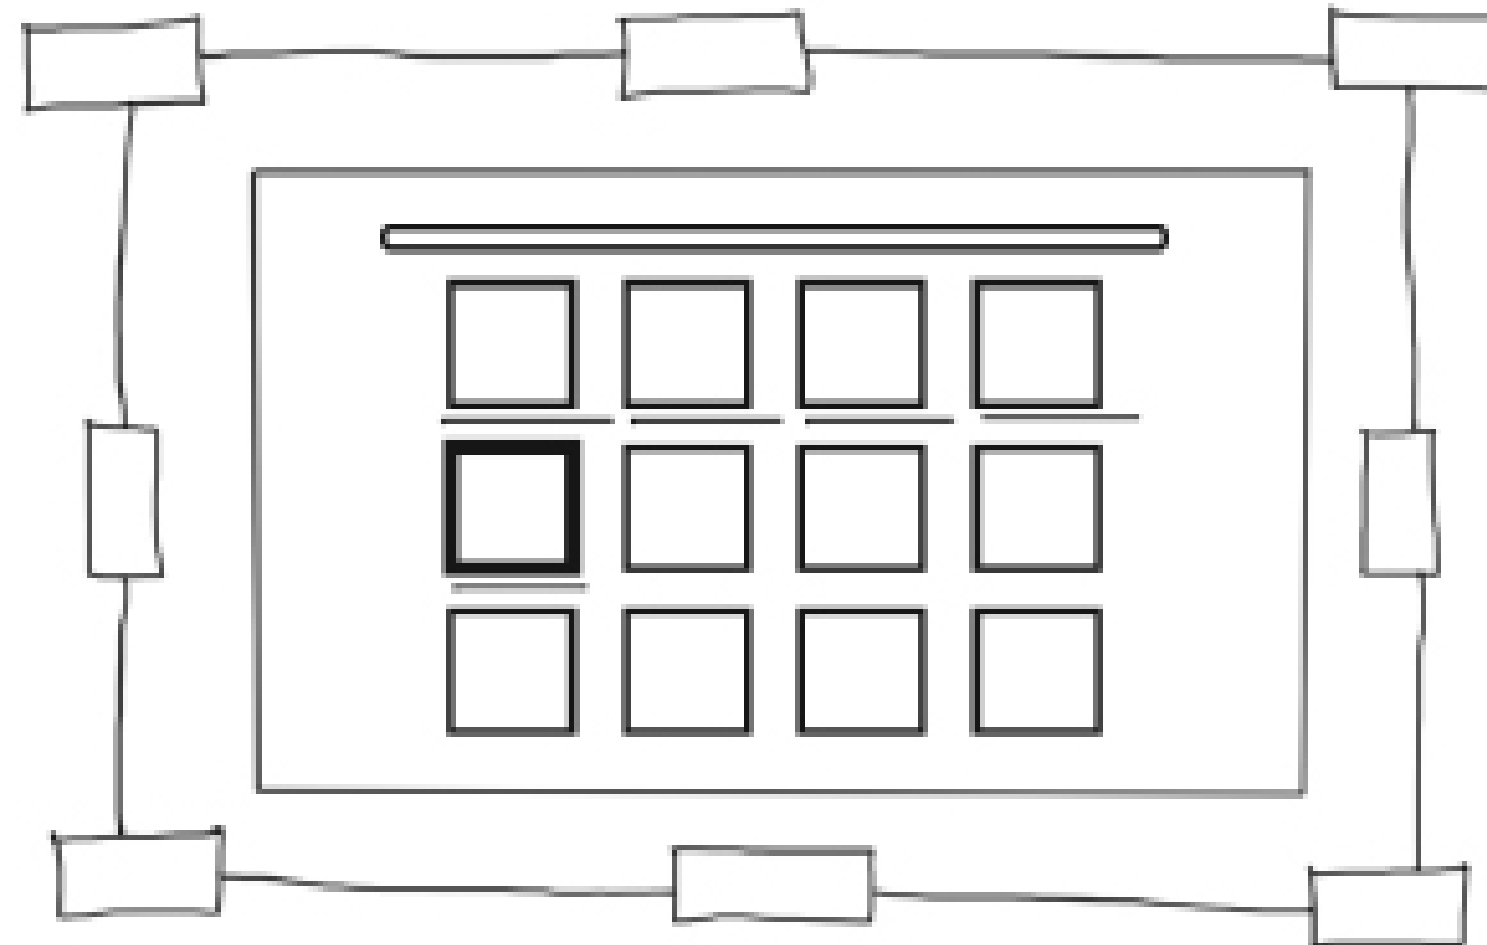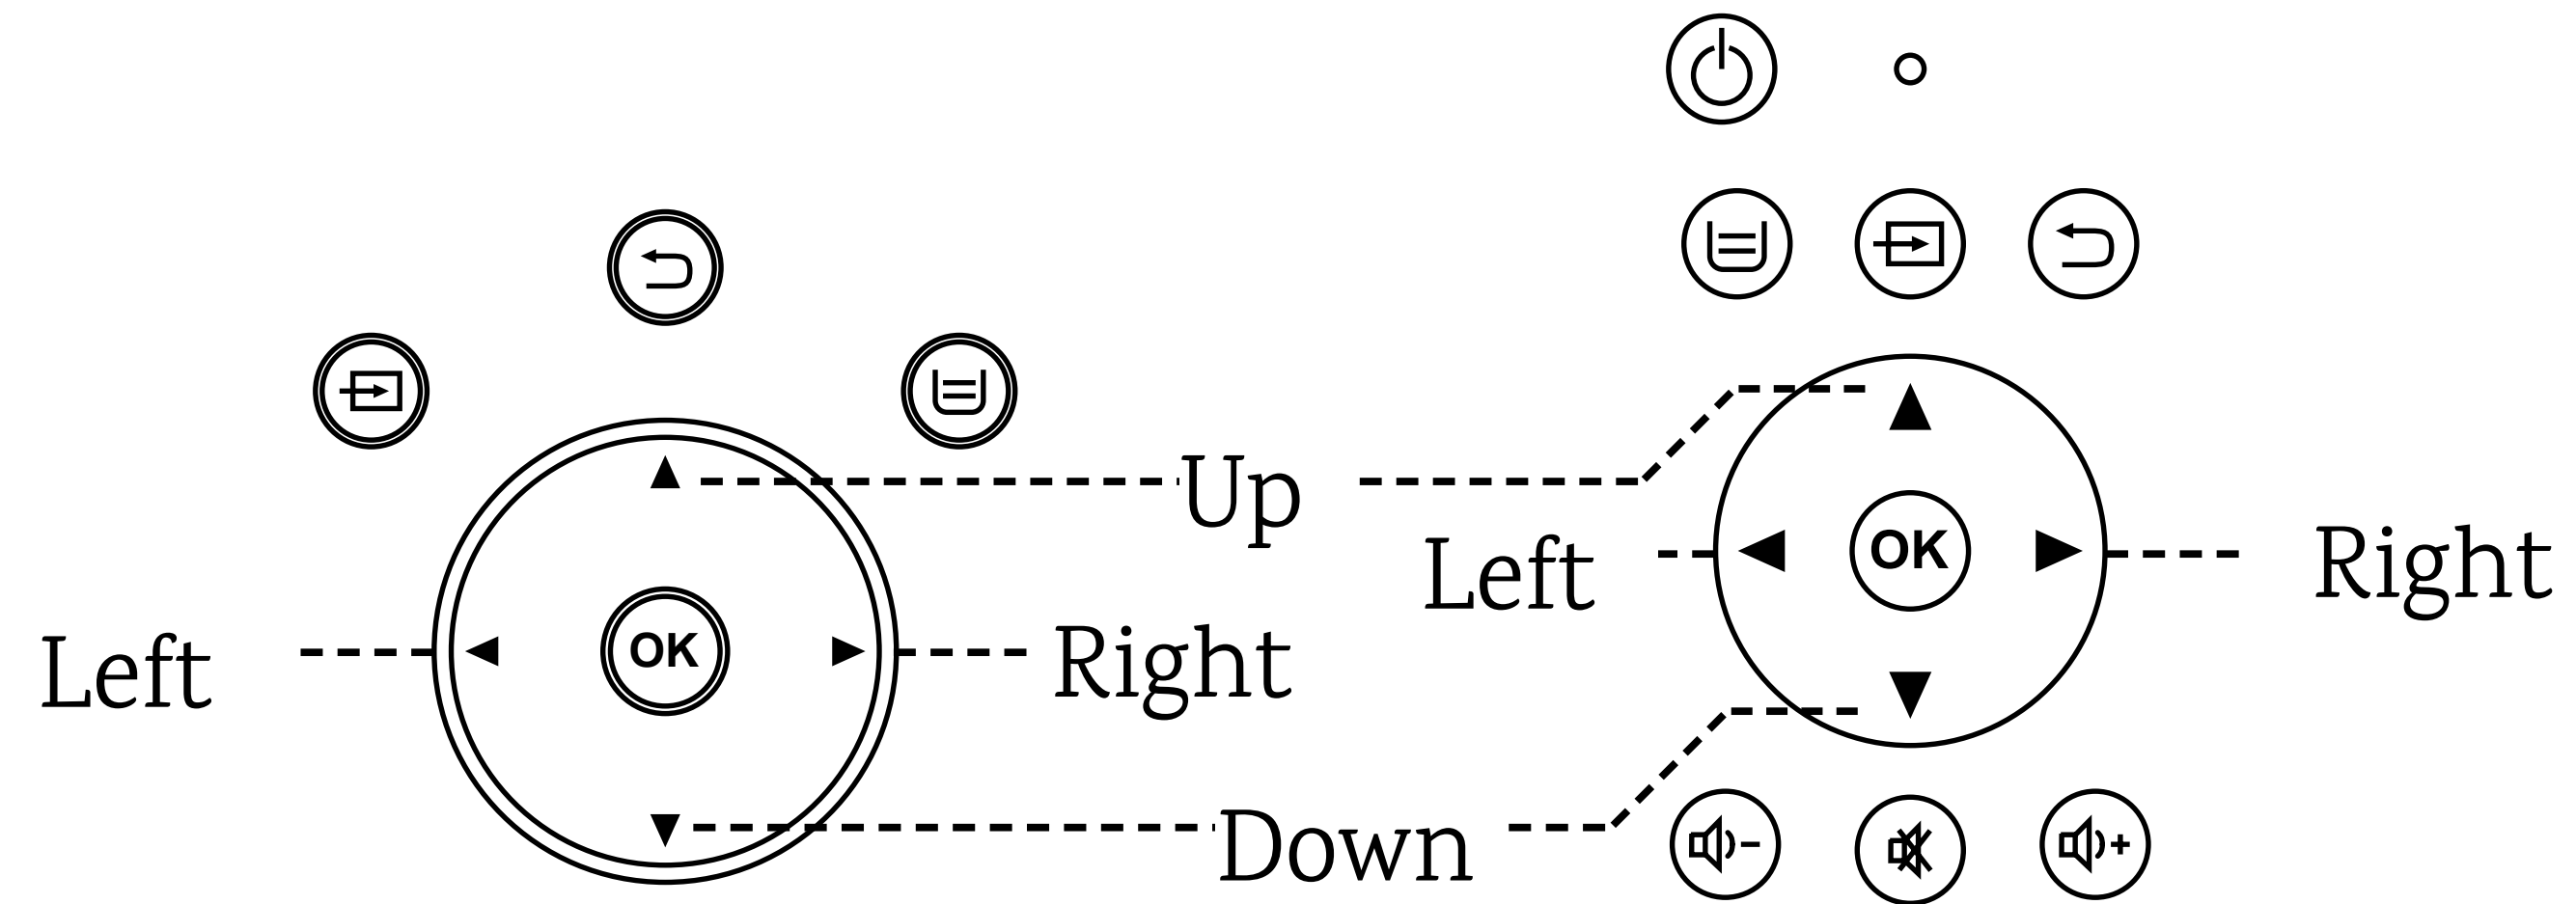



8 Play video

To play the video selected on the video list, press 'OK'

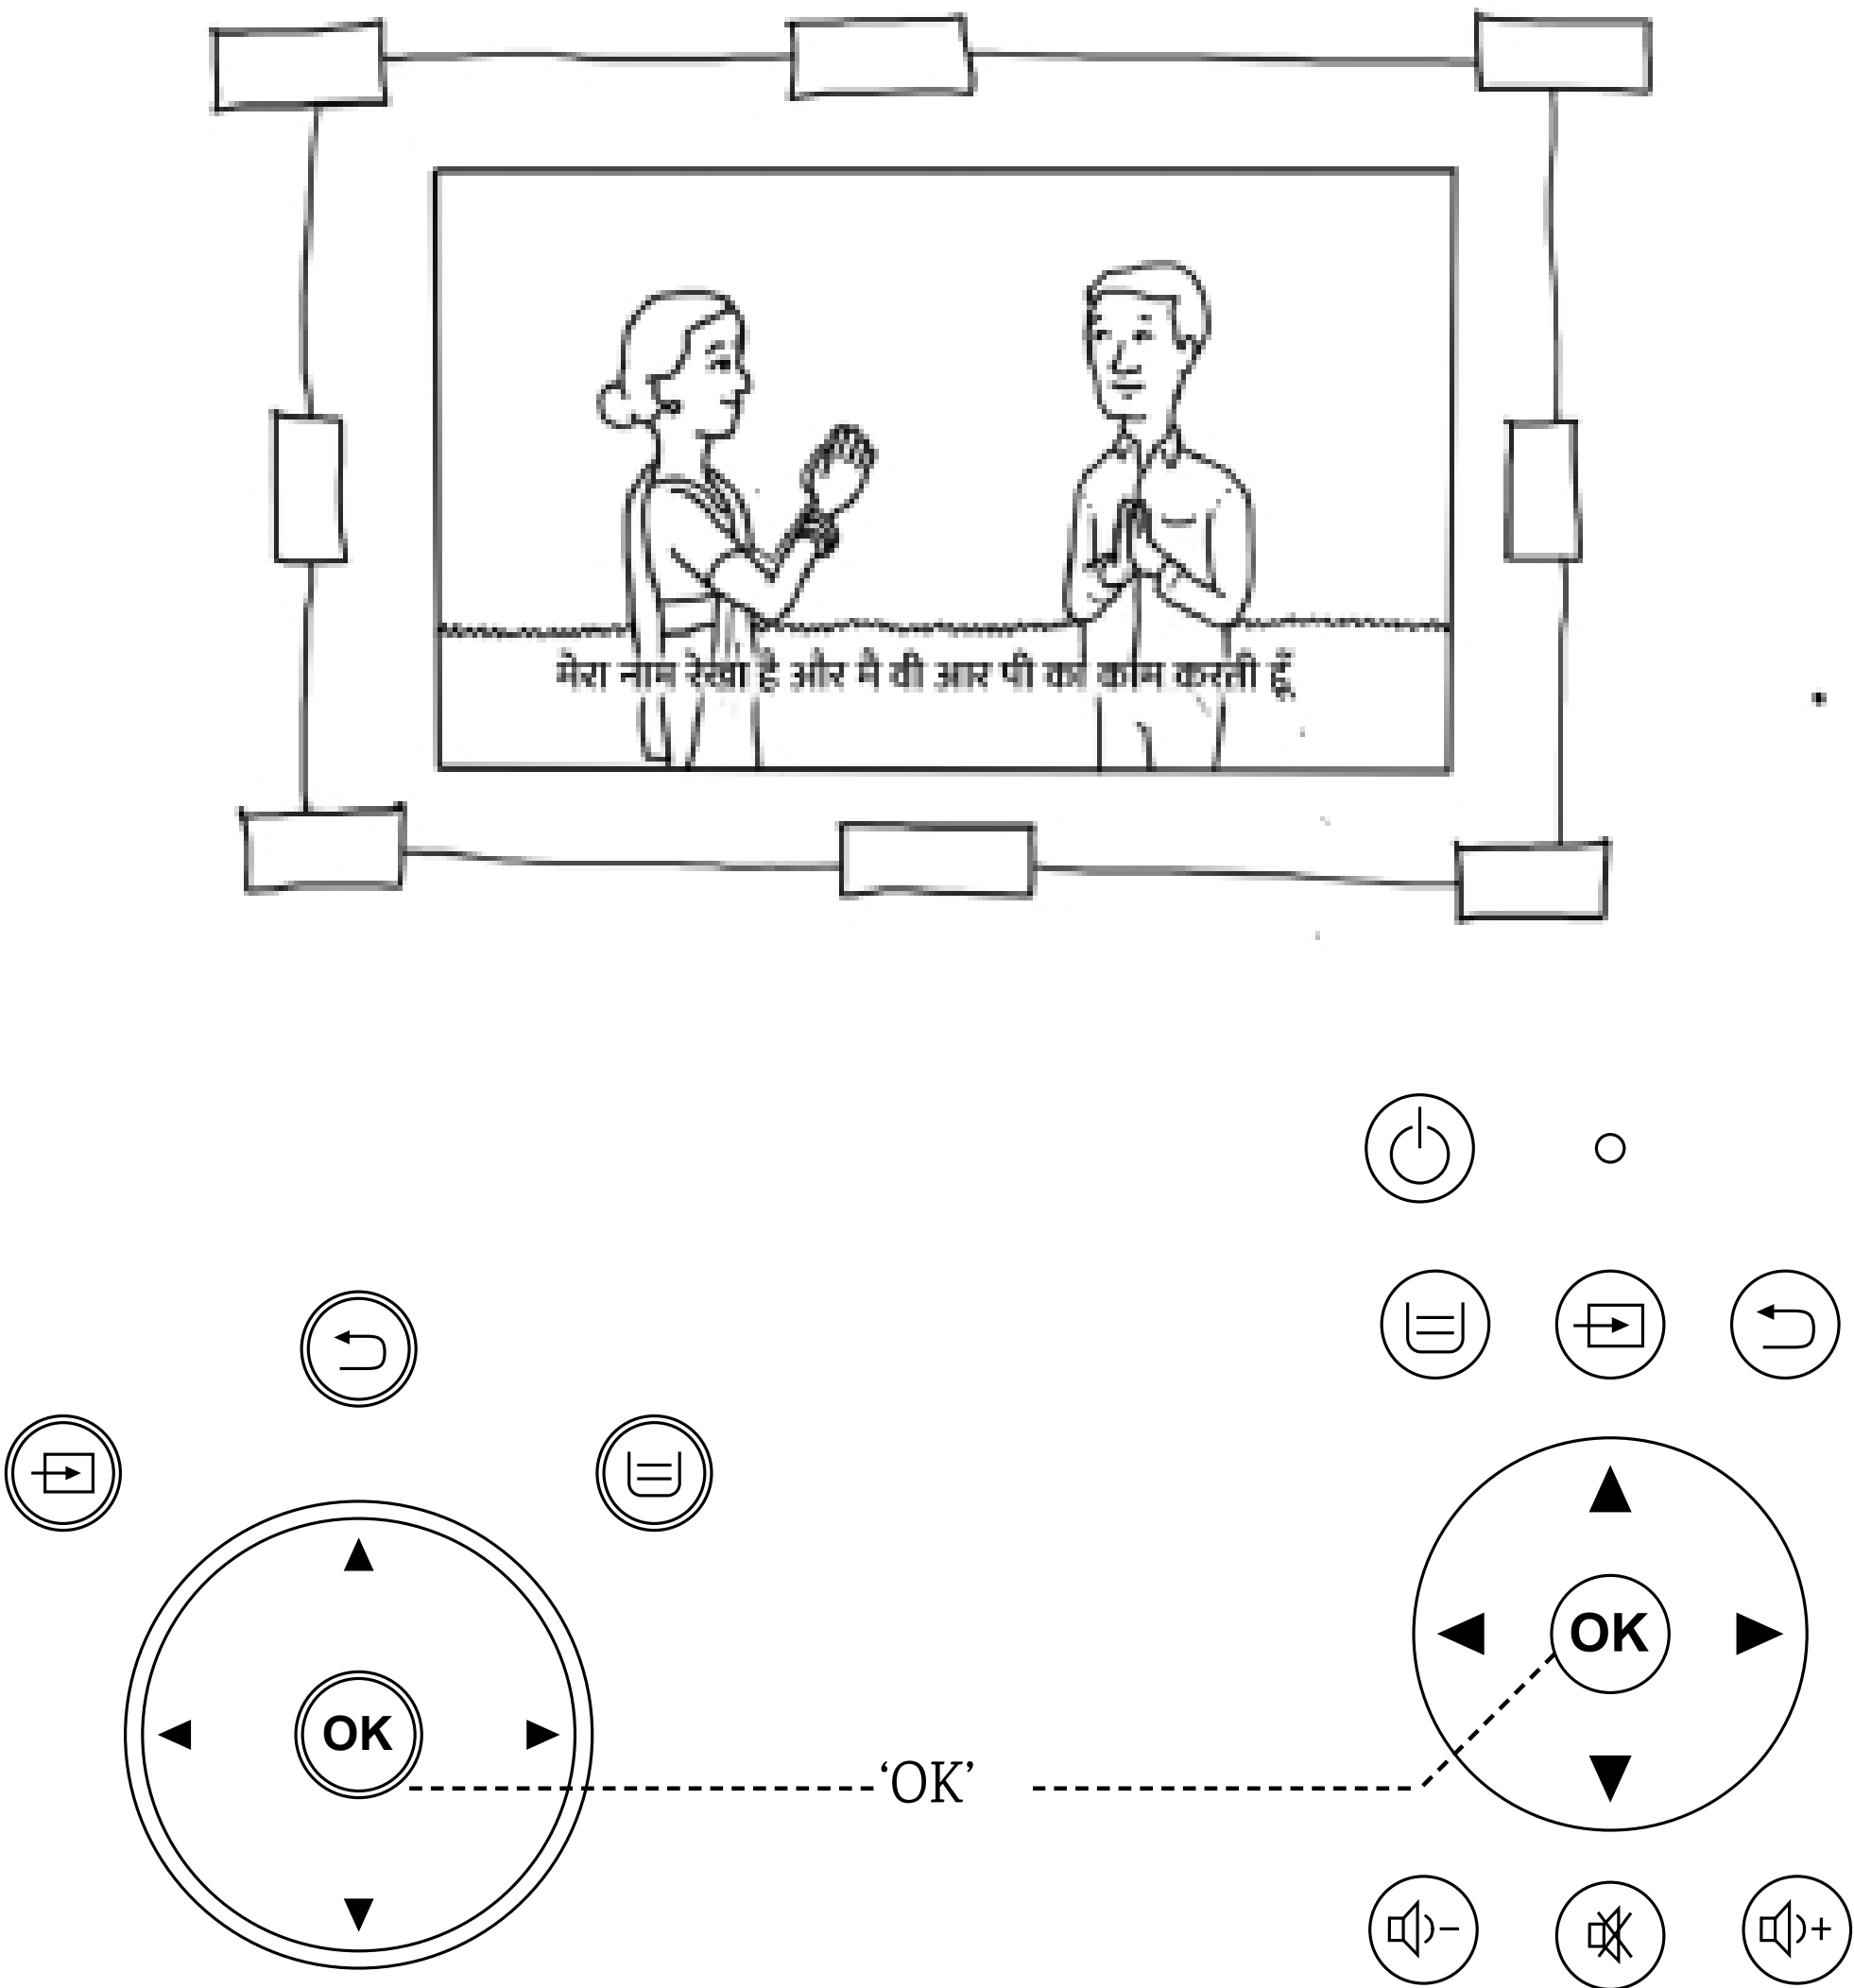


9 Increase the volume

Press the right button on the pico or press the volume increase button on remote

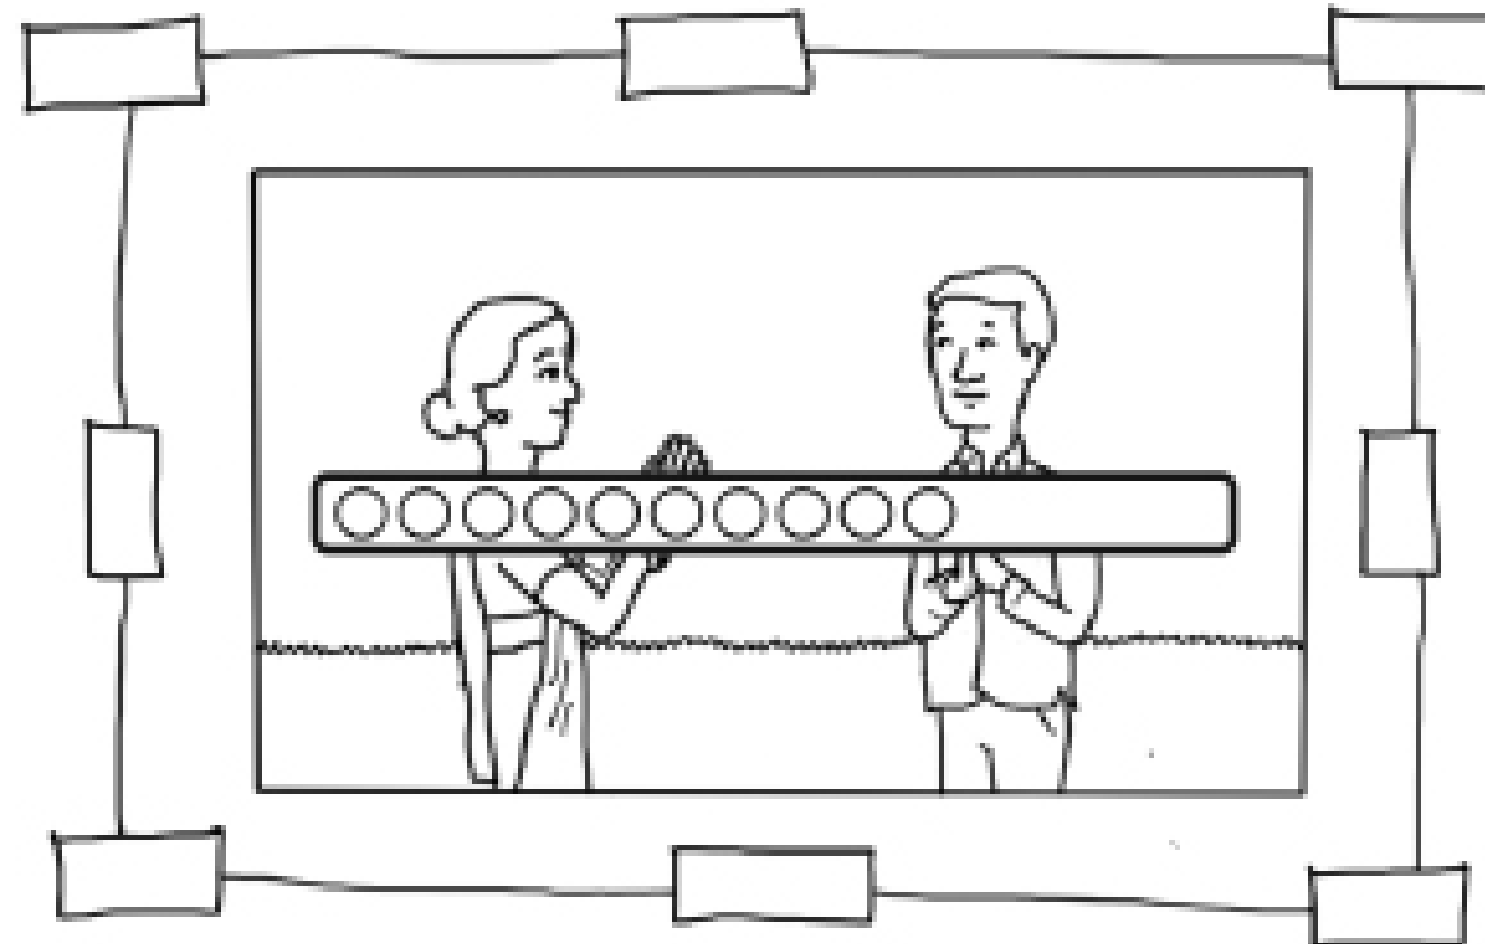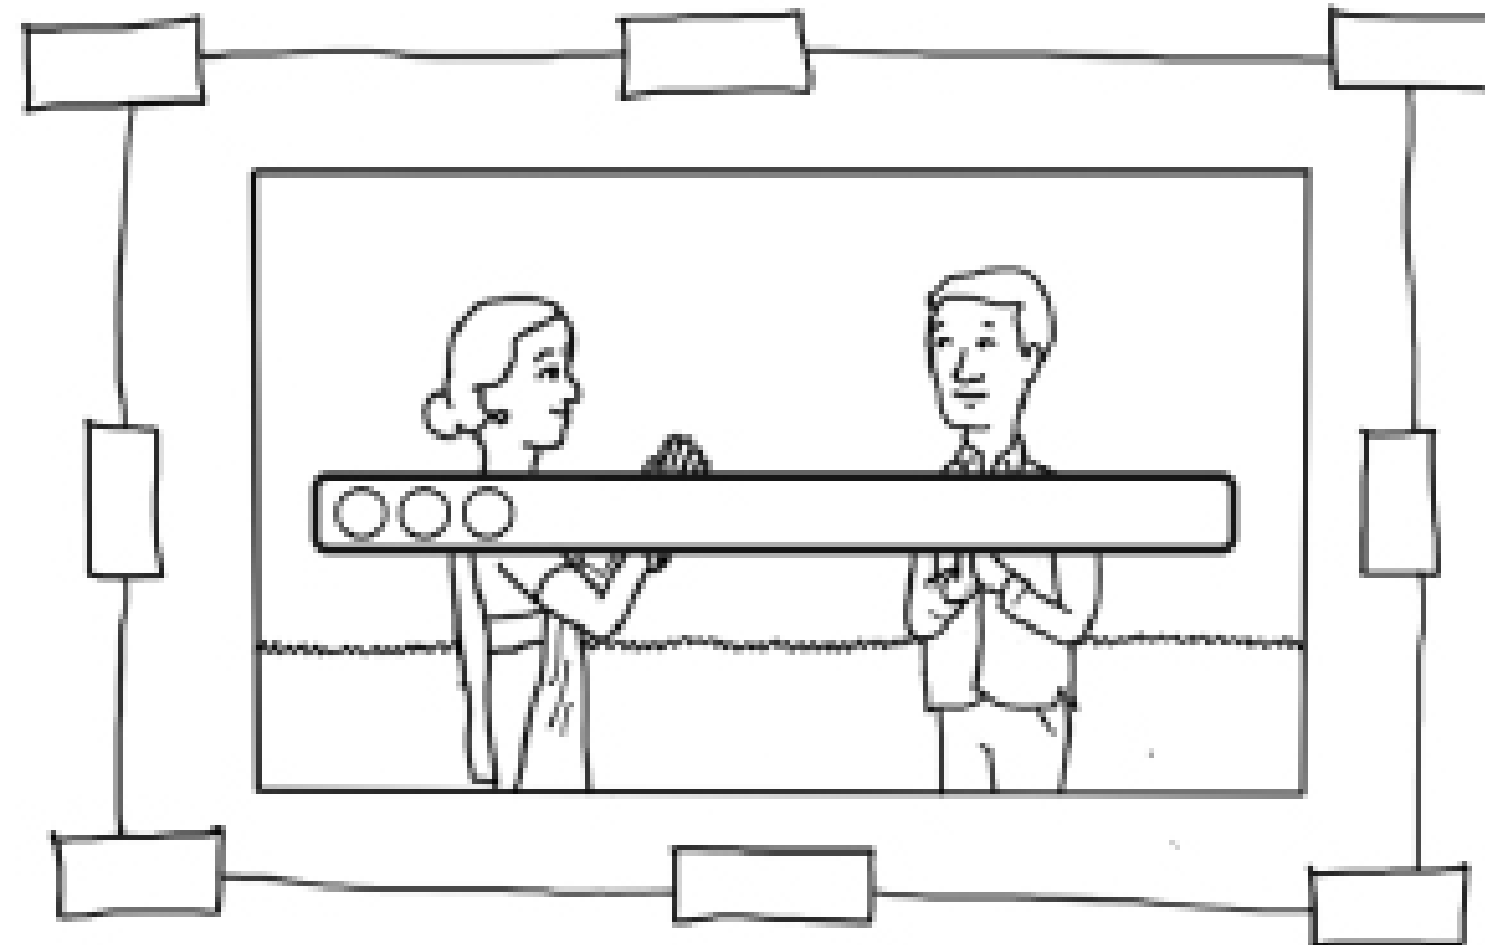

10 Attach the speaker

Put the wire speaker in the pico

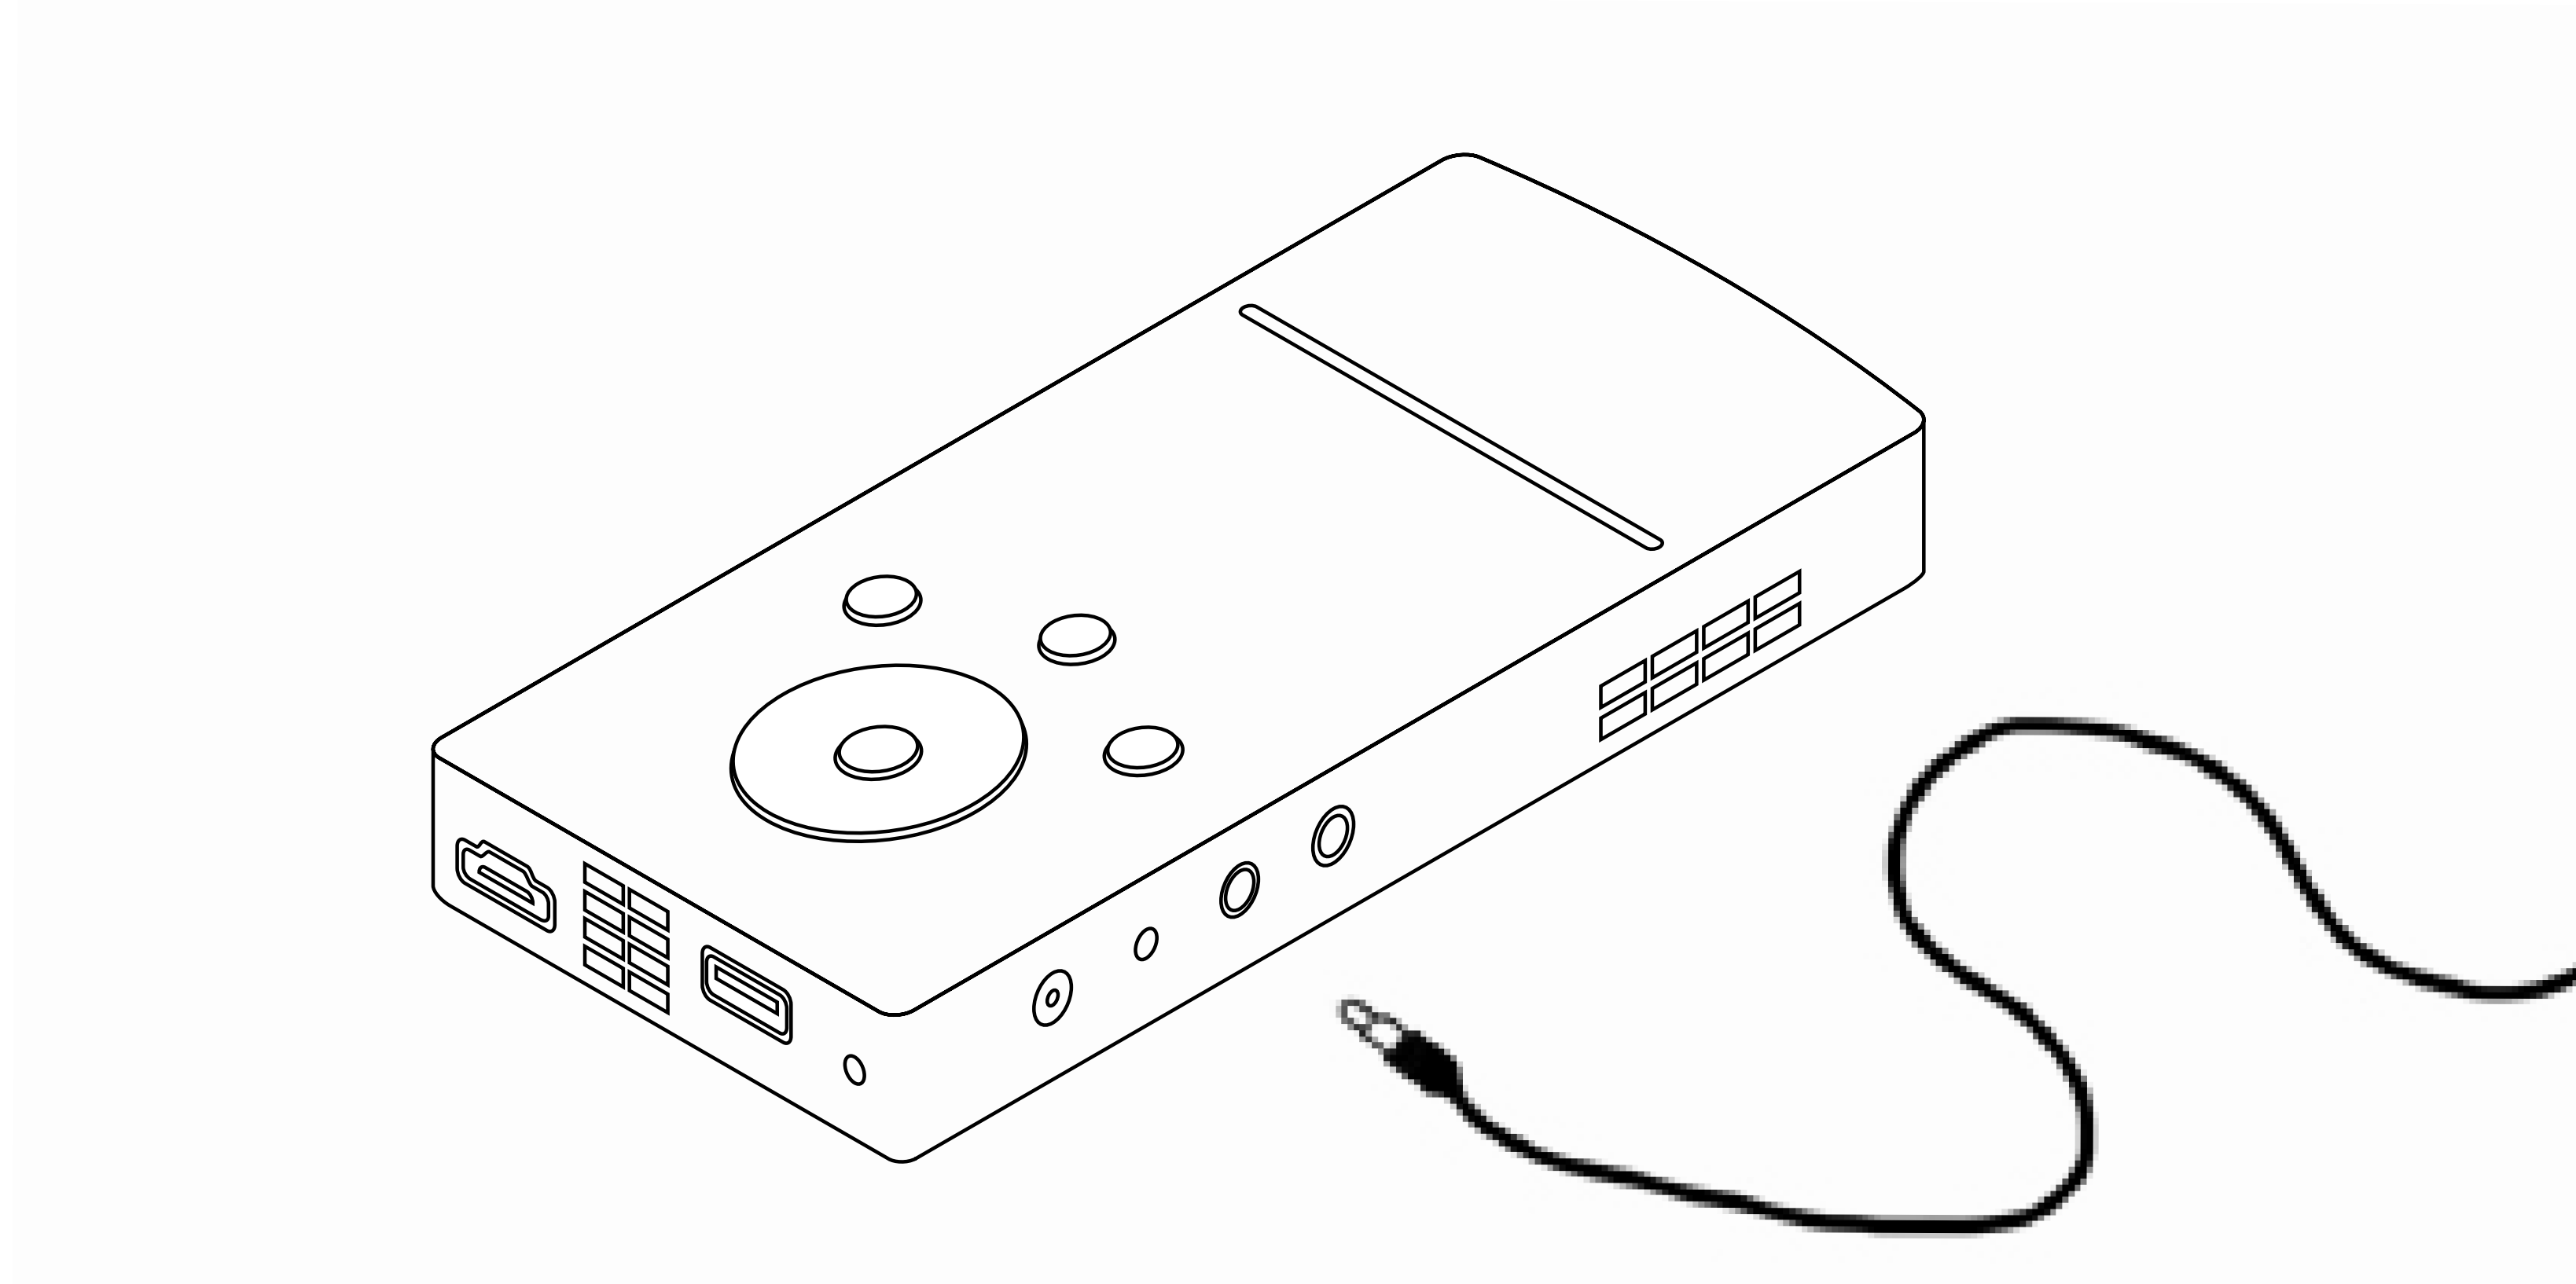

Ensure that the wire is fully properly inside both the pico and the speaker


Put the speaker on

Increase the volume of the speaker


- Do not forget to put the speaker off after the screening. Always keep the speaker charged

11 Pause the video

To bring symbols on the screen press 'OK'

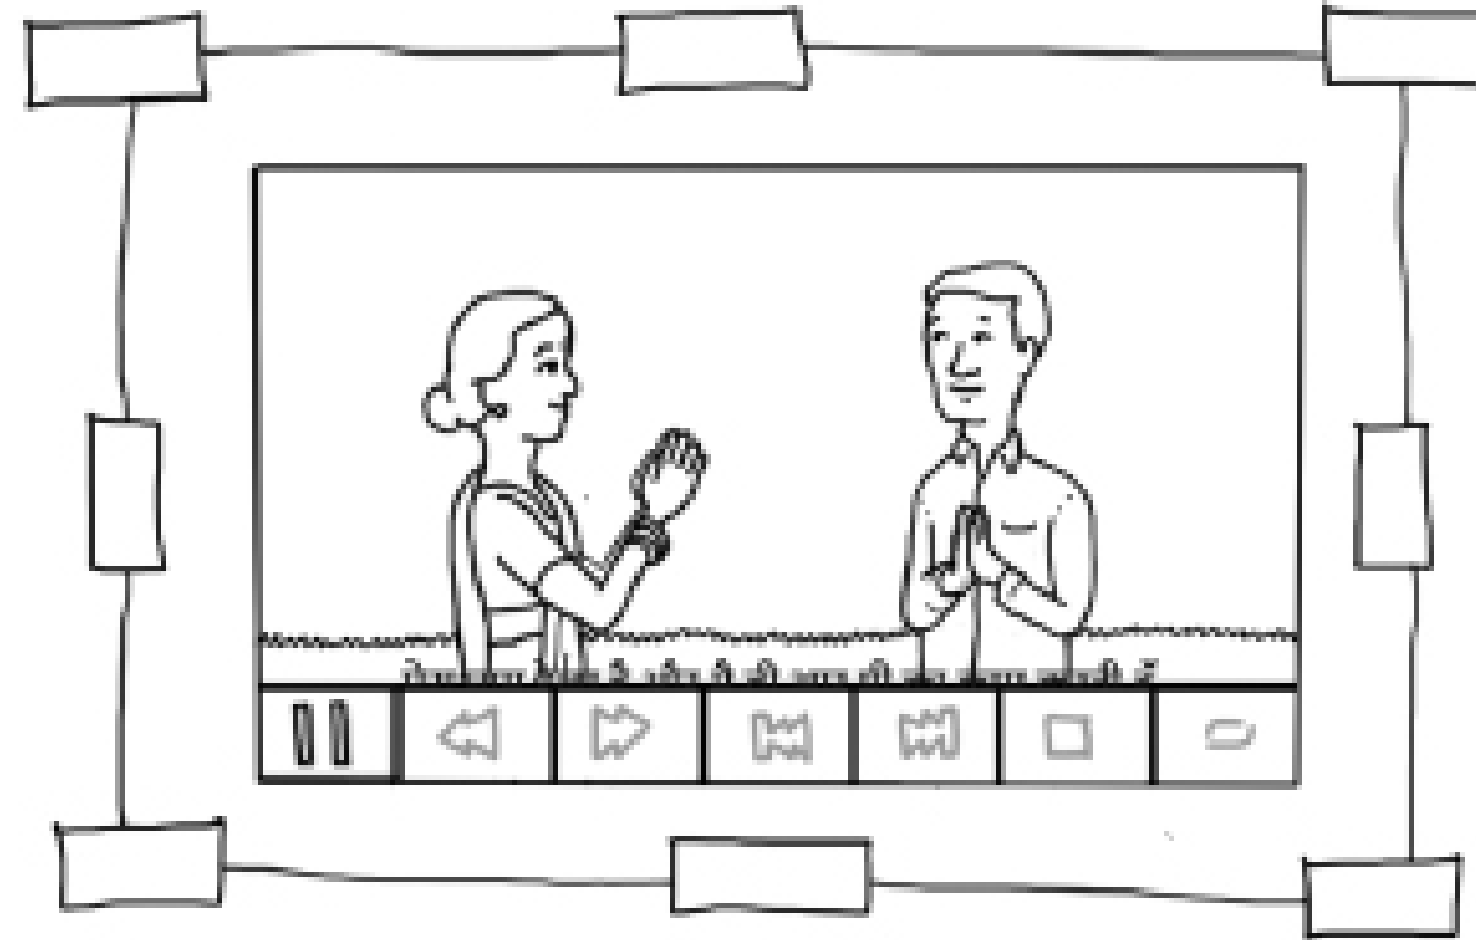


Select  and Press OK

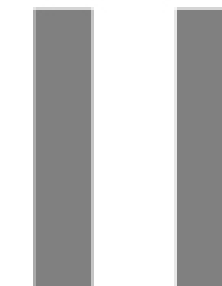

- Use this to pause the video and have a discussion with people

12 Play the video from the same point

Select ► symbol and Press OK

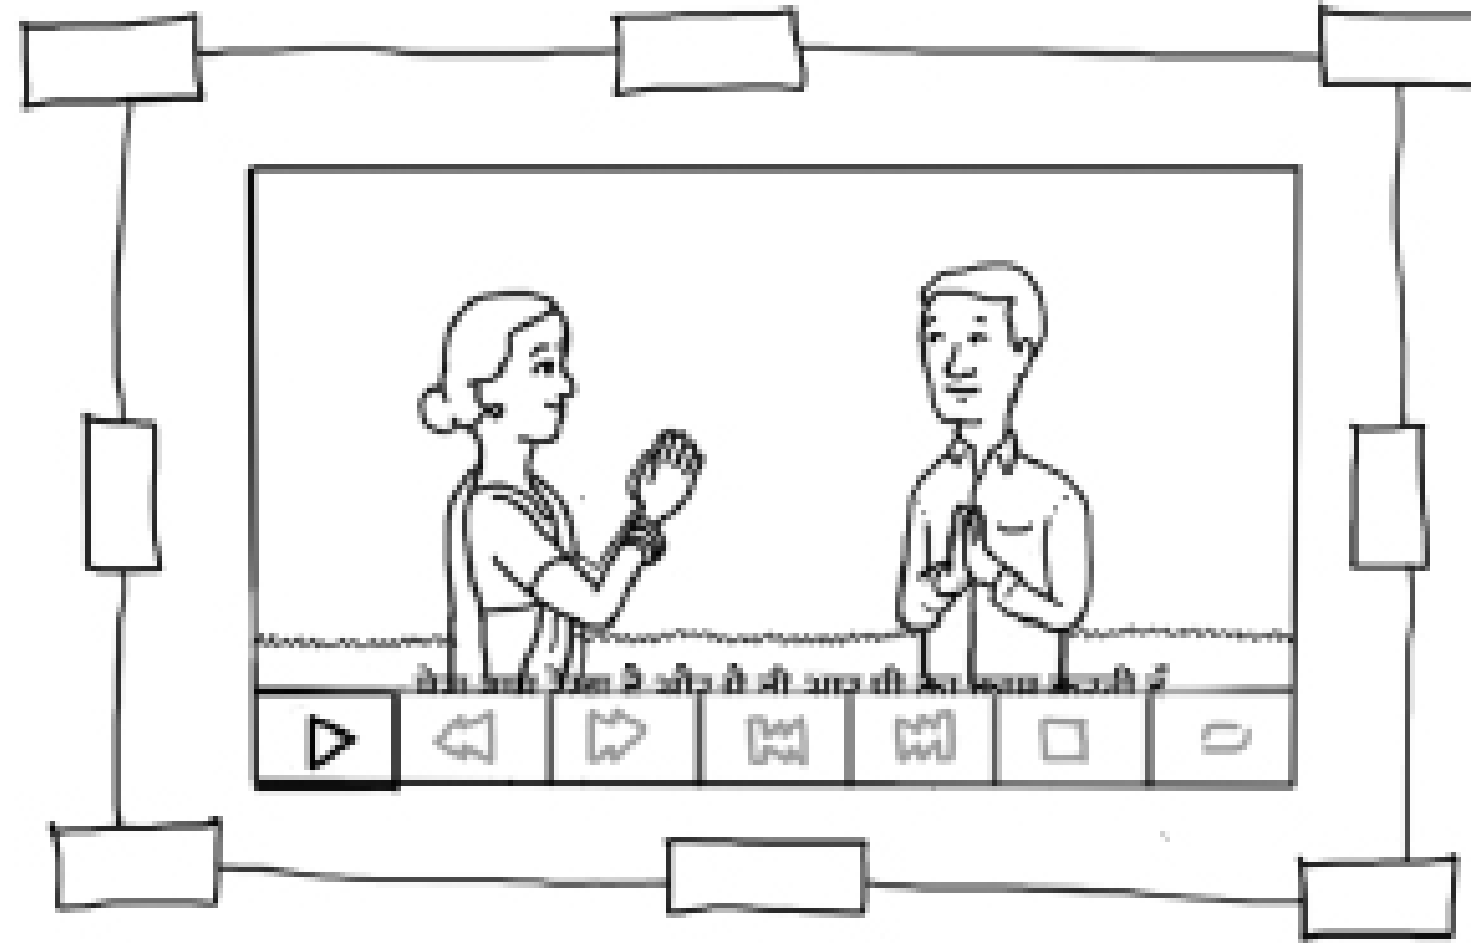


Remove the symbols by pressing the return button and play video in full screen



13 Rewind the video

To bring the symbols back, Press OK

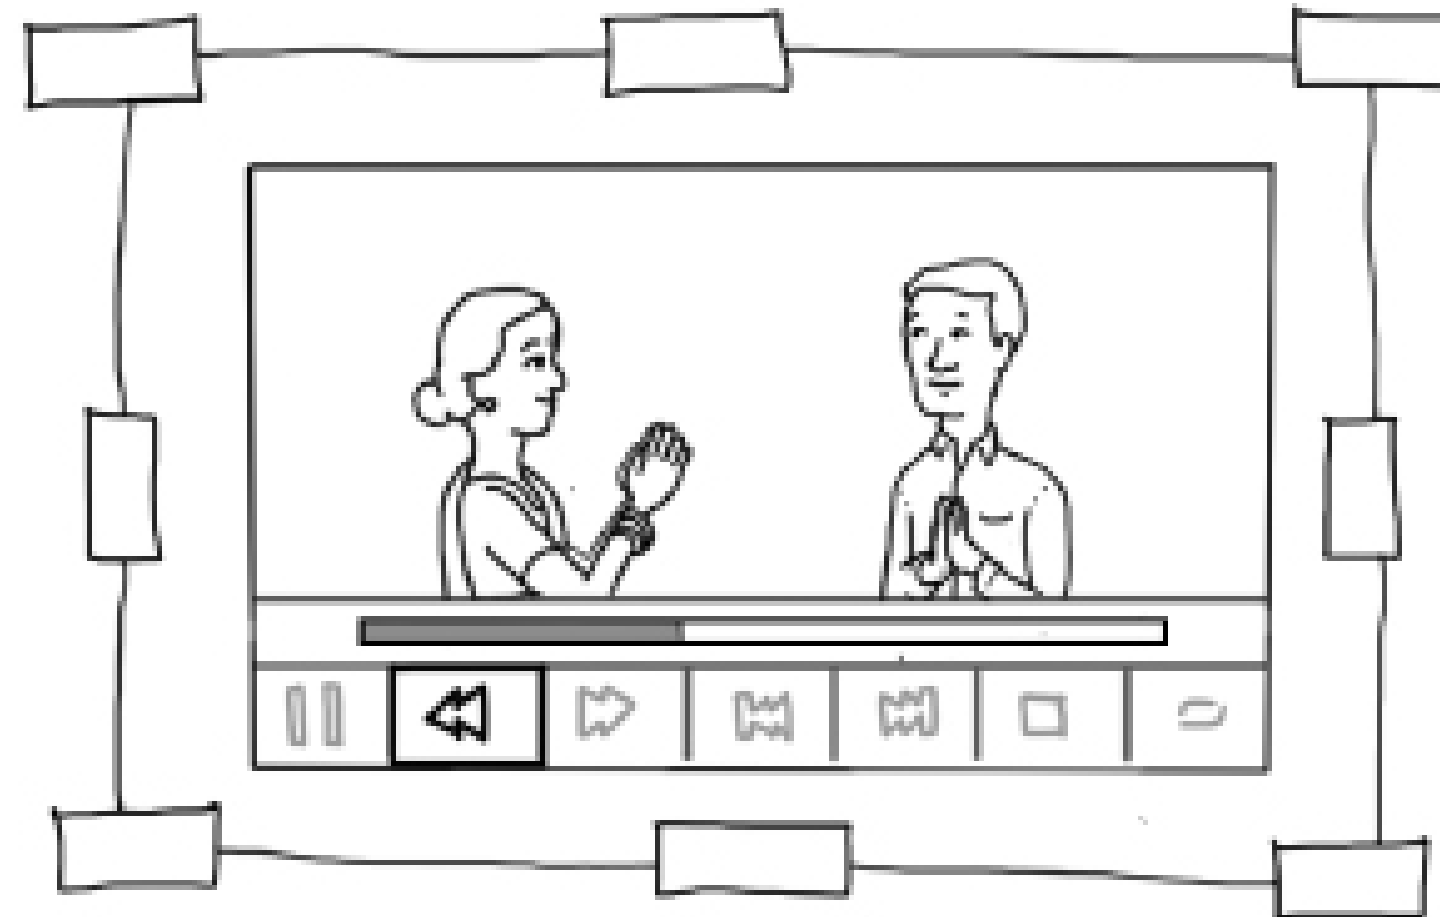



Select ◀ symbol and press OK



Select ▶ symbol and press OK to Play the video

14 Return to the video

Press Return button

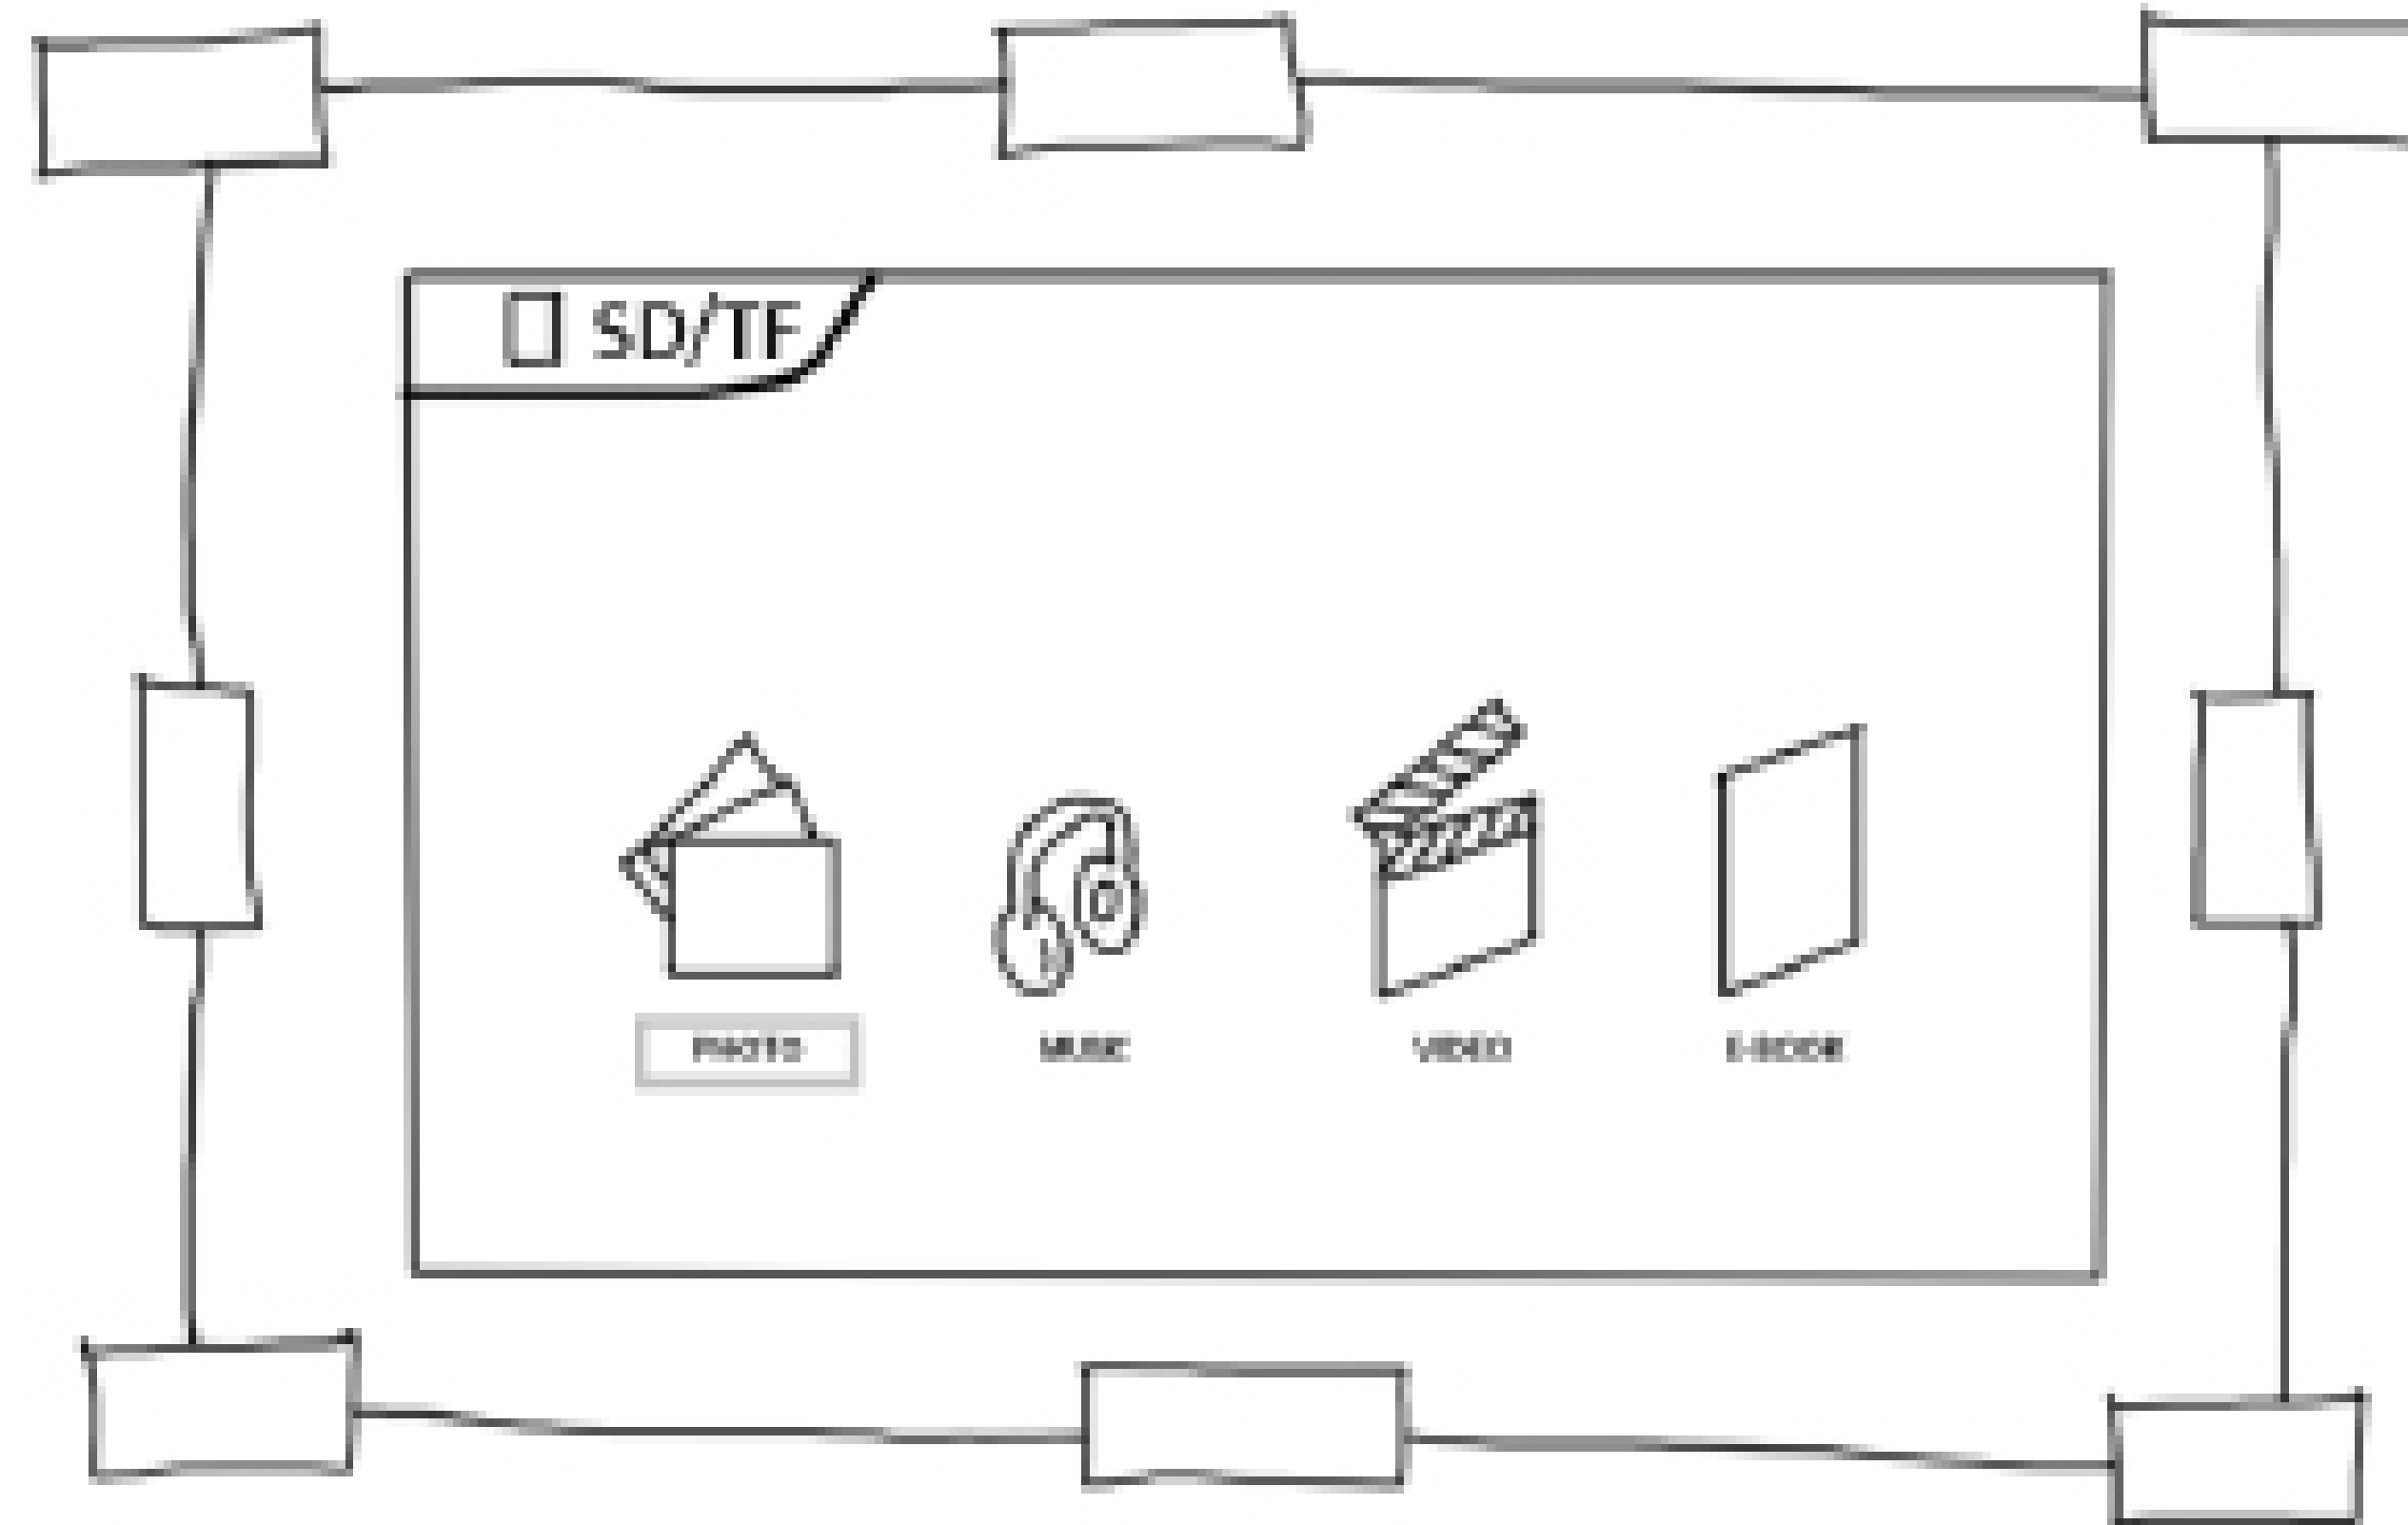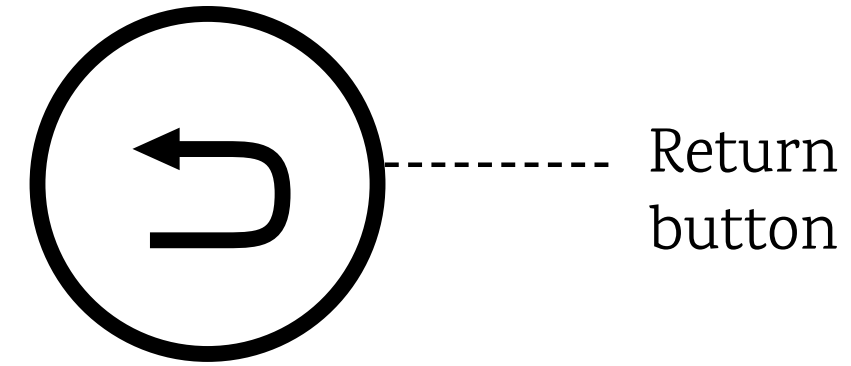


- Once you have learned all these steps, you are ready to mediate a screening using pico.



15 Put Pico Off

After the screening, press the On/OFF button for a few seconds

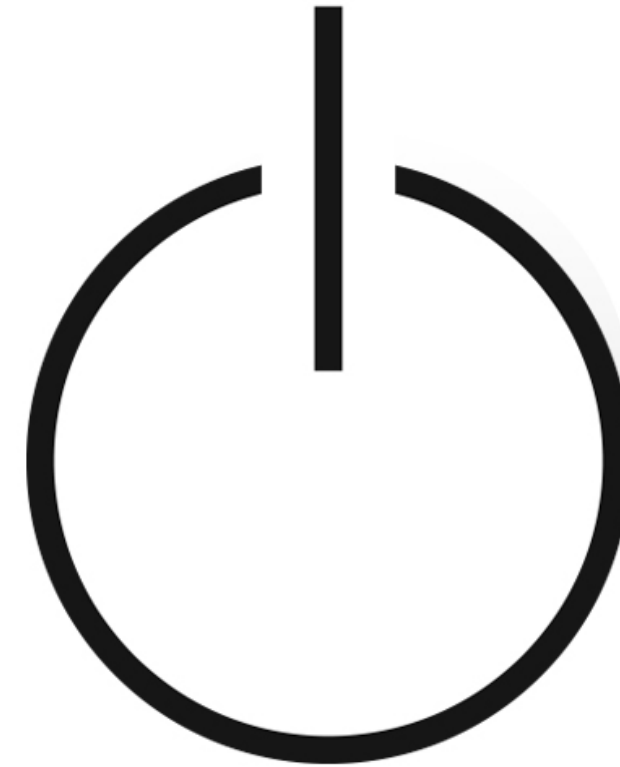

Ensure that the pico is off and pack all your equipment carefully

