

# IPConfigTool Manual

v1.6.1




*Kowa Optronics Co., Ltd.*

# 1. Overview


This application is a tool to configure the IP address and other network-related settings for the Kowa Optronics Co., Ltd. camera devices.

# 2. Usage

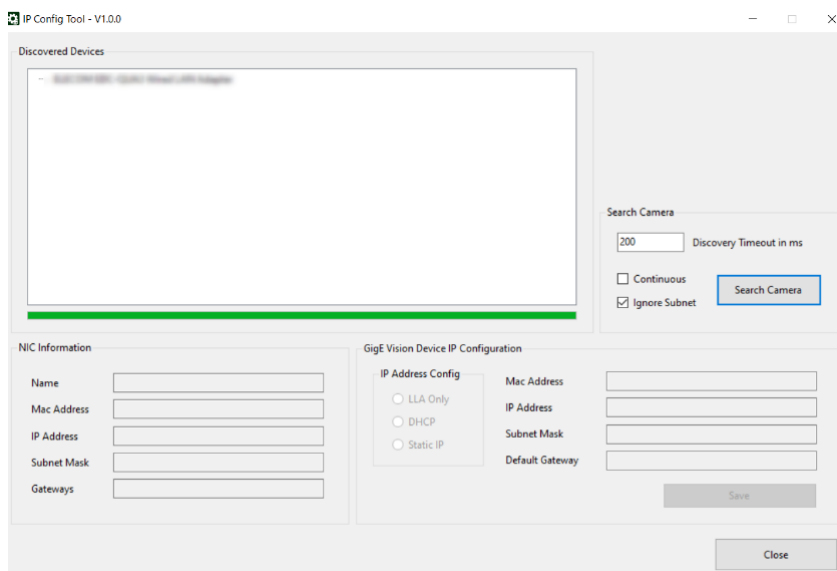


When IP Config Tool is launched, Discovery is executed.

If a camera is connected but no camera information is enumerated, press Search Camera button.

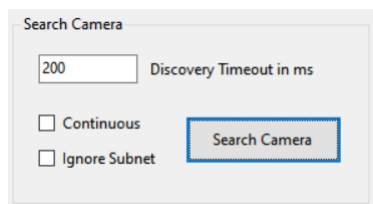


When "Continuous" is checked, Discovery is performed continuously.

If "Ignore Subnet" is checked, the subnets of the PC and camera will be enumerated even if they are different.

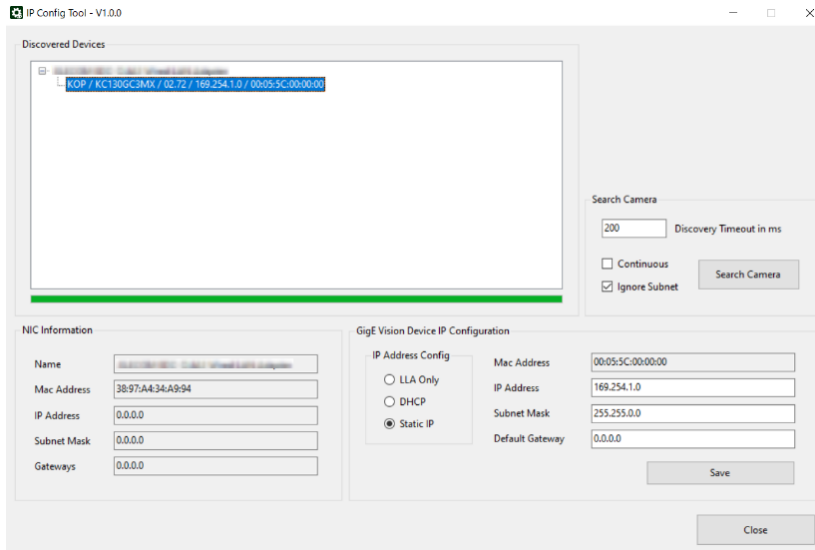

Once the camera information is listed, select the camera whose settings you wish to change.

After selecting the camera whose you wish to change settings, the IP settings of the current camera will be displayed in the lower row.

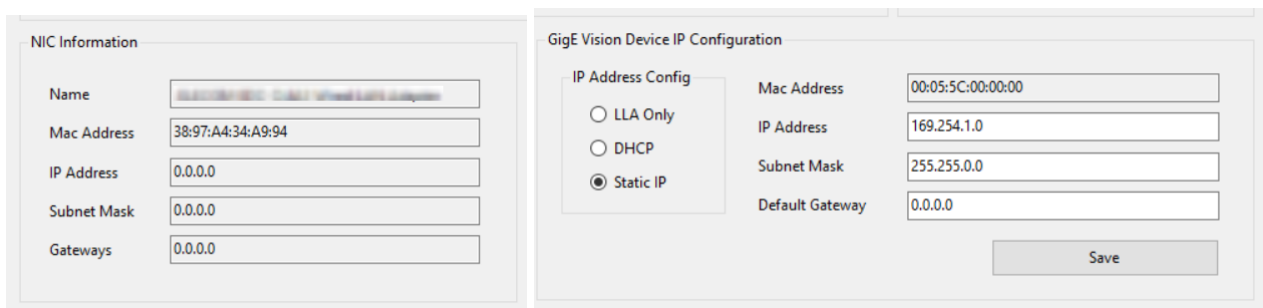

- Toggle IP Address Config

LLA Only : Change to Link-Address .

DHCP : Change to DHCP.

Static IP : Change Static IP Address. Input IP Address, Subnet Mask and Default Gateway.

Press "Save" after setting is complete.