


1 Initial tasks

1. Install program

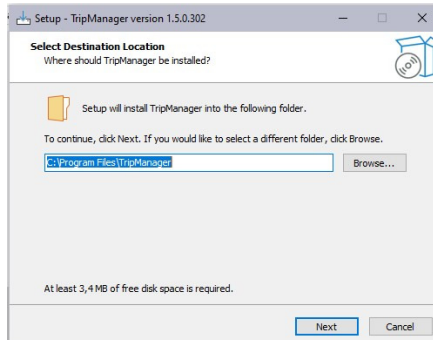

Note: If a pre V1.5 version is installed on a 64 bits system, you will be prompted to uninstall the current version. You will not loose your settings.

2. Make .System visible on XT(2) (Screenshots are from the XT)

<p>Click on Speed</p>	<p>Long press Circle '0 km/h'</p>
<p>Configuration and Settings</p>	<p>MTP Settings</p>
<p>Check Show .System</p>	

3. Connect the XT(2) to Windows
4. Select the Zumo if not automatically selected.
5. Check the 3 presets. Trips, Gpx and Poi (Gpi)

