


1 Initial tasks

1. Install program

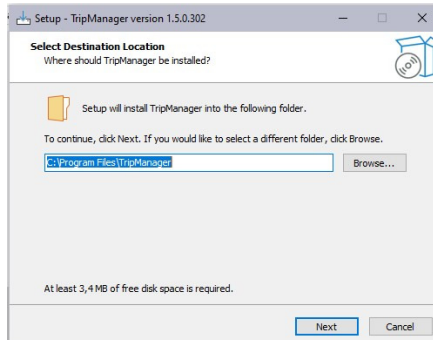

Note: If a pre V1.5 version is installed on a 64 bits system, you will be prompted to uninstall the current version. You will not loose your settings.

2. Make .System visible on XT(2). Screenshots are from the XT.

<https://zumouserforums.co.uk/app.php/ZXT-P84>

| | |
|-----------------------------------|-----------------------------------|
| <p>Click on Speed</p> | <p>Long press Circle '0 km/h'</p> |
| <p>Configuration and Settings</p> | <p>MTP Settings</p> |
| <p>Check Show .System</p> | |

3. Connect the XT(2) to Windows
4. Select the Zumo if not automatically selected. Click 'Set as default' if this is your default device.
5. Check the 3 presets. Trips, Gpx and Poi (Gpi)

