


# 1 Initial tasks

## 1. Install program

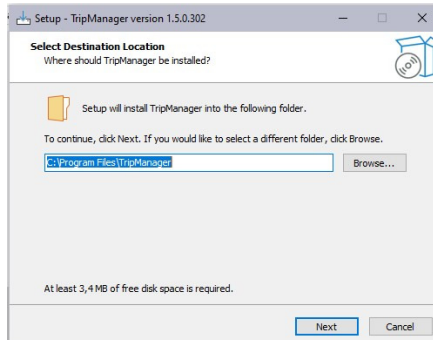


Note: If a pre V1.5 version is installed on a 64 bits system, you will be prompted to uninstall that version before continuing. You will not lose your settings.

## 2. Make .System visible on XT(2). Screenshots are from the XT.

<https://zumouserforums.co.uk/app.php/ZXT-P84>

<p>Click on Speed</p>	<p>Long press Circle '0 km/h'</p>
<p>Configuration and Settings</p>	<p>MTP Settings</p>
<p>Check Show .System</p>	

3. Connect the XT(2) to Windows.
4. Select the Zumo if not automatically selected. Click 'Set as default' if this is your default device.
5. Check the 3 presets. Trips, Gpx and Poi (Gpi)

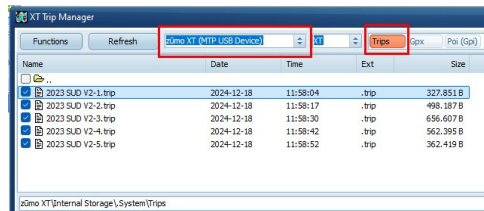

Note: The XT2 is not recognized by default. You will have to select it from the list of Devices and click on 'Set Default'.