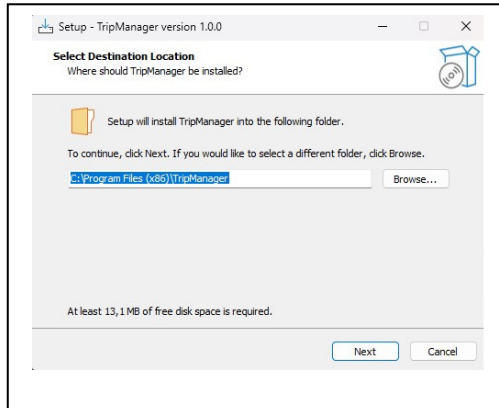
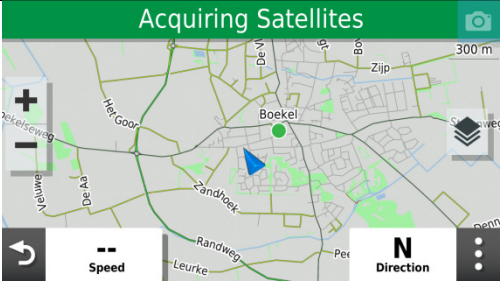

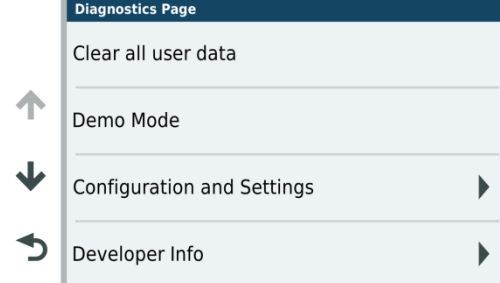
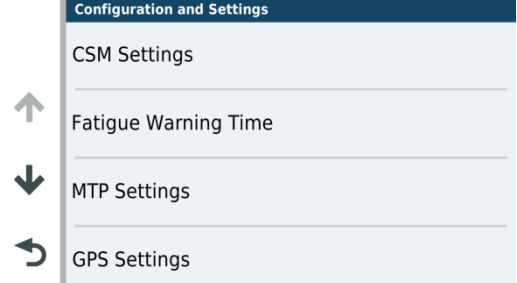
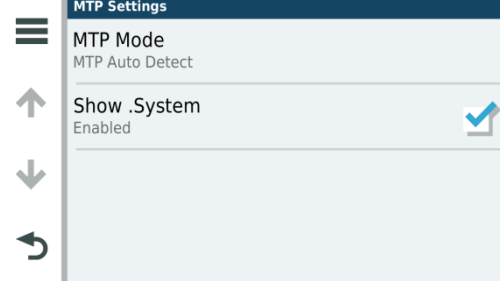


## 1. Install program



## 2. Make .System visible on XT

 <p>Click on Speed</p>	 <p>Long press Circle '0 km/h'</p>
 <p>Configuration and Settings</p>	 <p>MTP Settings</p>
 <p>Check Show .System</p>	

## 3. Connect XT to Windows

4. Select the Zumo if not automatically selected.
5. Check the 3 presets. Trips, Gpx and Poi (Gpi)
6. Navigate to folder with GPX files

