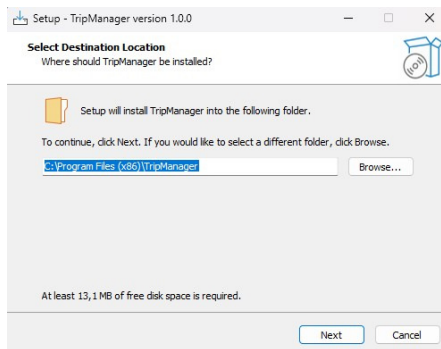
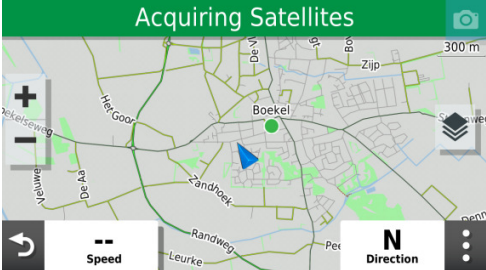

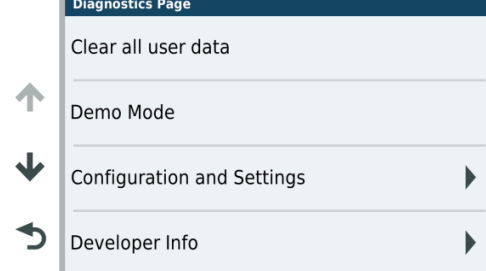
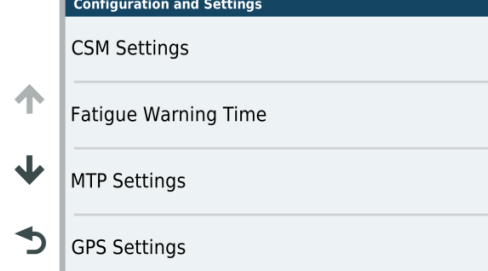
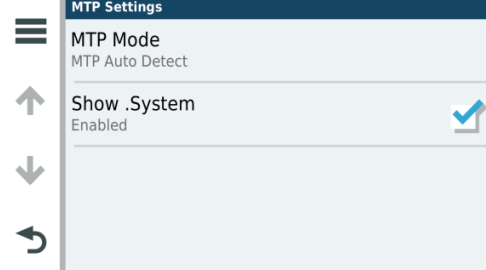


1. Install program



2. Make .System visible on XT(2) (Screenshots are from the XT)

| | |
|---|---|
|  <p>Click on Speed</p> |  <p>Long press Circle '0 km/h'</p> |
|  <p>Configuration and Settings</p> |  <p>MTP Settings</p> |
|  <p>Check Show .System</p> | |

3. Connect XT(2) to Windows
4. Select the Zumo if not automatically selected.
5. Check the 3 presets. Trips, Gpx and Poi (Gpi)
6. Navigate to folder with GPX files

