


# Self-Driving Car Research Studio

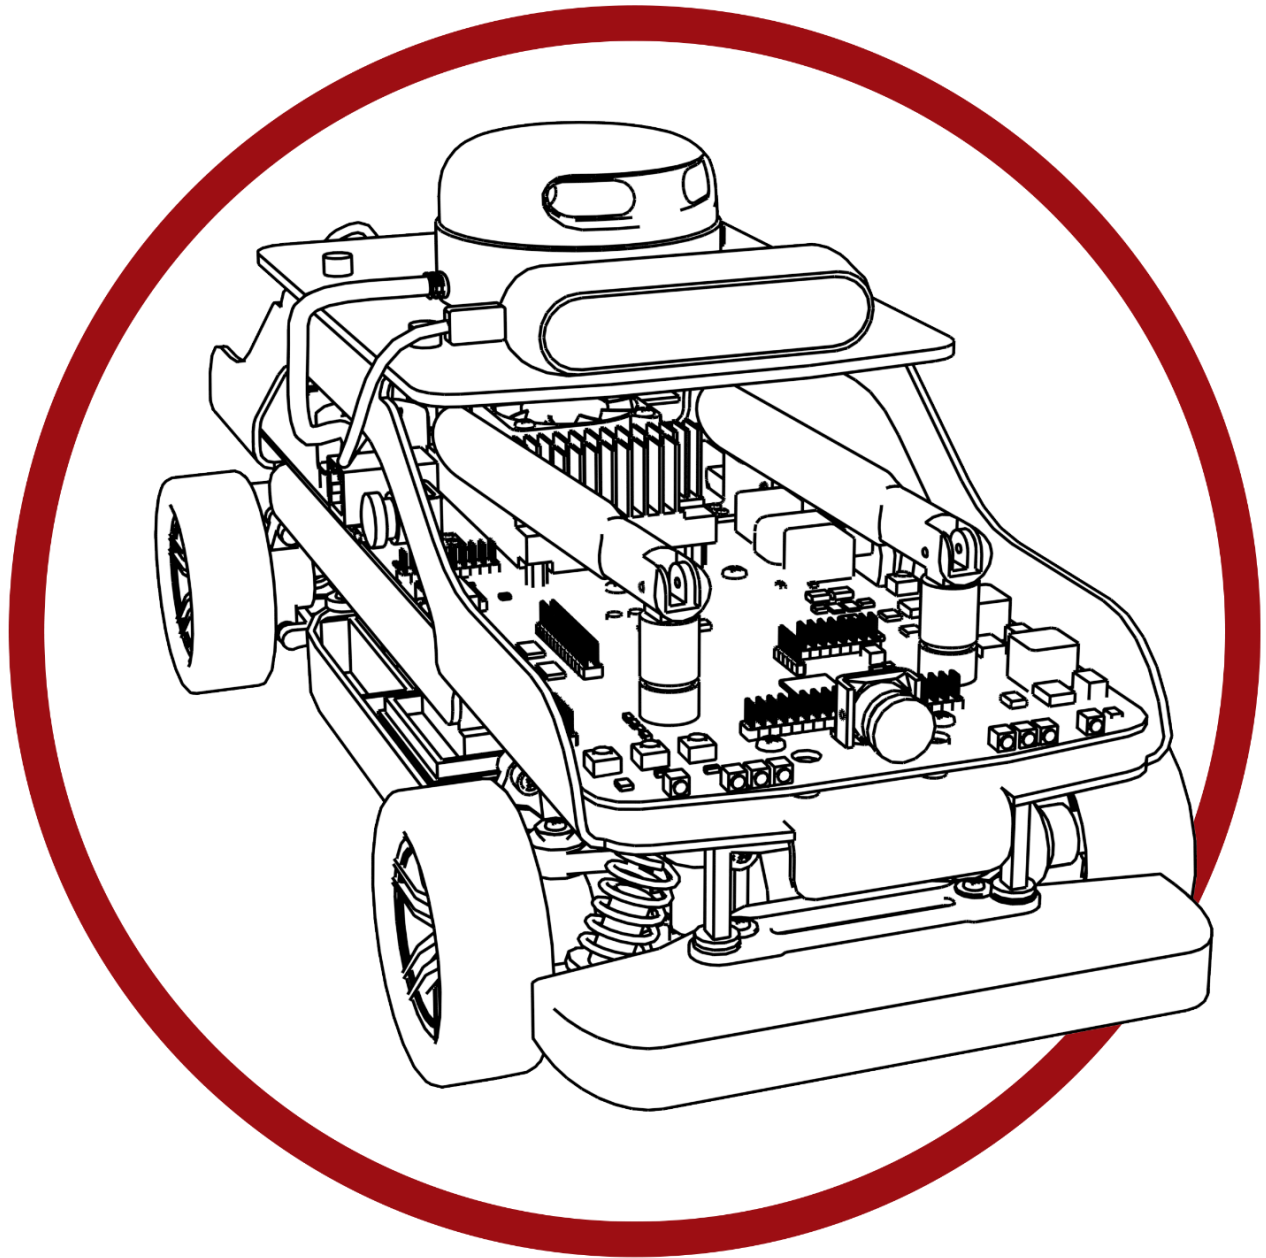

## User Guide – System Hardware

V 1.1 (November 2020)



## Caution

**This equipment is designed to be used for educational and research purposes and is not intended for use by the general public.** The user is responsible to ensure that the equipment will be used by technically qualified personnel only.

# Table of Contents

A. Hardware Components	3
i. NVIDIA JETSON TX2	5
ii. LIDAR	5
iii. Intel RealSense D435 Camera	6
iv. 360° CSI Camera Suite	7
v. Drive Motor and Steering Servo	8
vi. Encoder	8
vii. Battery	9
viii. IMU	11
ix. Dimensions	12
x. PCB and integrated Data Acquisition (DAQ)	13
B. Environmental	16
C. Electrical Considerations	16

## A. Hardware Components

The main QCar components are listed in Table 1. These components are ID marked in Figure 1, which presents the front, rear, left and right views of the QCar platform.


ID	Component	ID	Component
1	RPLidar A2	12	Front bumper
2	Intel RealSense RGBD camera	13	Rear bumper
3	Front CSI camera	14	Front headlamps and indicators
4	Right CSI camera	15	Rear brake lights and indicators
5	Rear CSI camera	16	Expandable I/O
6	Left CSI camera	17	NVIDIA Jetson TX2
7	WiFi 802.11 a/b/g/n/ac with dual antennas	18	Drive motor
8	10/100/1000 Base-T Ethernet jack	19	720 count pre-gearing motor encoder
9	Dual HDMI connectors	20	Steering servo motor
10	XT-60 battery connector	21	Speaker
11	LiPo battery compartment	22	LCD display

Table 1. QCar Platform Components



### ESD Warning


The QCar internal components are sensitive to electrostatic discharge. Before handling the QCar, ensure that you have been properly grounded.

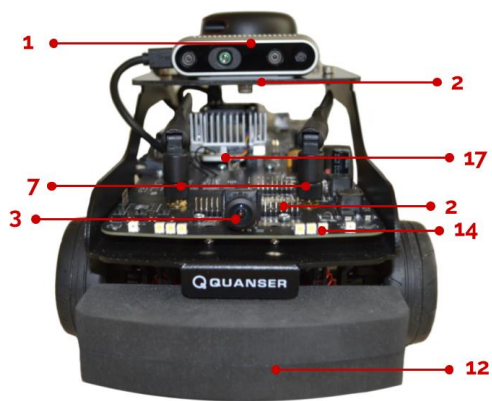


a. Front view



b. Rear view

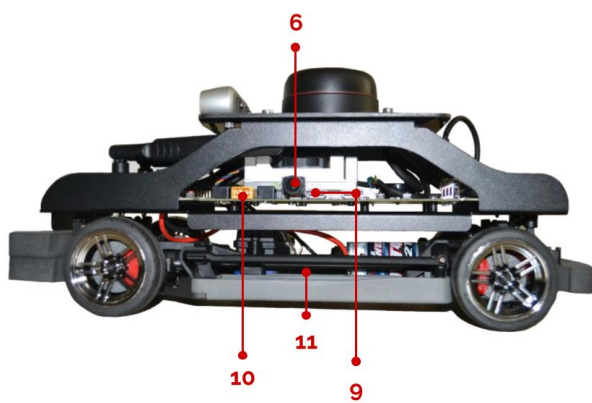

c. Left view

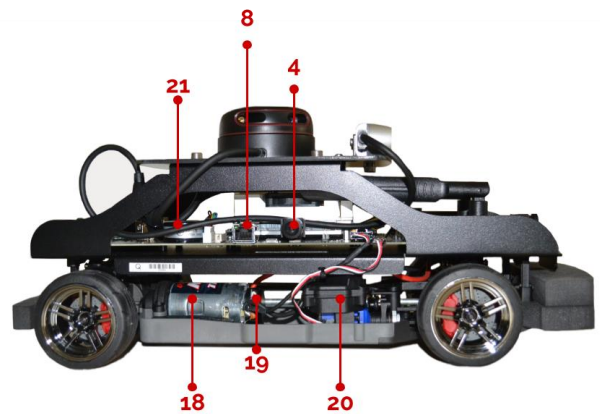

d. Right view

Figure 1. QCar Platform Components

## i. NVIDIA JETSON TX2

The QCar is powered by an onboard NVIDIA Jetson TX2 with a 256 Cuda Cores and an NVIDIA Pascal GPU architecture. It also features a Dual-Core NVIDIA Denver 2 64-Bit CPU along with a Quad-Core ARM® Cortex®-A57 MPCore CPU. More information on this board can be found [here](#).

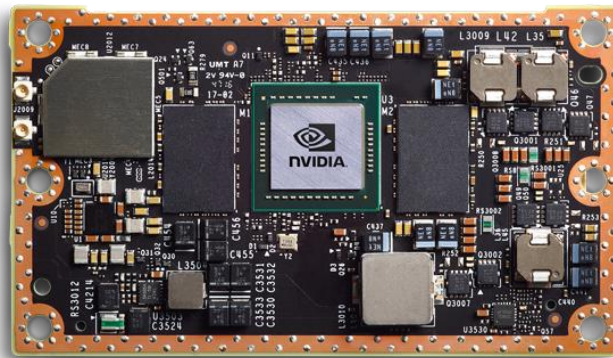


Figure 2. NVIDIA Jetson TX2 processor

The board includes 32 GB of storage via an eMMC and 8 GB of 128-bit LPDDR4 1866 MHz 59.7 GB/s memory. A USB flash stick can be used for additional storage using the USB ports.

## ii. LIDAR

The QCar platform comes equipped with an RPLidar A2 (A2M8) as shown below. This 2D planar LIDAR supports up to 8000 samples per second, with scanning frequency of up to 15Hz (i.e., 15 revolution scan per second), and has a sensing range of up to 18m. The scanning frame rate and corresponding samples per revolution are summarized in Table 2 below. More information on this LIDAR can be found [here](#). The LIDAR is Class I and eye-safe, with a wavelength of 785nm.



Figure 3. RP-Lidar A2

Frequency (Hz)	Samples per revolution	Angular Resolution (degrees)
5 Hz	1600	0.225°
10 Hz	800	0.45°
15 Hz	533	0.675°

Table 2. Achievable frame rates and samples per revolution for the RPLidar A2

This LIDAR uses a 5-pin serial connector, connected to the J17 port on the QCar's DAQ card.

**NOTE:** The 7-pin serial port J24 can also be used for other LIDARs such as the RPLidar A1, although only one of the J17 or J24 ports can be used at any given time. For simultaneous use of LIDARs, consider using a USB based solution with one of the 4 USB 3.0 ports on the QCar's DAQ card.

### iii. Intel RealSense D435 Camera

The QCar platform comes equipped with an Intel RealSense D435 RGB-D camera. It includes an IR projector and two IR imagers, making this unit a stereo tracking solution. The camera can provide RGB, Infrared (left and right) and depth streams of data at frame rates and resolutions summarized in Table 3, as well as at fields of view in Table 4. More information can be found [here](#).



Figure 4. Intel RealSense D435 RGBD camera

RGB		Infrared		Depth	
Resolution	Max. Frame Rate	Resolution	Max. Frame Rate	Resolution	Max. Frame Rate
1920 x 1080	30	1280 x 800	30	1280 x 720	30
1280 x 720	30	1280 x 720	30	848 x 480	90
960 x 540	60	848 x 480	90	848 x 100	100
848 x 480	60	848 x 100	100	640 x 480	90
640 x 480	60	640 x 480	90	640 x 360	90
640 x 360	60	640 x 360	90	480 x 270	90
424 x 240	60	480 x 270	90	424 x 240	90
320 x 240	60	424 x 240	90	256 x 144	90
320 x 180	60	256 x 144	90	n/a	n/a

Table 3: Intel RealSense resolutions and frame rates

Camera	Horizontal	Vertical	Diagonal
RGB	69.4° ± 3°	42.5° ± 3°	77° ± 3°
Depth	87° ± 3°	58° ± 1°	95° ± 3°


Table 4. Intel RealSense D435 field of view

#### iv. 360° CSI Camera Suite

The QCar platform provides 360° of vision through the placement of 4 8MP 2D CSI cameras (Figure 5a) at the front, left, rear and right side of the vehicle. Each camera has a wide-angle lens providing up to 160° H-FOV and 120° V-FOV. The corresponding blind-spots have been shown below in Figure 5b.



a. CSI camera

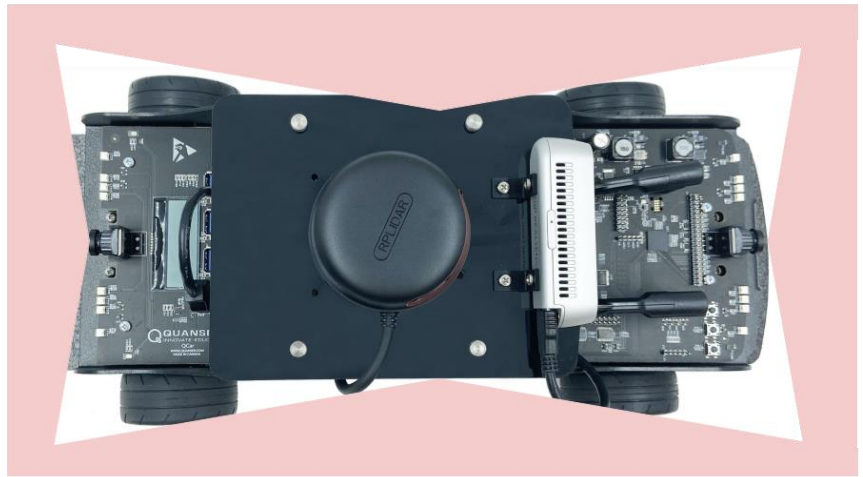

b. 360 camera coverage portraying the blind spots in white

Figure 5. CSI cameras with wide angle lenses and 360 vision via their placement.

These cameras are indexed in Simulink, Python or C/C++ using the camera IDs as presented in Table 5. The frame resolutions, frame rates and corresponding FOV are documented in Table 6.

Camera	ID	Camera	ID
Right	0	Left	2
Rear	1	Front	3

Table 5. Camera indexing IDs

Resolution	Max Frame Rate (FPS)	Horizontal FOV	Vertical FOV
3280 x 2464	21 Hz	160°	120°
1640 x 1232	80 Hz	160°	120°
820 x 616	80 Hz	160°	120°
1640 x 820	120 Hz	160°	80°
820 x 410	120 Hz	160°	80°

Table 6. Achievable frame rates for CSI cameras



## v. Drive Motor and Steering Servo

The QCar comes equipped with a motor that has an integrated cooling fan. The motor parameters are listed in Table 7. The motor can be set to a **Neutral** mode by setting the Digital I/O pin 40 on the DAQ to high (1), in which case it will coast/freewheel and will not be drivable. By default, this pin is set to low (0). Onboard overcurrent protection from the FPGA will ensure that the motor enters an **Overcurrent** state if the following conditions are met,

1. current draw of 5 Amps continuously for 8 seconds
2. current draw of 10 Amps continuously for 2 seconds
3. current draw of 15 Amps continuously for 0.5 seconds

Once in the **Overcurrent** state, the LCD will show an 'Overcurrent' message and the motor will enter the **Neutral** mode. To revert back to normal operation, the HIL device must be closed and opened again, which is most easily achieved by restarting the application (script/executable).



**Caution:** Holding the motor in a stalled position for a prolonged period of time at applied voltages of over 5V can result in permanent damage.

Symbol	Description	Value
$R_m$	Terminal resistance	0.470 $\Omega$
$k_t$	Torque constant	0.0027 N-m/A
$k_m$	Motor back-emf constant	0.0027 V/(rad/s)
$\tau$	Steering time-constant	0.16 s

Table 7: QCar drive motor parameters

The steering servo accepts commands in the range of -0.5 to 0.5 radians. Its time constant is presented in Table 7.

## vi. Encoder

The QCar platform includes a pre-gearing encoder used to measure the angular position of the drive motor. This US Digital E8T-720-125 single-ended optical shaft encoder provides 720 counts per revolution or 2880 counts per revolution in quadrature mode. The encoder's datasheet can be found included.

An encoder speed measurement is also available. This is based on the time between encoder edges, and is considered a 'hardware velocity', available in counts/s through the **Other** channels in the HIL API.

## vii. Battery

The QCar platform uses a 3S (3-cell 11.1 Volts) 3300 mAh capacity lithium polymer (LiPo) battery (Figure 6a) with a female XT-60 connector. More information on the provided battery is summarized in Table 8. The battery can be charged using the provided EV-Peak E4 charger (Figure 6b). Under-voltage protection ensures that the QCar automatically shuts down when the battery voltage drops below 10.0V. If the battery voltage drops below 10.5V, a 'LOW BAT' warning message is displayed on the LCD. For more information, see the **User Guide - Power** document.




a. LiPo 3s 3300mAh with balancer cable (4 wire connector) and XT60 female connector


b. EV-Peak E4 charger


Figure 6. LiPo battery and charger provided with the QCar

#	Item	Value
1	Cells	3S (3 cells in series)
2	Battery capacity	3300 mAh
3	Minimum continuous discharge rating	31 C
4	Connector on battery side	XT60 (Female)
5	Maximum voltage per cell	4.2 V
6	Nominal voltage per cell	3.7 V
7	Minimum voltage per cell	3.5 V
8	Battery weight	230 grams
9	Battery dimensions (LxWxH)	135 mm x 44 mm x 17 mm


Table 8. LiPo battery characteristics


 **Caution:** Before using any batteries, chargers/balancers, or power supplies, users must first read the manuals packaged with their equipment. Quanser supplies these guidelines for charging batteries but it is the users' responsibility to ensure they are operating their equipment safely and correctly. Quanser is not responsible for any damages resulting from use of batteries, power supplies, chargers, or balancers.

 **Caution:** Prior to using the QCar, visually check the battery for bloating or damage. If the battery exhibits bloating **DO NOT USE** it. Visual bloating of the battery is dangerous - discard it in accordance with your country's relevant recycling and disposal laws


 **Caution:** A battery voltage below 10V increases the risk of uneven charge between the three cells. If you experience issues charging a battery that is consistently below 10V, discard it in accordance with your country's relevant recycling and disposal laws


**Note:** Use and store battery in a dry environment.

 **Caution:** Do not charge the battery under direct sunlight.


 **Caution:** Do not charge the battery when it feels hot. If it does, you should place it in a metal container and observe signs of swelling or heating for at least 30 minutes.

**Ensure that the metal container doesn't short the leads of the battery, which may cause a fire!**


 **Caution:** Always be present when charging batteries and do not leave batteries connected to the chargers or the QCar overnight.


 **Caution:** Charge and store LiPo batteries in a location where a battery fire or explosion (including smoke hazard) will not endanger life or property. Do not charge LiPo batteries near flammable materials, liquids or objects.


 **Caution:** Keep LiPo batteries away from children and animals.

 **Caution:** Never charge a LiPo battery that has been punctured or damaged in a crash. After a crash, inspect the battery pack for signs of damage. Protect your LiPo batteries from accidental damage during storage and transportation. Do not put battery packs in pockets or bags where they can short circuit or can come into contact with sharp or metallic objects.


**Note:** If you require additional batteries, please contact Quanser. If you are using batteries not supplied by Quanser, ensure that the connection and polarity match.

 **Caution:** A LiPo battery fire is a chemical fire. Have a suitable fire extinguisher (class D/for electrical fires) near the charging area. Do not try to extinguish electrical battery fires with water.

 **Caution:** Protect your LiPo batteries from accidental damage during storage and transportation. Do not put battery packs in pockets or bags where they can short circuit or can come into contact with sharp or metallic objects.


**Caution:** If your LiPo battery is subjected to a shock (such as a crash) you should place it in a metal container and observe signs of swelling or heating for at least 30 minutes.

**Ensure that the metal container doesn't short the leads of the battery, which may cause a fire!**


**Caution:** Do NOT attempt to disassemble, modify or repair the LiPo battery.

**Note:** Consider how you would deal with a LiPo battery fire/explosion as part of your normal fire safety and evacuation planning.

**Note:** When discarding a LiPo battery, discard it in accordance with your country's relevant recycling and disposal laws.

**Note:** Monitor charging LiPo batteries for signs of overheating

The battery's performance has been summarized in Table 9 below.

Condition	Battery Life	Distance Driven
No motor, no model running (minimum power draw)	3 hr 35 min	n/a
No motor, with LIDAR/LEDs/CSIs/D435 all streaming	2 hr 11 min	n/a
Motor running, everything else off	1 hr	5 km
Motor running, with LIDAR/LEDs/CSIs/D435 all streaming	35 min	3 km

Table 9. Battery performance depending on driving conditions/modes

### viii. IMU

The platform includes a 9-axis IMU. The specifications are summarized in Table 10 below and all data is provided in the body frame shown in Figure 7.

Sensor	Description
Accelerometer	16-bit with configuration range $\pm 2g$ to $\pm 16g$
Gyroscope	Configurable range from $\pm 125^\circ/s$ to $\pm 2000^\circ/s$
Magnetometer	Resolution of $0.3 \mu T/LSB$

Table 10. IMU specifications on the QCar

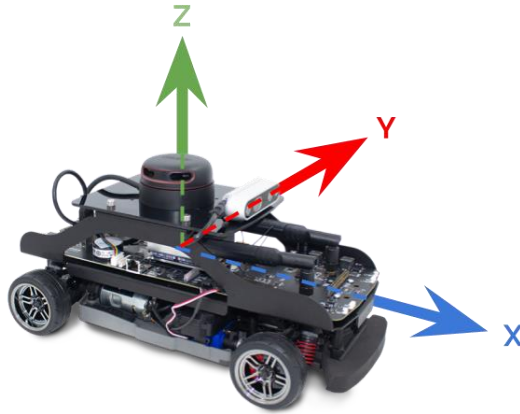


Figure 7. IMU reference frame

## ix. Dimensions

The QCar is based on a 1/10th scale platform (i.e., Traxxas 4-Tec 2.0). Its dimensions have been summarized in 11. The wheelbase and track are shown in Figure 8.

Item	Value
Length	0.425 m
Width	0.192 m
Height	0.182 m
Wheelbase (Fig. 8 #1)	0.256 m
Front and rear Track (Fig. 8 #2, #3)	0.170 m
Maximum steering angle	$\pm 30^\circ$ (0.5236 radians)
Tire diameter	0.066 m

Table 11. QCar dimensions



Figure 8. QCar wheelbase and track

## x. PCB and integrated Data Acquisition (DAQ)

The QCar PCB is equipped with a wide array of components to support expanded I/O capabilities. These components are summarized in Table 12 and displayed in Figure 9. These I/O include:

1. 8 PWM output channels: One PWM output channel to command the drive motor plus up to seven additional ESCs or servos. Standard PWM, RC, OneShot, Multishot and DShot are all supported. \*
2. Motor neutral control input and steering control
3. 4 unipolar user analog input channels, 12-bit, +3.3V\*
4. 1 dedicated encoder connector for motor encoder plus up to four additional encoders. Hardware encoder velocities (digital tachometer) are supported.
5. 40 reconfigurable digital I/O\*
6. 3 user buttons\*
7. 8 LEDs (headlamps, brake lights, indicators) and 4 user LEDs, all 12 with intensity control
8. 9-axis IMU and temperature sensor
9. 3 general purpose 3.3V high-speed serial ports (up to 12.5 Mbaud) \*
10. 1 high-speed 3.3V SPI port (up to 25 MHz) \*
11. 1 high-speed 1.8V SPI port (up to 25 MHz) \*
12. 4 I2C ports (up to 1 MHz) \*
13. 2 CAN bus interfaces (supporting CAN FD)

\* See figure 10 for pin diagram

ID	Description	ID	Description
1	Headlamps	15	J23 (steering servo motor) [3 pin] *
2	Front left/right indicators	16	J24 (LIDAR) [7 pin] *
3	Brake Lamps	17	2x Front microphones
4	Reverse indicators	18	2x Rear microphones
5	Rear left/right indicators	19	Speaker
6	J10 (I2C) [16 pin] *	20	2x HDMI connectors
7	J11 (GPIO, ENCs, PWMs, ADCs) [40 pin] *	21	10/100/1000 Base-T Ethernet Jack
8	J12 (user LEDs) [5 pin] *	22	Micro USB OTG connector
9	J15 (CPU GPIO) [26 pin] *	23	4x USB 3.0 connectors
10	J16 (motor encoder) [5 pin] *	24	2-line LCD
11	J17 (LIDAR) [5 pin] *	25	NVIDIA Jetson TX2
12	J19 (CAN) [12 pin] *	26	Male XT-60 battery connector
13	J20 (SPI and UART) [20 pin] *	27	Main power push-button
14	J21 (SPI) [5 pin] *	28	User push buttons

Table 12. QCar PCB components (\* See Figure 10 for pin diagram)

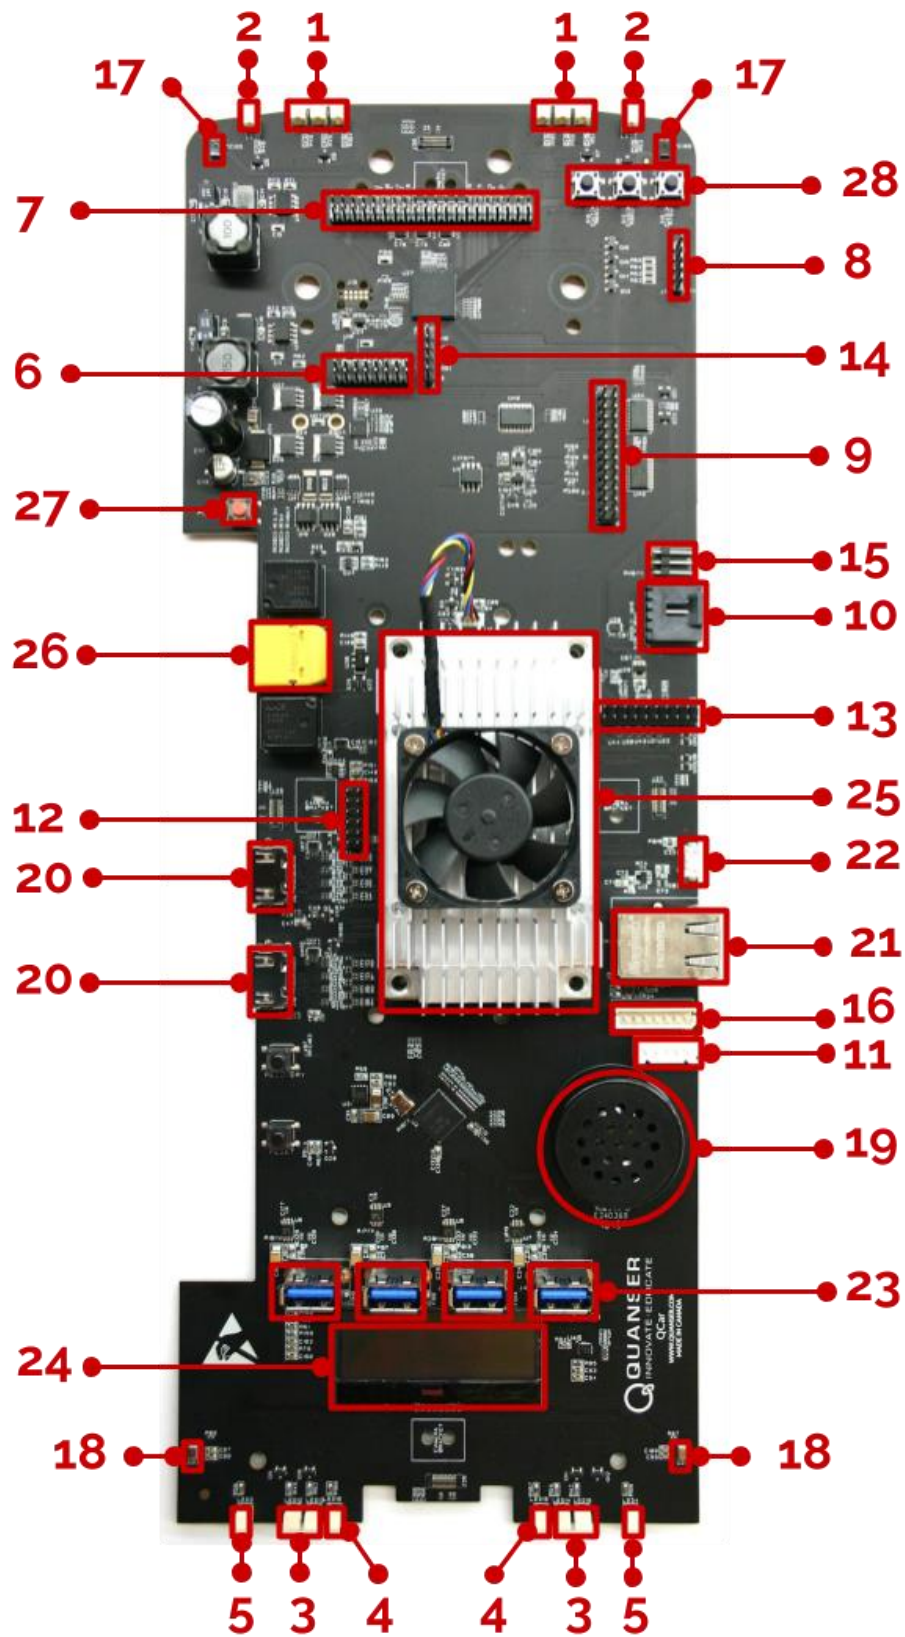


Figure 9. QCar PCB components



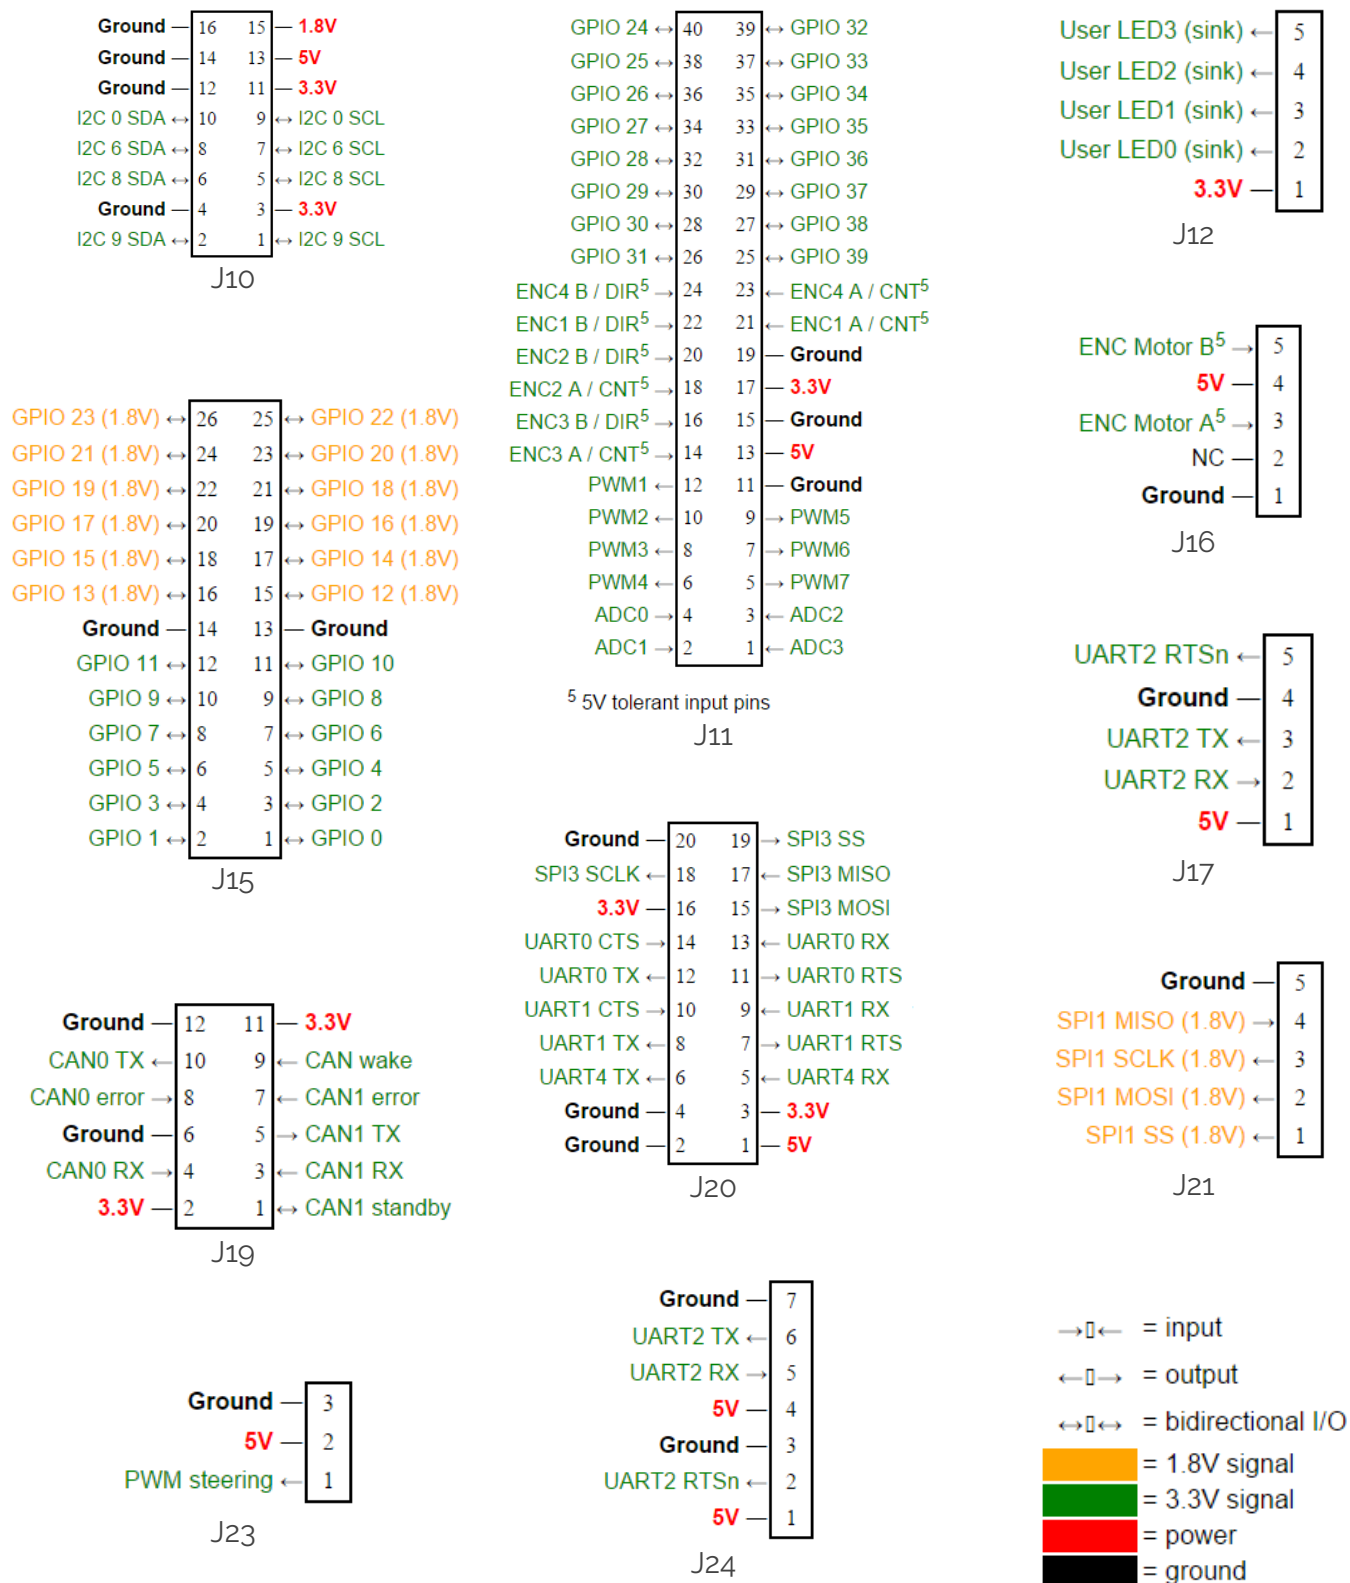


Figure 10. Pin I/O diagram (max current - 5A for 5V pins, 5A for 3.3 V pins, 0.2A for 1.8V pins)



## B. Environmental

The QCar is designed to function under the following environmental conditions:

- Standard rating
- Indoor use only
- Temperature 5°C to 40°C
- Altitude up to 2000 m
- Maximum relative humidity of 80% up to 31°C decreasing linearly to 50% relative humidity at 40°C
- Pollution Degree 2
- Mains supply voltage fluctuations up to 10% of nominal voltage
- Maximum transient overvoltage 2500 V
- Marked degree of protection to IEC 60529: Ordinary Equipment (IPX0)

## C. Electrical Considerations



### **ESD warning**

The QCar internal components are sensitive to electrostatic discharge. Before handling the QCar, ensure that you have been properly grounded.



### **Caution**

Maximum recommended total current draw from the power pins on user headers is

- 5 Amps for 5V
- 5 Amps for 3.3V
- 0.2 Amps for 1.8V



### **Caution**

Do not have conductive material touch either the top or bottom surface of the PCB as it can short the LiPo battery, cause sparks and damage the electronics.



### **Caution**

Do not remove the Jetson TX2 fan connector or obstruct the fan as it may cause overheating and damage the TX2.



### **Caution**

The QCar is not waterproof.

© Quanser Inc. All rights reserved.



Solutions for teaching and research. Made in Canada.