


## How to Connect?

First fix the two stands with two screws (standing mode) or fix four standoffs with four screws (laying mode).

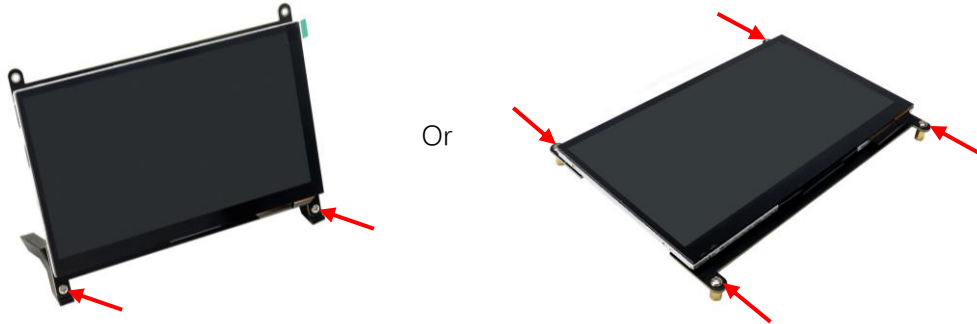

**Raspberry Pi 400 / 4B / 3B+ / 3B / 3A+ / 2B / 1B+ / 1A+ run Raspberry Pi OS / Ubuntu**

(Note: Raspberry Pi Zero W / Zero is also compatible but requires a USB adapter for USB cable.)

You need to configure the resolution manually. Download and view the guide: <http://freenove.com/fnk0055>



**NVIDIA Jetson Nano Developer Kit / 2GB Developer Kit run Jetson Linux**

The resolution is usually adjusted automatically; otherwise please change the display settings.



**Computers with an HDMI output port run Windows 11 / 10 / 8 / 7**

The resolution is usually adjusted automatically; otherwise please change the display settings.



**Having problems?** Download the latest tutorial and troubleshooting: <http://freenove.com/fnk0055>

Need further help? Contact our technical support by email: [support@freenove.com](mailto:support@freenove.com)