




Battery Management System For 8 cell LiFePO4 Batteries. 100A continuous rated current. Wiring Diagram: (Typical)

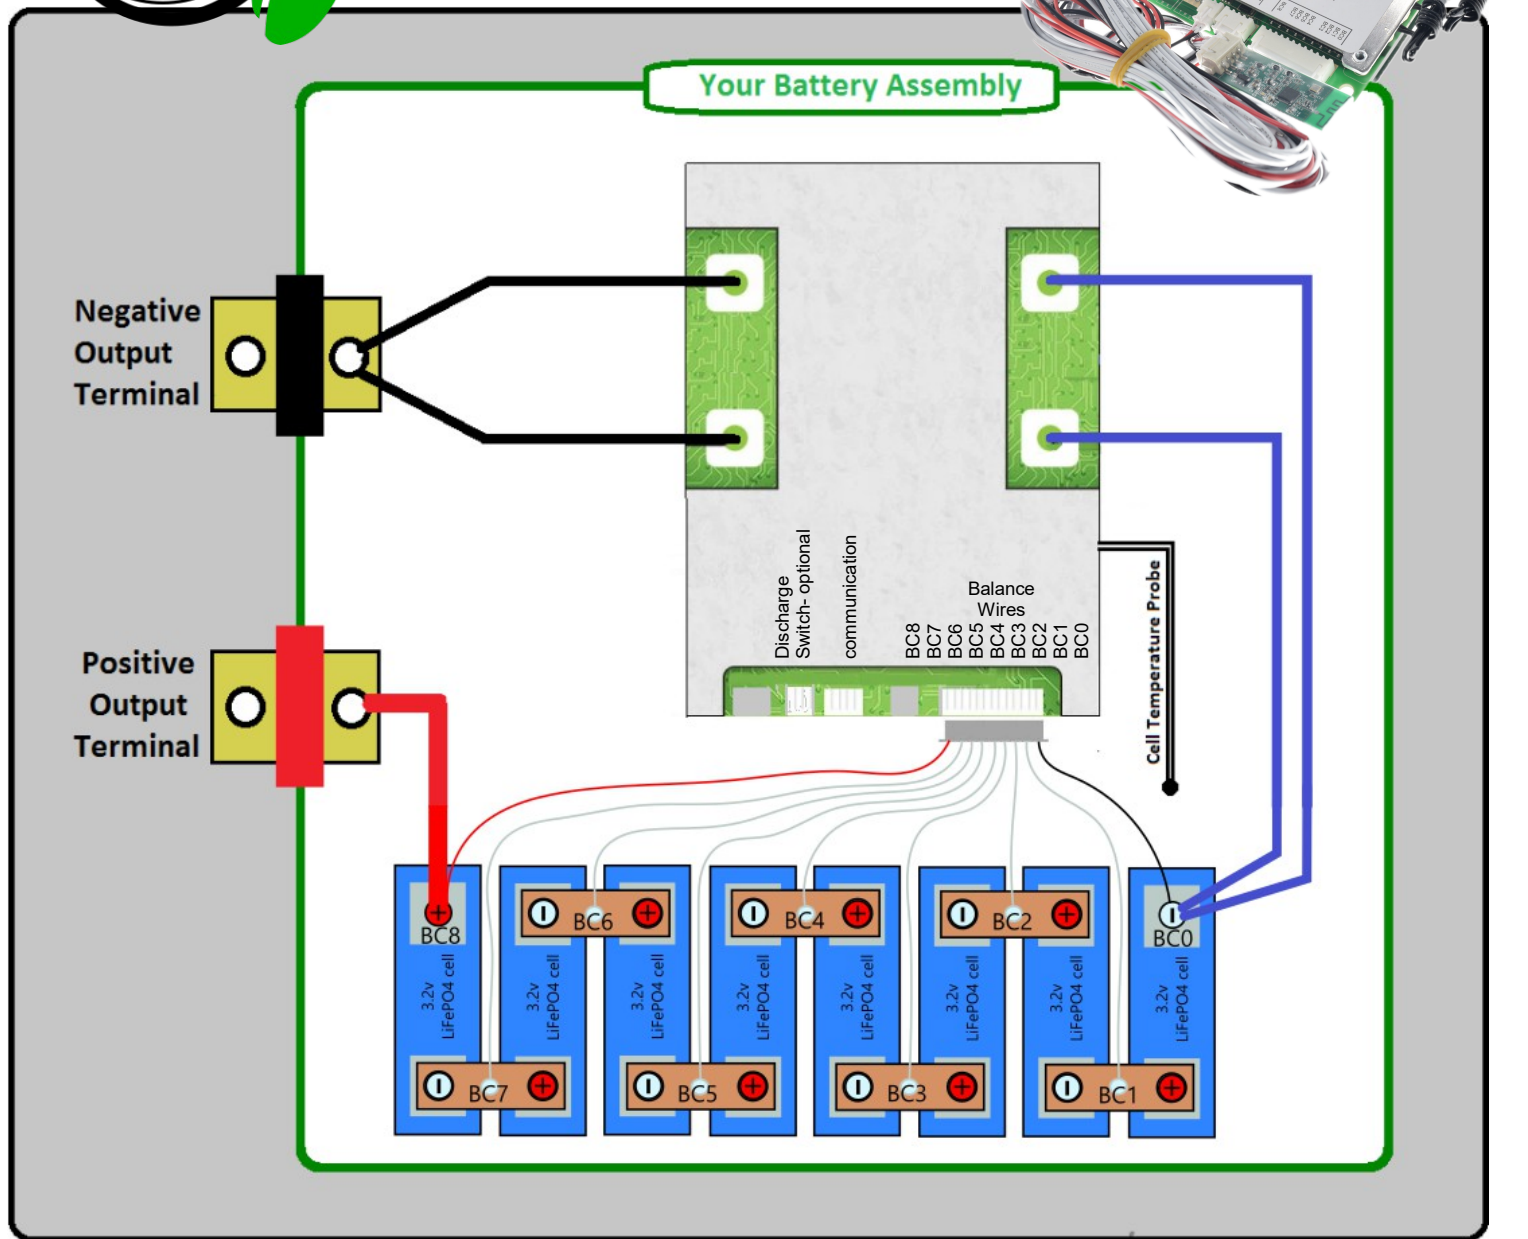

The BMS comes programmed for LiFePO4 cells.
All parameters can be adjusted.

Changing the parameters is potentially dangerous, proceed with caution!

To view or change Parameters, there are 2 ways to connect to the BMS.

1. Bluetooth: The free Overkill Solar BMS app is on the Apple App Store and the Google Play Store.
2. USB module to PC/desktop application. This application is free from Overkill Solar.

Download the complete user manual and app:
OverkillSolar.com/support-downloads/

Email: Support@OverkillSolar.com

Downloads and Support link:



Unlimited Returns:
If you have any problems with this BMS, we will take it back.

Email:
Support@OverkillSolar.com
for tech support or advice.

If you need help I will help.

If it isn't working right I will
replace it.

**If it's totally fried I will
refund your money.**

*This includes anything you
did to break it.*

Enjoy,
Steve.

Email:
Support@OverkillSolar.com

**Please write a
product review on
OverkillSolar.com**

Include a photo of
your finished battery,
I would love to see it!

Protection Parameters Explained:

These are the adjustable battery protection settings, as shown in this iPhone screenshot. Notes are in RED



Android and desktop users will find a different layout, but the functions are the same.



First, press "BMS read" to download current settings from the BMS

Protections

	Trigger Value	Release Value	Delay [s]	
Cell over voltage	3650 mV	3500 mV	2	Disconnects charging current if any cell voltage goes over the Trigger value. Reconnects when all cells drop below the Release value.
Cell under voltage	2500 mV	3000 mV	2	Cuts off discharging current if any cell voltage goes under the Trigger value. Reconnects when all cells rise above the Release value.
Batt over voltage	29000 mV	28000 mV	2	Cuts off charging current if entire pack goes over the Trigger value. Reconnects when pack drops below the Release value.
Batt under volt.	20000 mV	24000 mV	2	Cuts off discharging current if entire pack falls under the Trigger value. Reconnects when pack rises above the Release value.
Charge over curr.	110000 mA	32 s	10	Cuts off charging current if the current exceeds the trigger value, for [delay] seconds. Reconnects after [release value] seconds.
Discharge over curr.	110000 mA	32 s	10	Cuts off discharging current if the current exceeds the trigger value, for [delay] seconds. Reconnects after [release value] seconds.
Charge over temp	65 °C	55 °C	2	Cuts off charging current if the probe temperature exceeds the trigger value. Reconnects after temp drops below the release value.
Charge under temp	1 °C	5 °C	2	Cuts off charging current if the probe temp drops below the trigger value. Reconnects after probe temp rises above the release value.
Discharge over temp	75 °C	70 °C	2	Cuts off discharging current if the probe temperature exceeds the trigger value. Reconnects after temp drops below the release value.
Discharge under temp	-10 °C	0 °C	2	Cuts off discharging current if the probe temp drops below the trigger value. Reconnects after probe temp rises above the release value.

