





DEBUG / PROGRAMMING PORT



USB POWER ONLY

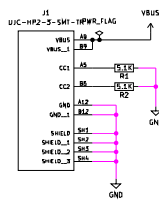

CPU:

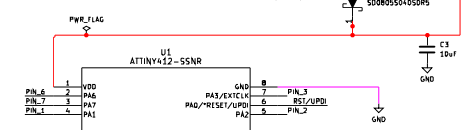


Mechanical / Assembly


- TAIL1 Fiducial
- EAR2 Fiducial
- EAR1 Fiducial

Fiducial marks help a pick and place machine to locate the board during automated assembly

BATTERY POWER




3V TO 5V BOOST POWER SUPPLY

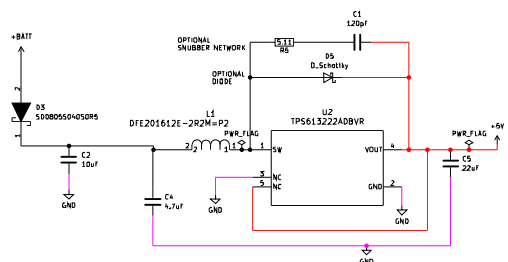

INPUT / OUTPUT PERIPHERALS


PIN 1: Meows

Current Draw: 100mA MAX

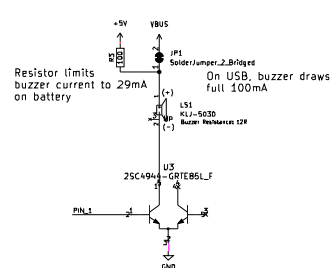


PIN 6: Eyes

Current Draw: 100mA (MAX)



PIN 7: Headpats

Current Draw: n/a

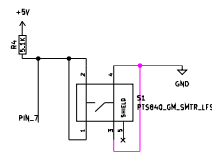

NOTE: Switch Pressed is Logical 0