


Band Data Cable Pin-Out for Flex Data Decoder Utility

Yaesu Quadra Amplifier

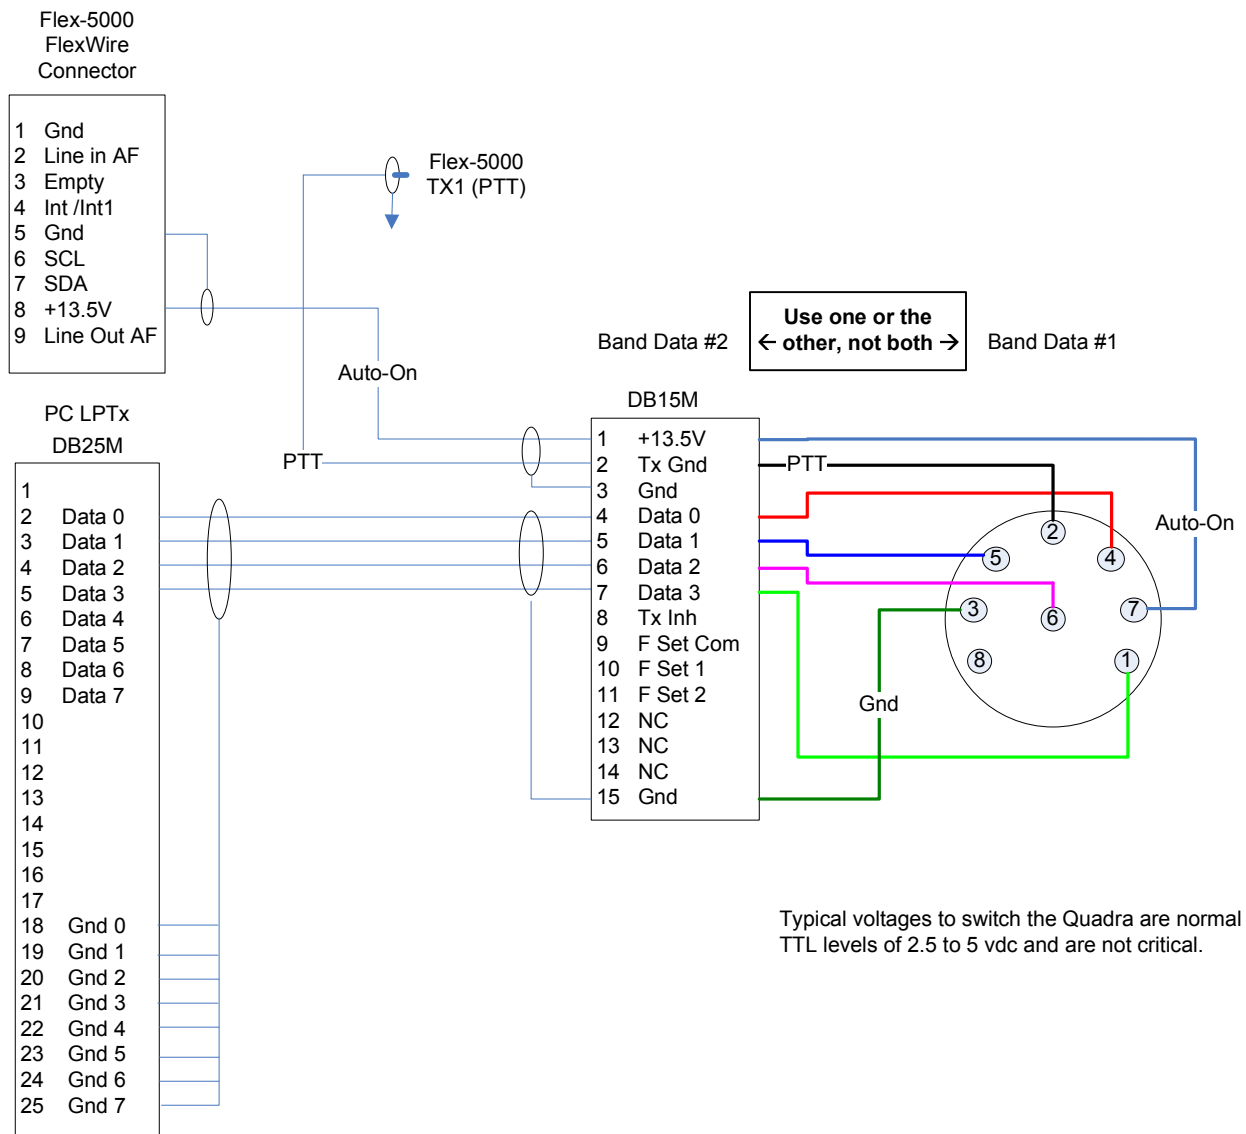

Please note that the connections for the Band Data 1 are **un-proven** but are thought to be correct. It is known that the Band Data 1 connection information from the Yaesu Quadra manual is **incorrect** in at least some instances. So proceed with caution until the Band Data 1 connection information is verified.


The Band Data 2 connection information has been proven to work.

Steve Nance – K5FR
Nov., 2007

Band Data Cable Pin-Out for Flex Data Decoder Utility

RS-232 Devices

SteppIR Controller
(Passive Listener)

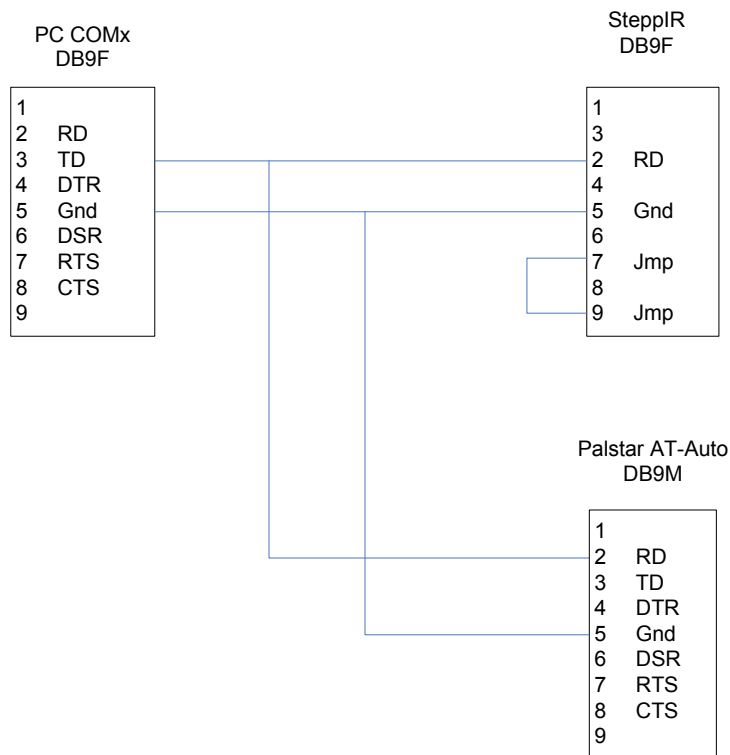

Notes:

RS-232 passive listener devices must have the TXD pin disconnected (pin 3). If this isn't done and your device tries to talk back to the COM port data collisions are bound to happen. Your owners manual may have information on connections for passive listening.

I use the parallel setup above RS-232 configuration above in my shack and it works fine.

Steve Nance – K5FR
Nov., 2007